




InSync® CL Lock Usage Instructions

InSync® CL locks (configured for common areas) have no thumbturn. Common area locks are typically kept locked to prevent access without a key.


1. Fully insert your RFID key into the lock port.
2. Wait until the GREEN light flashes once.
3. Rotate the lever downward to retract the latch bolt and the deadbolt to open the door.

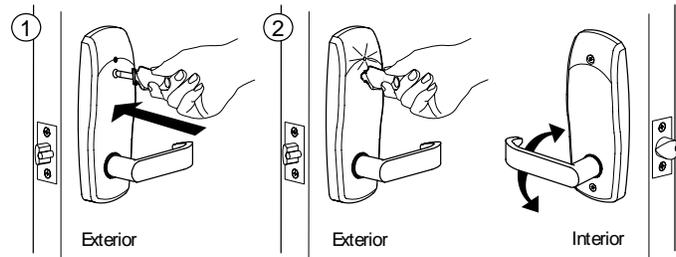

Frequently Asked Questions

1. What do I need to operate the InSync® CL Common Area lock?

Your property's management issues RFID keys that operate your unit lock and individual InSync® CL locks (if management has granted access).

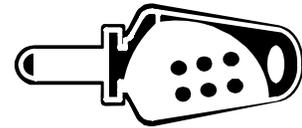

2. How does the InSync CL lock work?

The RFID key communicates unique and encrypted access codes to the lock via radio frequency (RF) signals.

3. What does it mean when the RED light flashes and the InSync CL lock will not open?

Access has been denied because:

- Management does not permit this key to open this lock
- Entry was attempted during non-opening hours
- The key is expired or has been electronically disabled by management

4. What does it mean if the GREEN light flashes once, and this is followed by six RED flashes?

This sequence signals that the battery is low. Please report this to management to avoid a potential lockout.

Note: Please report any other light signals to management to avoid a potential lockout.

All information contained herein, including but not limited to product pricing and other intellectual property, is confidential and intended for the sole use of the addressee(s) so named. Any misuse of this confidential information contained herein may result in legal action by Computerized Security Systems dba SAFLOK and its parent company.