8907 AF PKT 180°

Pocket door mount (closer on wall)

Installation instructions

08280141 - 09-2019





Table of contents

1	Technical specifications	3
1.1	Overview	3
1.2	Tools recommended	3
1.3	Handing the door	3
2	Instructions - pocket mount	4
2.1	Installing surface closer	4
2.2	Secure arm to closer	4
2.3	Securing main arm shoe to door	4
3	Adjustments	5
3.1	Adjust closing speeds: sweep, latch, backcheck	5
4	Install covers	5

1 Technical specifications

1.1 Overview



Caution: sex nuts are required for attachment of components to unreinforced doors and to wood or plastic faced composite type fire doors, unless an alternative method is identified in the individual door manufacturer's listings.



Maximum door opening degree is 180°.



Know the swing of the door which is being installed prior to installation.



Verify closer spring size prior to installation.



Make sure door efficiently operates prior to installing closer.


1.2 Tools recommended

Table 1

Drill bits:	#3 Phillips screwdriver
Metal: 7/32" drill bit; 1/4-20 tap	3/16" flat head screwdriver
Wood: 3/8" and 5/32" bit	5mm hex key
1/2" box wrench	

1.3 Handing the door

Fig.1

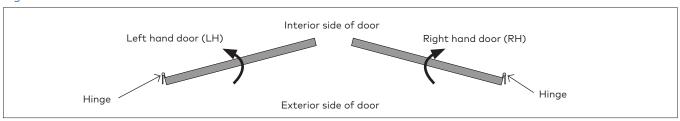


8900 Surface Applied Closers 08280141 09-2019

2 Instructions - pocket mount


2.1 Installing surface closer

Fig.2

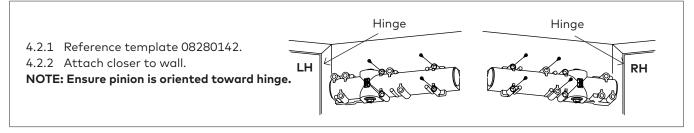


2.2 Secure arm to closer

Fig.3

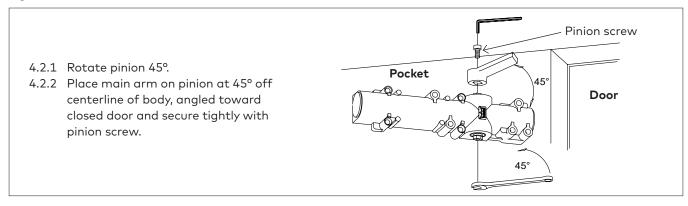

2.3 Securing main arm shoe to door



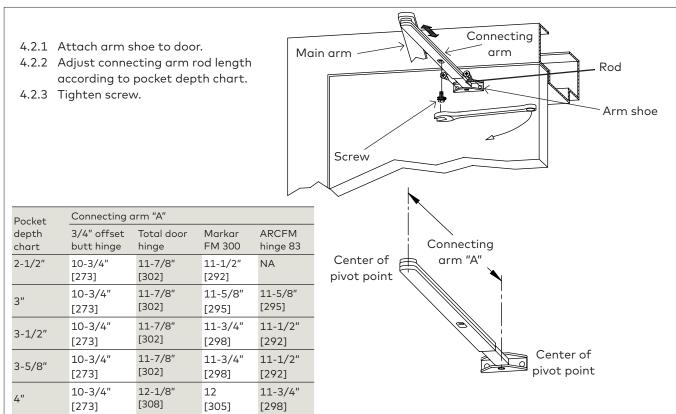

Adjustments



Confirm closer spring size prior to making any closing speed adjustments.




Do not back valve heads out beyond closer casting.

Maximum opening angle is 180°.

Do not close valves completely.

Adjust closing speeds: sweep, latch, backcheck

Fig.5

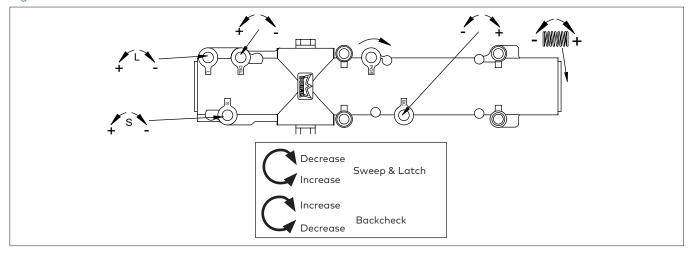

- Adjust **closing sweep speed**: 90° to start of latch speed. 5.1.1
- Increase sweep speed: Turn valve counter-clockwise
- Decrease sweep speed: Turn valve clockwise.
- Adjust closing latch speed: 15° to close. 5.1.2
- Increase latch speed: Turn valve counter-clockwise
- Adjust opening backcheck: beginning at 120°.
- Increase resistance: Turn valve clockwise
- Decrease resistance: Turn valve counter-clockwise.

Install covers

Fig.6

