18.7 dormakaba handheld; firmware update

18.7.1 Firmware update procedure

CAUTION

For all firmware changes, set program switch to CLOSE and allow door to close completely before any updates are made!

Fig. 18.7.1 Handheld power on sequence



- 1. Connect Handheld to COM 1 port (Para. 18.1) and power on.
- Handheld will boot up and display main menu.

Fig. 18.7.2 Select communication menu





Fig. 18.7.3 Enter Handheld user code



3. Enter Handheld user code and press ENTER. Standard = 123456





2. With Communication highlighted, press ENTER.

Fig. 18.7.4 Select UpDoLd

- 1 ENTER button
- 2 F2 button
- 3 Up/down arrows



4. Press F2 to select UpDoLd.





Fig. 18.7.5 Select Firmware upload



5. Use Up and Down arrows to select Firmware upload and press ENTER.



5.5 With Direct to control unit highlighted, press Enter



6. Use Up and Down arrows to select firmware version and press ENTER.



8. Firmware uploading to controller. Wait time of 3 to 5 minutes to upload.



7. Press any key to start firmware transmission

Fig. 18.6.9 Complete firmware update



9. Press any key to complete firmware update.