8907 AF PKT 90°

Flat arm 90° pocket door mount (closer on wall)

Installation instructions

08280151 - 09-2019





Table of contents

L	Technical specifications	3			
1.1	Overview	3			
1.2	Pocket depth chart				
1.3	Tools recommended	3			
1.4	Handing the door	3			
2	Instructions - 90° pocket door mount	4			
2.1	Installing surface closer	4			
2.2	Secure arm to closer	4			
2.3	Securing arm shoe to door				
3	Adjustments	5			
3.1	Adjust closing speeds: sweep, latch, backcheck	5			
z.	Install course				
	Install covers	- 5			

1 Technical specifications

1.1 Overview



Caution: sex nuts are required for attachment of components to unreinforced doors and to wood or plastic faced composite type fire doors, unless an alternative method is identified in the individual door manufacturer's listings.



Maximum door opening degree is 90°.



Know the swing of the door which is being installed prior to installation.



Verify closer spring size prior to installation.



Make sure door efficiently operates prior to installing closer.

1.2 Pocket depth chart

Table 1

Pocket	Connecting arm "A"				
depth	90° pivot	3/4" offset butt hinge	total door hinge	MARKAR FM-300	ARCFM 83 hinge
2-1/2"	12	11-3/8"	12-1/6"	10-7/8"	11-1/4"
	[305]	[289]	[306]	[276]	[286]
3"	12	11-3/8"	12-1/8"	11	11-3/8"
	[305]	[289]	[308]	[279]	[289]
3-1/2"	12	11-3/8"	12-1/4"	11-1/8"	11-3/8"
	[305]	[289]	[311]	[283]	[289]
3-5/8"	12	11-3/8"	12-1/4"	11-1/8"	11-3/8"
	[305]	[289]	[311]	[283]	[289]
4"	12	11-3/8"	12-1/2"	11-3/8"	11-1/2"
	[305]	[289]	[318]	[289]	[292]


1.3 Tools recommended

Table 2

Drill bits:	#3 Phillips screwdriver
Metal: 7/32" drill bit; 1/4-20 tap	3/16" flat head screwdriver
Wood: 3/8" and 5/32" bit	5mm hex key
1/2" box wrench	

1.4 Handing the door

Fig.1

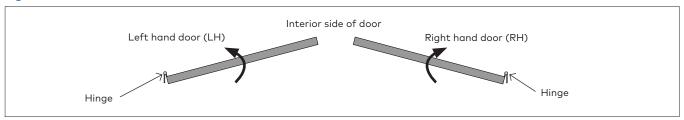


8900 Surface Applied Closers 08280151 09-2019

2 Instructions - 90° pocket door mount


2.1 Installing surface closer

Fig.2

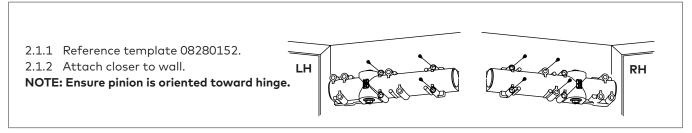


2.2 Secure arm to closer

Fig.3

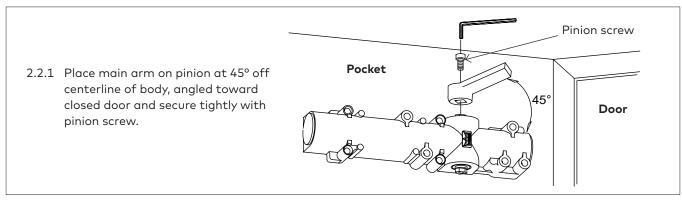

2.3 Securing arm shoe to door

Fig.4

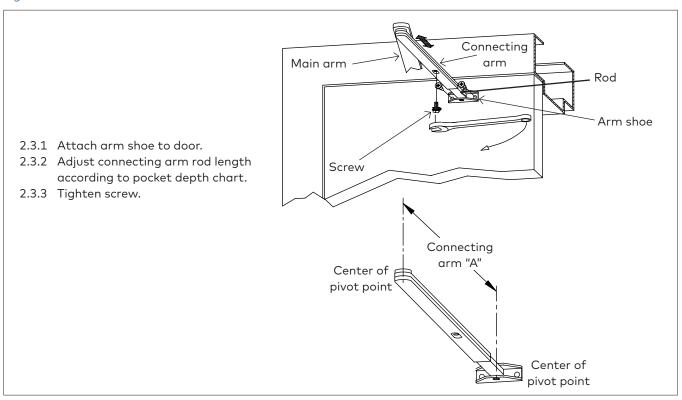

Adjustments



Confirm closer spring size prior to making any closing speed adjustments.




Do not back valve heads out beyond closer casting.

Maximum opening angle is 90°.

Do not close valves completely.

Adjust closing speeds: sweep, latch, backcheck

Fig.5

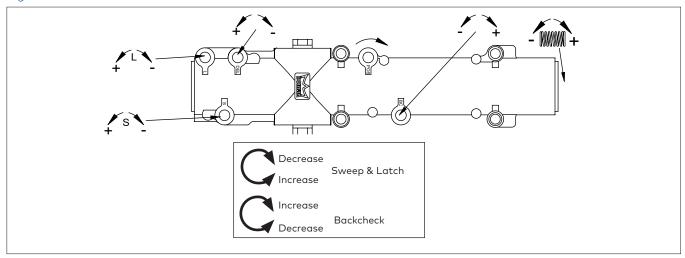

- 3.1.1 Adjust **closing sweep speed**: 90° to start of latch speed.
- Increase sweep speed: Turn valve counter-clockwise
- Decrease sweep speed: Turn valve clockwise.
- Adjust closing latch speed: 15° to close.
- Increase latch speed: Turn valve counter-clockwise
- Adjust opening backcheck: beginning at 80°.
 - Increase resistance: Turn valve clockwise
- Decrease resistance: Turn valve counter-clockwise.

Install covers

Fig.6

Snap valve adjustment wrench inside 4.1.1 Place tab in cover slot, opposite main cover. 4.1.2 Place cover over closer and fasten securely with screws provided. Tab