

1 **Important Instructions**



- The locking mechanism works smoothly. No force should be applied. This should be particularly avoided when inserting the key in the lock.
- The locking mechanism can only be changed over to another pair of keys if one valid key is still available. The lock should be converted to a new pair of keys immediately if a key is lost.
- Opening the lock with a damaged key can result in damage to the lock.
- The function of the lock could not be secured, if you use damaged or heavily worn out keys. We recommend to check the condition of the keys before using them and to not use or, if necessary, to change the keys, if they are damaged or heavily worn out.
- The lock must not be lubricated.
- The lock may only be installed by specialist personnel and only opened by the manufacturers. Unauthorised opening will lead to invalidation of any guarantee claims.
- Only original Kaba Mauer keys are to be used should additional keys be required, as otherwise no guarantee claims may be raised.

2 **Opening**

- Insert the key in the keyhole (long bit left). Then turn the key clockwise until stop position is reached (approx. 180°).
- The lock is open. The key can be removed in this position.

3 **Locking**

- Insert key in the keyhole (long bit right). Then turn the key anti-clockwise until stop position is reached (approx. 180°).
- The lock is locked.

**NB:** If the lock is locked with a different key, the lock is inevitable changed over to the new locking. For further information concerning the changing over see 4.

4 **Changing over**

- **NB:** The lock should only be changed over with the safe opened.
- Open the lock (see 2).
- Remove the key.
- **NB:** Use now a key in a new locking. Insert the new key in the keyhole (long bit right).
- Turn the new key anti-clockwise until stop position is reached.
- The lock is locked and set to a new locking.