

Quick Start Guide

ED50LE/ED100LE/ED900

NOTICE


This guide is intended to be used as a reference to assist in programming the dormakaba operator in accordance with ANSI A156.19 Standard for Low Energy Power Operated Doors.



WARNING

Verify **power fail closing speed** and **braking circuit plug position** before programming the door and completing a learn cycle.


- The operator must be completely installed per the applicable dormakaba USA Inc. ED operator Installation Instruction Manual.
- Door must be closed.
- Mode switch in the CLOSE position.

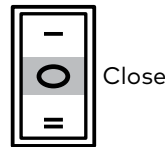

Power fail closing speed.

- The door must be adjusted to close in no less than three seconds but a minimum of five seconds is recommended.

Braking circuit plug position

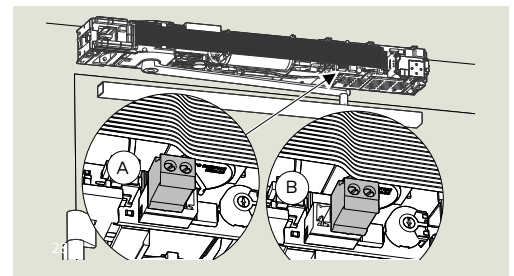

A – Pull arm B – Press arm

When the braking circuit plug is in the correct position the door will easily Press open and close slowly. If the door is very hard to Press open change the jumper position.




WARNING





If braking circuit plug is inserted incorrectly, brake circuit will not work. The door can close at high speed!

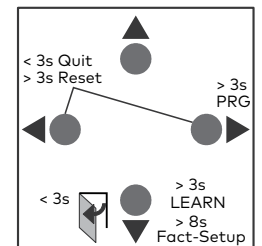Step	Directions	Expected results
1	Power switch to ON position. <ul style="list-style-type: none"> • A series of numbers and letters will show up on the display. • This will stop after two horizontal dashes side by side move up and down several times. 	
2	While the dashes are moving up and down, press the bottom button on the display. <ul style="list-style-type: none"> • This will identify which way the unit is mounted. • Letters and numbers will now display right side up. 	
	The display will show a "P" on the right with a rotating segment on the left.	

3	Press and hold the right button until Parameter ID is displayed (approximately 3 seconds), then release the button.	Parameter ID will appear (ex. AS).
4	Press the right button.	Displays the current setting.
5	Press the right button again.	Display will flash the current setting.
6	Press the up and down buttons to change the setting.	
7	Press the right button to accept the changes.	Displays the new parameter setting.
8	Press the left button to return to the programming menu.	Displays the current Parameter ID (Step 3).
9	Press the down button to go to the next parameter setting (or)	Go back to Step 4.
	Press the left button to exit programming menu.	Display will show a rotating segment and a "0".







All four required parameter settings (AS, rd, Tb, dL) must be made to flash even if the value does not need to be changed before the door will move to the learn cycle.

Step	Configuration Parameter	Range Factory Settings	* Factory setting.
10	Installation type 	0-2	<p>0* Pull arm with track, wall mounting on pull (hinge side).</p> <p>1 Push arm, wall mounting on approach (non-hinge side).</p> <p>2 Push arm with track, wall mounting on approach (non-hinge side).</p>
11	Reveal depth 	-3 to 30	<p>0* Reveal depth rd is set in increments of 10 mm (3/8"). Example: 4 = 40 mm (1 9/16")</p>
12	Door width 	7 to 11	<p>The astragal is included in the door width.</p> <p>10* Door width Tb is set in increments of 100 mm (4"). Example: 9 = 900 mm (36").</p>
11	Door type 	0 to 4	<p>0* Single door</p>


Reveal depth rd

rd	Inches
-3	- 1 3/16
-2	- 3/4
-1	- 3/8
0	0
1	3/8
2	3/4
3	1 3/16
4	1 9/16
5	1 15/16
6	2 3/8
7	2 3/4
8	3 1/8
9	3 9/16
10	3 15/16
11	4 7/16
12	4 3/4
13	5 1/8
14	5 1/2
15	5 7/8
16	6 5/16
17	6 11/16
18	7 1/16
19	7 1/2
20	7 7/8
21	8 1/4
22	8 11/16
23	9 1/16
24	9 7/16
25	9 13/16
26	10 1/4
27	10 5/8
28	11
29	11 7/16
30	11 13/16

Step	Learn Cycle.	
	A "0" displayed on the right side and a rotating segment on the left indicates the unit is ready for a learn cycle.	
1	To start the learn cycle, press and hold the bottom button until the display changes (approximately three seconds). <ul style="list-style-type: none"> The door will make several movements and the display will cycle through several letters and numbers. 	
2	When the display stops at "4" push the door open to the desired opening angle between 90 and 110 degrees, then let go of the door.	
3	Press the bottom button to continue the learn cycle.	
	The operator will complete the learn cycle. <ul style="list-style-type: none"> When finished, there will be two horizontal bars side by side on the display. 	
	You can now continue with the programming and customize the door as desired.	

Door width Tb

Tb	Inches
7	28
8	32
9	36
10	40
11	44
12	48

	<p>Spring force too low.</p> <p>If the door closes and an "F" is displayed, this is an indication that the spring force is too low.</p> <ol style="list-style-type: none"> Turn off the power. Increase the spring force. <ul style="list-style-type: none"> The spring should have a minimum of 10 turns and a maximum of 18 turns, depending on door width and weight. Restart the learn cycle (Step 1). 	
--	--	--