

11. The Recodable Cylinder with 3 different keys (for E-760/770/79/RT Series with override only)

IMPORTANT

Read the following instructions before using any of the 3 keys supplied

The E-760/770/79 Series/RT with a recodable cylinder can be operated with three different keys. The keys are numbered 1, 2 & 3, and each key is labeled and supplied in a separate plastic bag. It is very important to use them in order.

 
 
 
* Always read the label instructions on the label before using a key.

⚠ CAUTION

The use of key #2 automatically cancels the function of key #1, and the use of key #3 automatically cancels both keys #1 and #2.

If key #3 is used first, it will immediately make keys #1 and #2 unusable.


Once a key is cancelled, it can't be reactivated unless the cylinder itself is re-pinned.

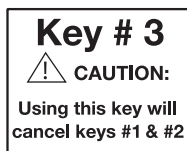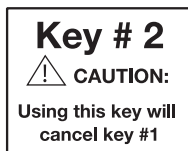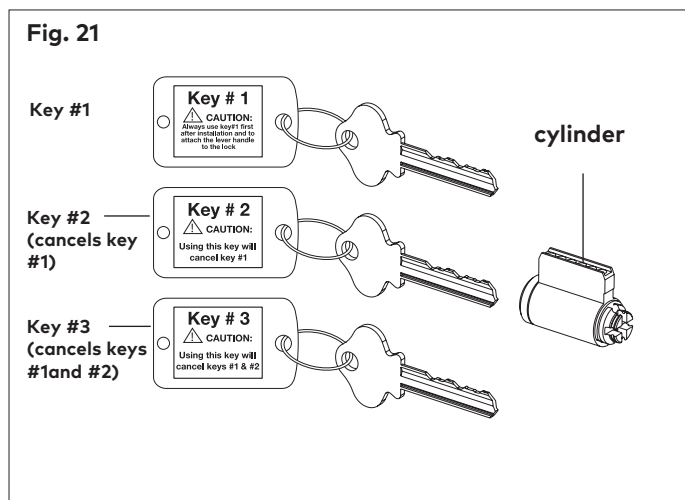


How to change lock combination from key #1 to key #2:

34. Insert key #2 into cylinder.

 35. Turn the key clockwise until it stops (see Fig. 22) for both left-handed and right-handed locks.

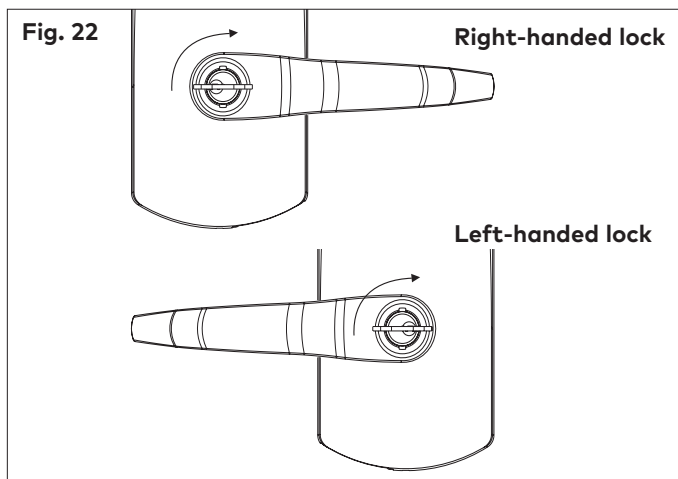

 36. Turn the key back counter-clockwise until it is in the horizontal position.

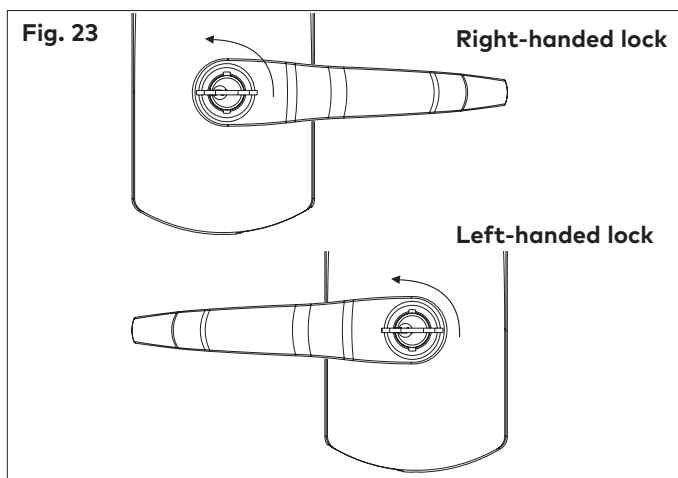

37. Remove the key.

Now the lock should work with key #2, and key #1 has been cancelled.

Test: Try to use key #1 in the lock. It should no longer work.

How to change lock combination from key #2 to key #3

38. Insert key #3 into cylinder.

39. Turn the key clockwise until it stops.

40. Turn the key back counter-clockwise until it is in the horizontal position.

41. Remove the key.

Now the lock should work with key #3, and key #2 has been cancelled.

Test: Try to use key #2 in the lock. It should no longer work.