


DORMA Activator 多玛TM雷达感应器



Mounting Instructions 安装说明

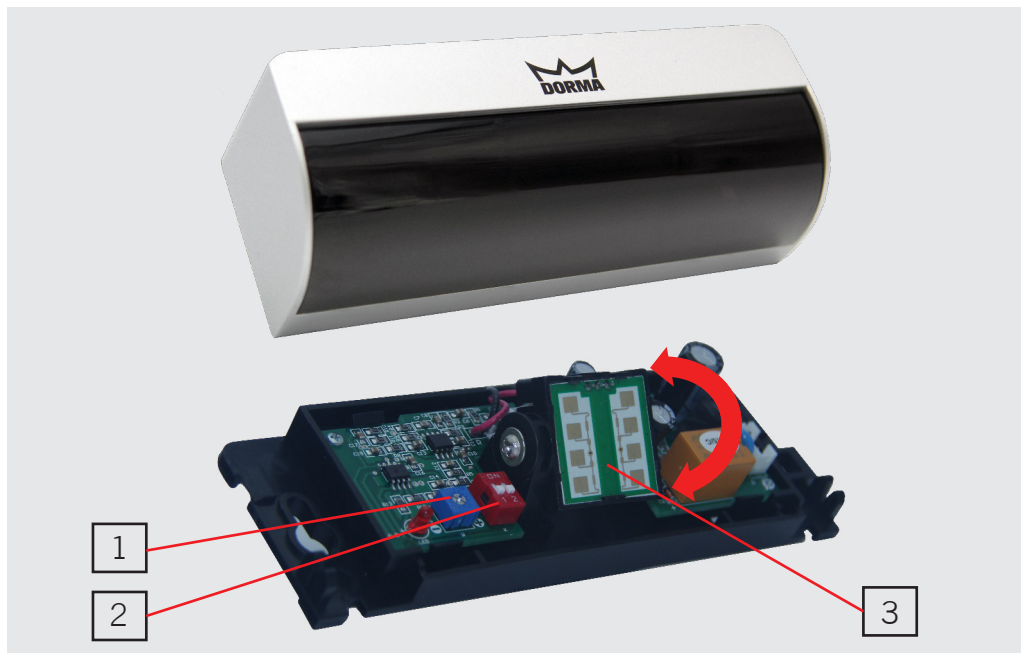

1 Sensitivity 灵敏度





2 DIP Switch 拨码开关

	1 Height 安装高度	2 Immunity 抗干扰度
ON	> 3m	HIGH 高
OFF	3m	LOW 低

3 Detection Range 检测区域

Default angle is 30° 标准角度30°

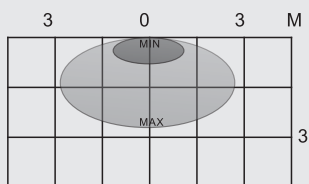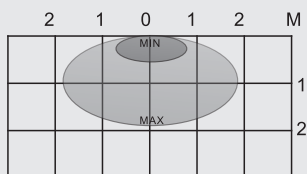



Ensure activator will not move or vibrate on its own

传感器要固定紧，以防振动。



Ensure activator is not blocked by other items

传感器不能直接置于面板或其他材料之后。




Ensure no moving objects in the detection range

检测区域内不能有可移动或晃动的物体。



Ensure no high-frequency light source in the detection range

检测区域内不能有高频光源存在。

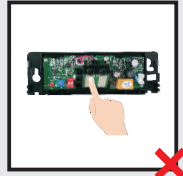

Do not touch the antenna directly

不要直接接触传感器的天线。

Door does not move and LED does not light up. 门不能开启，红色指示灯不亮。	1. Activator has no power. 传感器未接电源。	1. Activator detects the movement of the door. 检查接线和电源。
Door keeps opening and closing. 门不停的开关。	1. Activator detects the movement of the door. 传感器感应到门的运动。 2. Door creates vibration when moving. 门在关闭时产生振动。	1. Raise the antenna angle, or lower the sensitivity. 增大天线安装角度，或降低灵敏度。 2. Ensure activator is secured tightly. 确保传感器正确固定。
Door cannot close and red LED does not light up. 门不能关闭，红色指示灯没有亮。	1. Program selection error. 自动门状态错误。	1. Ensure the operating mode is not "Permanent Open" 确保门不在“常开”状态。
Detection range too small. 检测距离过小。	1. Sensitivity is set too low. 灵敏度设置过低。 2. Height setting is wrong. 调节探测高度设置。	1. Turn the potentiometer clockwise to increase the sensitivity. 顺时针调整灵敏度电位器，增大灵敏度。 2. Switch on DIP Switch 1. 拨码开关1拨到ON。



Installation is to be carried out by trained professionals (e.g. electricians) only!
安装人士均应受过培训，并通过相关技能考核。