


# PARTS LIST 9800/F9800 SERIES SURFACE VERTICAL ROD EXIT DEVICE

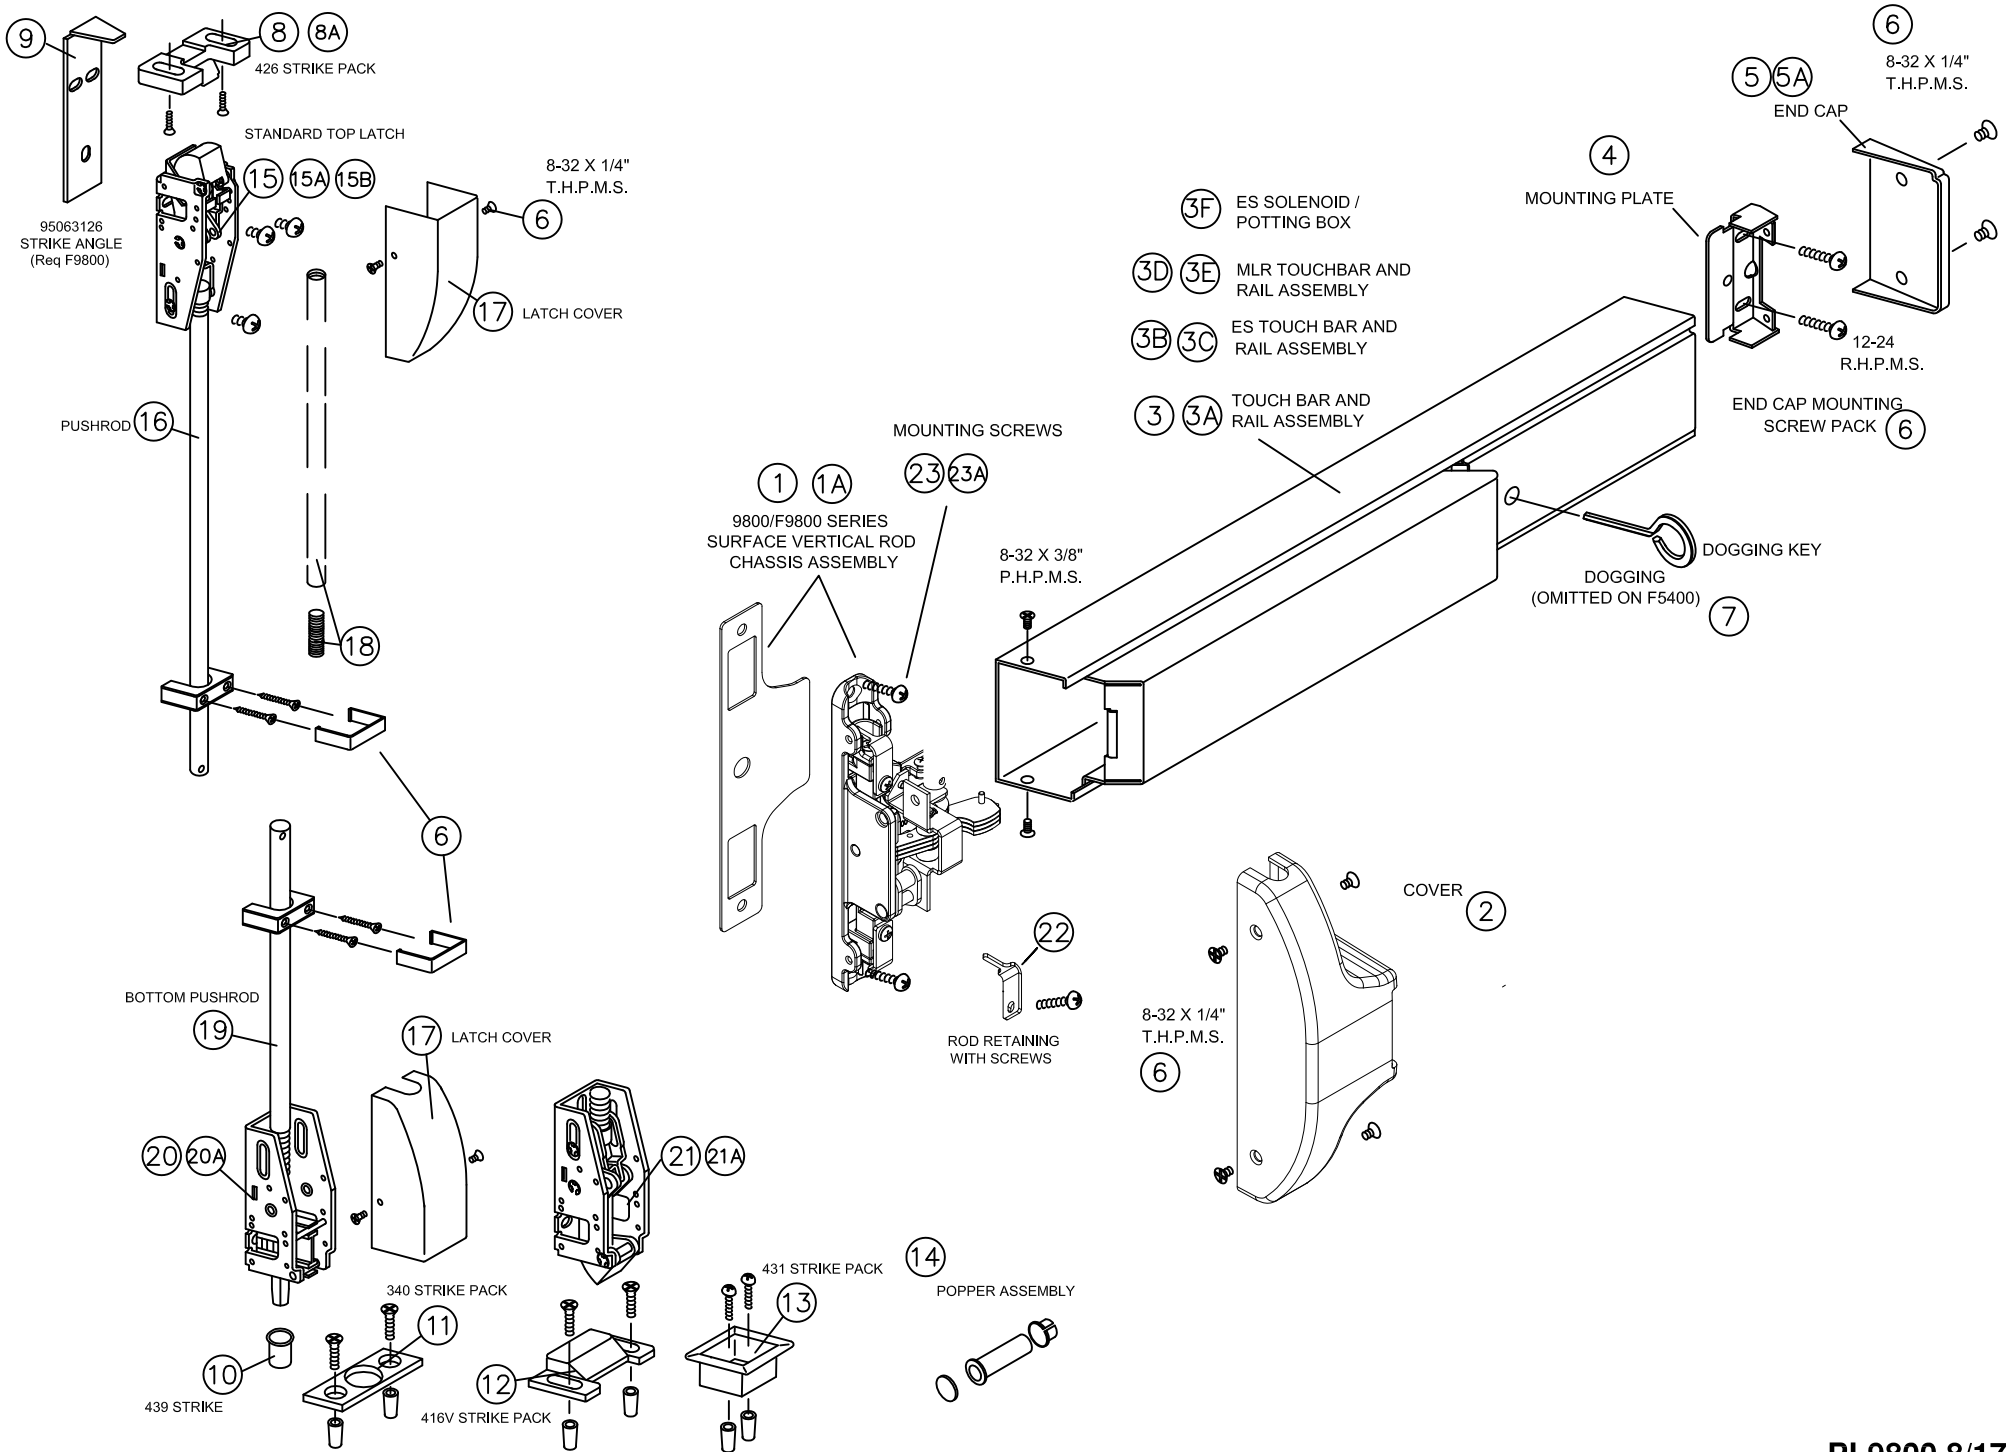

9800/F9800 SERVICE PARTS LIST (Rev 07-15)

Balloon #	Item #	Part #	DESCRIPTION
1	CHASASSY98	95065620	CHASSIS ASSEMBLY 9800 SVR EXIT DEVICE
1	CHASASSY F98	95065619	CHASSIS ASSEMBLY F9800 SVR EXIT DEVICE
22	RODPLATESCRW	95070013	SVR ROD RETAINING PLATE AND SCREWS 9800
2	CHCOV 98 689	95060383	CHASSIS COVER 9800 SVR 689
2	CHCOV 98 695	95071640	CHASSIS COVER 9800 SVR 695
2	CHCOV 98 PNT	95065694	CHASSIS COVER 9800 SVR 691 / 693 / 696
2	CHCOV 98 605	95065695	CHASSIS COVER 9800 SVR 605
2	CHCOV 98 606	95065696	CHASSIS COVER 9800 SVR 606
2	CHCOV 98 611	95065697	CHASSIS COVER 9800 SVR 611
2	CHCOV 98 612	95065698	CHASSIS COVER 9800 SVR 612
2	CHCOV 98 613	95060382	CHASSIS COVER 9800 SVR 613
2	CHCOV 98 619	95065699	CHASSIS COVER 9800 SVR 619
2	CHCOV 98 625	95065700	CHASSIS COVER 9800 SVR 625
2	CHCOV 98 626	95065701	CHASSIS COVER 9800 SVR 626
2	CHCOV 98 630	95060063	CHASSIS COVER 9800 SVR 630
3	TBR AA 689	18002416	TOUCHBAR ASSY. 9000 AA 689
3	TBR AA 695	18002417	TOUCHBAR ASSY. 9000 AA 695
3	TBR AA 696	18002418	TOUCHBAR ASSY. 9000 AA 696
3	TBR AA 691	18002419	TOUCHBAR ASSY. 9000 AA 691
3	TBR AA 693	95071099	TOUCHBAR ASSY. 9000 AA 693
3	TBR AA 605	18002426	TOUCHBAR ASSY. 9000 AA 605
3	TBR AA 606	18002421	TOUCHBAR ASSY. 9000 AA 606
3	TBR AA 611	18002427	TOUCHBAR ASSY. 9000 AA 611
3	TBR AA 612	18002422	TOUCHBAR ASSY. 9000 AA 612
3	TBR AA 613	95071178	TOUCHBAR ASSY. 9000 AA 613
3	TBR AA 619	TBR AA 619	TOUCHBAR ASSY. 9000 AA 619
3	TBR AA 625	18002428	TOUCHBAR ASSY. 9000 AA 625
3	TBR AA 626	18002424	TOUCHBAR ASSY. 9000 AA 626
3	TBR AA 630	18002423	TOUCHBAR ASSY. 9000 AA 630
3	TBR BB 689	18002429	TOUCHBAR ASSY. 9000 BB 689
3	TBR BB 695	18002430	TOUCHBAR ASSY. 9000 BB 695
3	TBR BB 696	18002431	TOUCHBAR ASSY. 9000 BB 696
3	TBR BB 691	18002432	TOUCHBAR ASSY. 9000 BB 691
3	TBR BB 693	TBR BB 693	TOUCHBAR ASSY. 9000 BB 693
3	TBR BB 605	18002439	TOUCHBAR ASSY. 9000 BB 605
3	TBR BB 606	18002434	TOUCHBAR ASSY. 9000 BB 606
3	TBR BB 611	18002440	TOUCHBAR ASSY. 9000 BB 611
3	TBR BB 612	18002435	TOUCHBAR ASSY. 9000 BB 612
3	TBR BB 613	18002438	TOUCHBAR ASSY. 9000 BB 613
3	TBR BB 619	95061870	TOUCHBAR ASSY. 9000 BB 619
3	TBR BB 625	18002441	TOUCHBAR ASSY. 9000 BB 625
3	TBR BB 626	18002437	TOUCHBAR ASSY. 9000 BB 626
3	TBR BB 630	18002436	TOUCHBAR ASSY. 9000 BB 630
3A	FTBR AA 689	18002442	TOUCHBAR ASSY. F9000 AA 689
3A	FTBR AA 695	18002443	TOUCHBAR ASSY. F9000 AA 695
3A	FTBR AA 696	18002444	TOUCHBAR ASSY. F9000 AA 696
3A	FTBR AA 691	18002445	TOUCHBAR ASSY. F9000 AA 691
3A	FTBR AA 693	FTBR AA 693	TOUCHBAR ASSY. F9000 AA 693
3A	FTBR AA 605	18002452	TOUCHBAR ASSY. F9000 AA 605
3A	FTBR AA 606	18002447	TOUCHBAR ASSY. F9000 AA 606
3A	FTBR AA 611	18002453	TOUCHBAR ASSY. F9000 AA 611
3A	FTBR AA 612	18002448	TOUCHBAR ASSY. F9000 AA 612
3A	FTBR AA 613	18002451	TOUCHBAR ASSY. F9000 AA 613
3A	FTBR AA 619	FTBR AA 619	TOUCHBAR ASSY. F9000 AA 619
3A	FTBR AA 625	18002454	TOUCHBAR ASSY. F9000 AA 625
3A	FTBR AA 626	18002450	TOUCHBAR ASSY. F9000 AA 626
3A	FTBR AA 630	18002449	TOUCHBAR ASSY. F9000 AA 630
3A	FTBR BB 689	18002455	TOUCHBAR ASSY. F9000 BB 689
3A	FTBR BB 695	18002456	TOUCHBAR ASSY. F9000 BB 695
3A	FTBR BB 696	18002457	TOUCHBAR ASSY. F9000 BB 696
3A	FTBR BB 691	18002458	TOUCHBAR ASSY. F9000 BB 691
3A	FTBR BB 693	FTBR BB 693	TOUCHBAR ASSY. F9000 BB 693
3A	FTBR BB 605	18002465	TOUCHBAR ASSY. F9000 BB 605
3A	FTBR BB 606	18002460	TOUCHBAR ASSY. F9000 BB 606
3A	FTBR BB 611	18002466	TOUCHBAR ASSY. F9000 BB 611

9800/F9800 SERVICE PARTS LIST (Rev 07-15)

Balloon #	Item #	Part #	DESCRIPTION
3A	FTBR BB 612	18002461	TOUCHBAR ASSY. F9000 BB 612
3A	FTBR BB 613	18002464	TOUCHBAR ASSY. F9000 BB 613
3A	FTBR BB 619	FTBR BB 619	TOUCHBAR ASSY. F9000 BB 619
3A	FTBR BB 625	18002467	TOUCHBAR ASSY. F9000 BB 625
3A	FTBR BB 626	18002463	TOUCHBAR ASSY. F9000 BB 626
3A	FTBR BB 630	18002462	TOUCHBAR ASSY. F9000 BB 630
3B	ES TBR AA689	95071566	ES TBRASSY,9000 AA 689 (REQUIRES PS501 Power Supply)
3B	ES TBR AA695	95059889	ES TBRASSY,9000 AA 695 (REQUIRES PS501 Power Supply)
3B	ES TBR AA696	ES TBR AA696	ES TBRASSY,9000 AA 696 (REQUIRES PS501 Power Supply)
3B	ES TBR AA691	ES TBR AA691	ES TBRASSY,9000 AA 691 (REQUIRES PS501 Power Supply)
3B	ES TBR AA693	ES TBR AA693	ES TBRASSY,9000 AA 693 (REQUIRES PS501 Power Supply)
3B	ES TBR AA605	ES TBR AA605	ES TBRASSY,9000 AA 605 (REQUIRES PS501 Power Supply)
3B	ES TBR AA606	ES TBR AA606	ES TBRASSY,9000 AA 606 (REQUIRES PS501 Power Supply)
3B	ES TBR AA611	ES TBR AA611	ES TBRASSY,9000 AA 611 (REQUIRES PS501 Power Supply)
3B	ES TBR AA612	ES TBR AA612	ES TBRASSY,9000 AA 612 (REQUIRES PS501 Power Supply)
3B	ES TBR AA613	95057351	ES TBRASSY,9000 AA 613 (REQUIRES PS501 Power Supply)
3B	ES TBR AA619	ES TBR AA619	ES TBRASSY,9000 AA 619 (REQUIRES PS501 Power Supply)
3B	ES TBR AA625	ES TBR AA625	ES TBRASSY,9000 AA 625 (REQUIRES PS501 Power Supply)
3B	ES TBR AA626	95061106	ES TBRASSY,9000 AA 626 (REQUIRES PS501 Power Supply)
3B	ES TBR AA630	95057764	ES TBRASSY,9000 AA 630 (REQUIRES PS501 Power Supply)
3B	ES TBR BB689	95060203	ES TBRASSY,9000 BB 689 (REQUIRES PS501 Power Supply)
3B	ES TBR BB695	95070831	ES TBRASSY,9000 BB 695 (REQUIRES PS501 Power Supply)
3B	ES TBR BB696	ES TBR BB696	ES TBRASSY,9000 BB 696 (REQUIRES PS501 Power Supply)
3B	ES TBR BB691	ES TBR BB691	ES TBRASSY,9000 BB 691 (REQUIRES PS501 Power Supply)
3B	ES TBR BB693	ES TBR BB693	ES TBRASSY,9000 BB 693 (REQUIRES PS501 Power Supply)
3B	ES TBR BB605	ES TBR BB605	ES TBRASSY,9000 BB 605 (REQUIRES PS501 Power Supply)
3B	ES TBR BB606	95057840	ES TBRASSY,9000 BB 606 (REQUIRES PS501 Power Supply)
3B	ES TBR BB611	ES TBR BB611	ES TBRASSY,9000 BB 611 (REQUIRES PS501 Power Supply)
3B	ES TBR BB612	95057702	ES TBRASSY,9000 BB 612 (REQUIRES PS501 Power Supply)
3B	ES TBR BB613	95057249	ES TBRASSY,9000 BB 613 (REQUIRES PS501 Power Supply)
3B	ES TBR BB619	ES TBR BB619	ES TBRASSY,9000 BB 619 (REQUIRES PS501 Power Supply)
3B	ES TBR BB625	18003135	ES TBRASSY,9000 BB 625 (REQUIRES PS501 Power Supply)
3B	ES TBR BB626	95056646	ES TBRASSY,9000 BB 626 (REQUIRES PS501 Power Supply)
3B	ES TBR BB630	95057259	ES TBRASSY,9000 BB 630 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA689	95071169	ES TBRASSY,F9000 AA 689 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA695	95061037	ES TBRASSY,F9000 AA 695 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA696	ES FTBR AA696	ES TBRASSY,F9000 AA 696 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA691	ES FTBR AA691	ES TBRASSY,F9000 AA 691 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA693	ES FTBR AA693	ES TBRASSY,F9000 AA 693 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA605	ES FTBR AA605	ES TBRASSY,F9000 AA 605 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA606	ES FTBR AA606	ES TBRASSY,F9000 AA 606 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA611	ES FTBR AA611	ES TBRASSY,F9000 AA 611 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA612	ES FTBR AA612	ES TBRASSY,F9000 AA 612 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA613	ES FTBR AA613	ES TBRASSY,F9000 AA 613 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA619	ES FTBR AA619	ES TBRASSY,F9000 AA 619 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA625	ES FTBR AA625	ES TBRASSY,F9000 AA 625 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA626	ES FTBR AA626	ES TBRASSY,F9000 AA 626 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA630	95061026	ES TBRASSY,F9000 AA 630 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB689	ES FTBR BB689	ES TBRASSY,9000 BB 689 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB695	ES FTBR BB695	ES TBRASSY,9000 BB 695 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB696	ES FTBR BB696	ES TBRASSY,9000 BB 696 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB691	ES FTBR BB691	ES TBRASSY,9000 BB 691 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB693	ES FTBR BB693	ES TBRASSY,9000 BB 693 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB605	ES FTBR BB605	ES TBRASSY,9000 BB 605 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB606	ES FTBR BB606	ES TBRASSY,9000 BB 606 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB611	ES FTBR BB611	ES TBRASSY,9000 BB 611 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB612	ES FTBR BB612	ES TBRASSY,9000 BB 612 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB613	ES FTBR BB613	ES TBRASSY,9000 BB 613 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB619	ES FTBR BB619	ES TBRASSY,9000 BB 619 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB625	ES FTBR BB625	ES TBRASSY,9000 BB 625 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB626	95056621	ES TBRASSY,9000 BB 626 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB630	95061934	ES TBRASSY,9000 BB 630 (REQUIRES PS501 Power Supply)
3D	MLR TBR AA689	MLR TBR AA689	MLR TBRASSY,9000 AA 689 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA695	MLR TBR AA695	MLR TBRASSY,9000 AA 695 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA696	MLR TBR AA696	MLR TBRASSY,9000 AA 696 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA691	MLR TBR AA691	MLR TBRASSY,9000 AA 691 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA693	MLR TBR AA693	MLR TBRASSY,9000 AA 693 (REQUIRES PS610 RF Power Supply)

9800/F9800 SERVICE PARTS LIST (Rev 07-15)

Balloon #	Item #	Part #	DESCRIPTION
3D	MLR TBR AA605	95071406	MLR TBRASSY,9000 AA 605 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA606	MLR TBR AA606	MLR TBRASSY,9000 AA 606 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA611	MLR TBR AA611	MLR TBRASSY,9000 AA 611 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA612	MLR TBR AA612	MLR TBRASSY,9000 AA 612 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA613	MLR TBR AA613	MLR TBRASSY,9000 AA 613 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA619	MLR TBR AA619	MLR TBRASSY,9000 AA 619 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA625	MLR TBR AA625	MLR TBRASSY,9000 AA 625 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA626	MLR TBR AA626	MLR TBRASSY,9000 AA 626 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA630	95069184	MLR TBRASSY,9000 AA 630 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB689	95071555	MLR TBRASSY,9000 BB 689 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB695	95071557	MLR TBRASSY,9000 BB 695 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB696	MLR TBR BB696	MLR TBRASSY,9000 BB 696 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB691	MLR TBR BB691	MLR TBRASSY,9000 BB 691 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB693	MLR TBR BB693	MLR TBRASSY,9000 BB 693 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB605	95071382	MLR TBRASSY,9000 BB 605 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB606	95069244	MLR TBRASSY,9000 BB 606 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB611	MLR TBR BB611	MLR TBRASSY,9000 BB 611 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB612	95071364	MLR TBRASSY,9000 BB 612 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB613	95071342	MLR TBRASSY,9000 BB 613 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB619	MLR TBR BB619	MLR TBRASSY,9000 BB 619 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB625	MLR TBR BB625	MLR TBRASSY,9000 BB 625 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB626	MLR TBR BB626	MLR TBRASSY,9000 BB 626 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB630	95069073	MLR TBRASSY,9000 BB 630 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA689	MLR FTBR AA689	MLR TBRASSY,F9000 AA 689 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA695	MLR FTBR AA695	MLR TBRASSY,F9000 AA 695 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA696	MLR FTBR AA696	MLR TBRASSY,F9000 AA 696 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA691	MLR FTBR AA691	MLR TBRASSY,F9000 AA 691 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA693	MLR FTBR AA693	MLR TBRASSY,F9000 AA 693 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA605	MLR FTBR AA605	MLR TBRASSY,F9000 AA 605 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA606	MLR FTBR AA606	MLR TBRASSY,F9000 AA 606 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA611	MLR FTBR AA611	MLR TBRASSY,F9000 AA 611 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA612	MLR FTBR AA612	MLR TBRASSY,F9000 AA 612 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA613	MLR FTBR AA613	MLR TBRASSY,F9000 AA 613 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA619	MLR FTBR AA619	MLR TBRASSY,F9000 AA 619 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA625	MLR FTBR AA625	MLR TBRASSY,F9000 AA 625 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA626	MLR FTBR AA626	MLR TBRASSY,F9000 AA 626 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA630	MLR FTBR AA630	MLR TBRASSY,F9000 AA 630 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB689	MLR FTBR BB689	MLR TBRASSY,9000 BB 689 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB695	MLR FTBR BB695	MLR TBRASSY,9000 BB 695 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB696	MLR FTBR BB696	MLR TBRASSY,9000 BB 696 (REQUIRES PS610RF Power Supply)
3E	MLR FTBR BB691	MLR FTBR BB691	MLR TBRASSY,9000 BB 691 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB693	95069241	MLR TBRASSY,9000 BB 693 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB605	MLR FTBR BB605	MLR TBRASSY,9000 BB 605 (REQUIRES PS610RF Power Supply)
3E	MLR FTBR BB606	MLR FTBR BB606	MLR TBRASSY,9000 BB 606 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB611	MLR FTBR BB611	MLR TBRASSY,9000 BB 611 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB612	MLR FTBR BB612	MLR TBRASSY,9000 BB 612 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB613	MLR FTBR BB613	MLR TBRASSY,9000 BB 613 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB619	MLR FTBR BB619	MLR TBRASSY,9000 BB 619 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB625	MLR FTBR BB625	MLR TBRASSY,9000 BB 625 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB626	MLR FTBR BB626	MLR TBRASSY,9000 BB 626 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB630	95069183	MLR TBRASSY,9000 BB 630 (REQUIRES PS610 RF Power Supply)
3F	ESSLPOTBX	95059477	9000 SERIES SOLENOID & POTTING BOX
	PS610RF	33400018	POWER SUPPLY TO BE USED WITH MLR 9000 SERIES EXITS
	PS501	95008619	POWER SUPPLY USED FOR ES 9000 SERIES EXITS
	ES-2	95047135	ADDITIONAL OR REPLACEMENT CARD FOR PS501 POWER SUPPLY
	ES 105	95003871	POWER TRANSFER RECOMMENDED WITH ES 9000 SERIES EXITS
Contact factory for availability of C & D length touchbar and rail assemblies. Dogging not available on D bar			
4	9AHD ECBRKT	95059476	END CAP MOUNTING PLATE WITH SCREW PACK 9000 (9AHD)
5	9EC 689	18002285	ENDCAP 9000 689 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 691	18002288	ENDCAP 9000 691 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 693	18002296	ENDCAP 9000 693 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 695	18002286	ENDCAP 9000 695 (Includes Endcap Mounting Bracket & Mounting Screws)

9800/F9800 SERVICE PARTS LIST (Rev 07-15)

Balloon #	Item #	Part #	DESCRIPTION
5	9EC 696	18002287	ENDCAP 9000 696 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 605	18002295	ENDCAP 9000 605 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 606	18002290	ENDCAP 9000 606 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 611	18002387	ENDCAP 9000 611 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 612	18002291	ENDCAP 9000 612 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 613	18002294	ENDCAP 9000 613 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 619	18002388	ENDCAP 9000 619 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 625	18002297	ENDCAP 9000 625 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 626	18002293	ENDCAP 9000 626 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 630	18002292	ENDCAP 9000 630 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 689	18002298	ENDCAP F9000 689 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 691	18002301	ENDCAP F9000 691 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 693	18002391	ENDCAP F9000 693 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 695	18002299	ENDCAP F9000 695 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 696	18002300	ENDCAP F9000 696 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 605	18002308	ENDCAP F9000 605 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 606	18002303	ENDCAP F9000 606 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 611	18002309	ENDCAP F9000 611 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 612	18002304	ENDCAP F9000 612 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 613	18002307	ENDCAP F9000 613 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 619	18002390	ENDCAP F9000 619 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 625	18002310	ENDCAP F9000 625 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 626	95071296	ENDCAP F9000 626 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 630	18002305	ENDCAP F9000 630 (Includes Endcap Mounting Bracket & Mounting Screws)
6	98L SCRPAK	98L SCRPK	98L SCREW PACK 9800, 695, 691, 613, 693
6	98M SCRPAK	95060568	98M SCREW PACK 9800 689, 628, 630,626,625
6	98N SCRPAK	98N SCRPK	98N SCREW PACK 9800 696, 605, 606
6	98P SCRPAK	98P SCRPK	98P SCREW PACK 9800 611, 612
7	DOGKEYPAK	95002638	DOGGING KEY PACK (10 Keys Pack)
8	426	95059517	TOP STRIKE PACK ANGLE 9800
8A	426A	95059499	TOP STRIKE PACK 9800 ANGLE FLUSH TRANSOM
9	94TOPLTCHBRKT	18002206	BRACKET TOP LATCH ASSY F9800
10	439	95059652	STRIKE PACK 9800 BOTTOM
11	340	95060489	STRIKE PACK FLAT BOTTOM
12	416V	95059629	STRIKE PACK BOTTOM SURFACE
13	431	95059665	STRIKE PACK RECESSED BOTTOM
14	POPPER	95008528	POPPER ASSEMBLY
15	SVTOPLTCH	95065661	TOP LATCH ASSEMBLY 9400/9800
15A	FSVTOPLTCH	95056228	TOP LATCH ASSEMBLY F9400/F9800
15B	SVTOPLTCHHELSTRK	95059549	TOP LATCH ASSEMBLY USED WITH ELECTRIC STRIKE
20	SVBOTSBLTCH	95056293	SLIDE BOLT ASSEMBLY BOTTOM 9400/9800
20A	FSVBOTSBLTCH	95065659	SLIDE BOLT ASSEMBLY BOTTOM F9400/ F9800
21	SVBOTPULLTCH	95063646	LATCH ASSEMBLY PULLMAN BOTTOM 9400/9800
21A	FSVBOTPULLTCH	95065658	LATCH ASSEMBLY PULLMAN BOTTOM F9400/F9800
23	98 CHASSCRPK	95065620	98 CHASSIS MOUNTING SCREW PACK
23A	F 9C CHASSCRPK	95059917	FIRE RATED 98 CHASSES MOUNTING SCREW PACK (9C)
16	SVRDUPR947 689	18003114	PUSH ROD WITH SCREWS 7FT 689
16	SVRDUPR947 691	18003115	PUSH ROD WITH SCREWS 7FT 691
16	SVRDUPR947 693	18003118	PUSH ROD WITH SCREWS 7FT 693
16	SVRDUPR947 695	18003116	PUSH ROD WITH SCREWS 7FT 695
16	SVRDUPR947 696	18003117	PUSH ROD WITH SCREWS 7FT 696
16	SVRDUPR947 605	18003121	PUSH ROD WITH SCREWS 7FT 605
16	SVRDUPR947 606	18003119	PUSH ROD WITH SCREWS 7FT 606
16	SVRDUPR947 611	18003113	PUSH ROD WITH SCREWS 7FT 611
16	SVRDUPR947 612	18003120	PUSH ROD WITH SCREWS 7FT 612
16	SVRDUPR947 613	18003110	PUSH ROD WITH SCREWS 7FT 613
16	SVRDUPR947 619	95065713	PUSH ROD WITH SCREWS 7FT 619
16	SVRDUPR947 625	18003111	PUSH ROD WITH SCREWS 7FT 625
16	SVRDUPR947 626	18003112	PUSH ROD WITH SCREWS 7FT 626

9800/F9800 SERVICE PARTS LIST (Rev 07-15)

Balloon #	Item #	Part #	DESCRIPTION
16	SVRDUPR947 630	18003106	PUSH ROD WITH SCREWS 7FT 630
16	SVRDUPR948 689	18003122	PUSH ROD WITH SCREWS 8FT 689
16	SVRDUPR948 691	18003123	PUSH ROD WITH SCREWS 8FT 691
16	SVRDUPR948 693	18003136	PUSH ROD WITH SCREWS 8FT 693
16	SVRDUPR948 695	18003124	PUSH ROD WITH SCREWS 8FT 695
16	SVRDUPR948 696	18003125	PUSH ROD WITH SCREWS 8FT 696
16	SVRDUPR948 605	18003131	PUSH ROD WITH SCREWS 8FT 605
16	SVRDUPR948 606	18003132	PUSH ROD WITH SCREWS 8FT 606
16	SVRDUPR948 611	18003129	PUSH ROD WITH SCREWS 8FT 611
16	SVRDUPR948 612	18003133	PUSH ROD WITH SCREWS 8FT 612
16	SVRDUPR948 613	18003126	PUSH ROD WITH SCREWS 8FT 613
16	SVRDUPR948 619	95070431	PUSH ROD WITH SCREWS 8FT 619
16	SVRDUPR948 625	18003127	PUSH ROD WITH SCREWS 8FT 625
16	SVRDUPR948 626	18003128	PUSH ROD WITH SCREWS 8FT 626
16	SVRDUPR948 630	18003130	PUSH ROD WITH SCREWS 8FT 630
17	LCHCOV 689	95056227	TOP OR BOTTOM LATCH COVER W/ SCREWS 9400 9800 689
17	LCHCOV 691	18002342	TOP OR BOTTOM LATCH COVER W/ SCREWS 9400 9800 691
17	LCHCOV 693	95065666	TOP OR BOTTOM LATCH COVER W/ SCREWS 9400 9800 693
17	LCHCOV 695	18002340	TOP OR BOTTOM LATCH COVER W/ SCREWS 9400 9800 695
17	LCHCOV 696	18002341	TOP OR BOTTOM LATCH COVER W/ SCREWS 9400 9800 696
17	LCHCOV 605	18002349	TOP OR BOTTOM LATCH COVER W/ SCREWS 9400 9800 605
17	LCHCOV 606	18002344	TOP OR BOTTOM LATCH COVER W/ SCREWS 9400 9800 606
17	LCHCOV 611	18002350	TOP OR BOTTOM LATCH COVER W/ SCREWS 9400 9800 611
17	LCHCOV 612	95057514	TOP OR BOTTOM LATCH COVER W/ SCREWS 9400 9800 612
17	LCHCOV 613	95056967	TOP OR BOTTOM LATCH COVER W/ SCREWS 9400 9800 613
17	LCHCOV 619	95065667	TOP OR BOTTOM LATCH COVER W/ SCREWS 9400 9800 619
17	LCHCOV 625	18002351	TOP OR BOTTOM LATCH COVER W/ SCREWS 9400 9800 625
17	LCHCOV 626	95056031	TOP OR BOTTOM LATCH COVER W/ SCREWS 9400 9800 626
17	LCHCOV 630	18002346	TOP OR BOTTOM LATCH COVER W/ SCREWS 9400 9800 630
18	ETR 9400 689	95004846	TOP ROD EXTENDER ADDING 2 FT TO 7FT OR 8 FT SVR 689
18	ETR 9400 691	95004843	TOP ROD EXTENDER ADDING 2 FT TO 7FT OR 8 FT SVR 691
18	ETR 9400 693	95060531	TOP ROD EXTENDER ADDING 2 FT TO 7FT OR 8 FT SVR 693
18	ETR 9400 695	95061091	TOP ROD EXTENDER ADDING 2 FT TO 7FT OR 8 FT SVR 695
18	ETR 9400 696	95061201	TOP ROD EXTENDER ADDING 2 FT TO 7FT OR 8 FT SVR 696
18	ETR 9400 605	95060379	TOP ROD EXTENDER ADDING 2 FT TO 7FT OR 8 FT SVR 605
18	ETR 9400 606	95060928	TOP ROD EXTENDER ADDING 2 FT TO 7FT OR 8 FT SVR 606
18	ETR 9400 611	95004853	TOP ROD EXTENDER ADDING 2 FT TO 7FT OR 8 FT SVR 611
18	ETR 9400 612	95060648	TOP ROD EXTENDER ADDING 2 FT TO 7FT OR 8 FT SVR 612
18	ETR 9400 613	95059850	TOP ROD EXTENDER ADDING 2 FT TO 7FT OR 8 FT SVR 613
18	ETR 9400 619	95065665	TOP ROD EXTENDER ADDING 2 FT TO 7FT OR 8 FT SVR 619
18	ETR 9400 625	95059840	TOP ROD EXTENDER ADDING 2 FT TO 7FT OR 8 FT SVR 625
18	ETR 9400 626	95060312	TOP ROD EXTENDER ADDING 2 FT TO 7FT OR 8 FT SVR 626
18	ETR 9400 630	18003008	TOP ROD EXTENDER ADDING 2 FT TO 7FT OR 8 FT SVR 630
19	SVRDLWR 689	95056226	LOWER PUSH ROD 9400 689
19	SVRDLWR 691	95065718	LOWER PUSH ROD 9400 691
19	SVRDLWR 693	95065717	LOWER PUSH ROD 9400 693
19	SVRDLWR 695	95057037	LOWER PUSH ROD 9400 695
19	SVRDLWR 696	95065716	LOWER PUSH ROD 9400 696
19	SVRDLWR 605	95057035	LOWER PUSH ROD 9400 605
19	SVRDLWR 606	95057036	LOWER PUSH ROD 9400 606
19	SVRDLWR 611	95065721	LOWER PUSH ROD 9400 611
19	SVRDLWR 612	95061269	LOWER PUSH ROD 9400 612
19	SVRDLWR 613	95057034	LOWER PUSH ROD 9400 613
19	SVRDLWR 619	95065720	LOWER PUSH ROD 9400 619
19	SVRDLWR 625	95065719	LOWER PUSH ROD 9400 625
19	SVRDLWR 626	95056032	LOWER PUSH ROD 9400 626
19	SVRDLWR 630	95056009	LOWER PUSH ROD 9400 630
	98CRKT	95065624	CHASSIS REPAIR KIT 9800
	9DRKIT	95052774	DOGGING REPAIR KIT 9000
	MSKIT	95059473	MICRO SWITCH REQUEST TO EXIT KIT
	CD KIT AA 689	95002343	CYLINDER DOGGING KIT 9000 AA 689
	CD KIT AA 691	95002335	CYLINDER DOGGING KIT 9000 AA 691
	CD KIT AA 693	95064816	CYLINDER DOGGING KIT 9000 AA 693
	CD KIT AA 695	95002339	CYLINDER DOGGING KIT 9000 AA 695
	CD KIT AA 696	95002347	CYLINDER DOGGING KIT 9000 AA 696

9800/F9800 SERVICE PARTS LIST (Rev 07-15)

Balloon #	Item #	Part #	DESCRIPTION
	CD KIT AA 605	95002353	CYLINDER DOGGING KIT 9000 AA 605
	CD KIT AA 606	95002357	CYLINDER DOGGING KIT 9000 AA 606
	CD KIT AA 611	95002361	CYLINDER DOGGING KIT 9000 AA 611
	CD KIT AA 612	95002365	CYLINDER DOGGING KIT 9000 AA 612
	CD KIT AA 613	95002369	CYLINDER DOGGING KIT 9000 AA 613
	CD KIT AA 619	CD KIT AA 619	CYLINDER DOGGING KIT 9000 AA 619
	CD KIT AA 625	95002373	CYLINDER DOGGING KIT 9000 AA 625
	CD KIT AA 626	95002377	CYLINDER DOGGING KIT 9000 AA 626
	CD KIT AA 630	95002385	CYLINDER DOGGING KIT 9000 AA 630
	CD KIT BB 689	95002345	CYLINDER DOGGING KIT 9000 BB 689
	CD KIT BB 691	95002335	CYLINDER DOGGING KIT 9000 BB 691
	CD KIT BB 693	95064817	CYLINDER DOGGING KIT 9000 BB 693
	CD KIT BB 695	95002341	CYLINDER DOGGING KIT 9000 BB 695
	CD KIT BB 696	95002349	CYLINDER DOGGING KIT 9000 BB 696
	CD KIT BB 605	95002355	CYLINDER DOGGING KIT 9000 BB 605
	CD KIT BB 606	95002359	CYLINDER DOGGING KIT 9000 BB 606
	CD KIT BB 611	95002363	CYLINDER DOGGING KIT 9000 BB 611
	CD KIT BB 612	95002367	CYLINDER DOGGING KIT 9000 BB 612
	CD KIT BB 613	95064815	CYLINDER DOGGING KIT 9000 BB 613
	CD KIT BB 619	CD KIT BB 619	CYLINDER DOGGING KIT 9000 BB 619
	CD KIT BB 625	95002375	CYLINDER DOGGING KIT 9000 BB 625
	CD KIT BB 626	95002379	CYLINDER DOGGING KIT 9000 BB 626
	CD KIT BB 630	95002387	CYLINDER DOGGING KIT 9000 BB 630
	CYL NUT	95060028	CYLINDER NUT
	CYL DOG BRKT	95060488	CYLINDER DOGGING BRACKET
	BPA KIT AA 689	BPA KIT AA 689	BATTERY POWERED ALARM 9000 AA 689
	BPA KIT AA 691	BPA KIT AA 691	BATTERY POWERED ALARM 9000 AA 691
	BPA KIT AA 693	BPA KIT AA 693	BATTERY POWERED ALARM 9000 AA 693
	BPA KIT AA 695	BPA KIT AA 695	BATTERY POWERED ALARM 9000 AA 695
	BPA KIT AA 696	BPA KIT AA 696	BATTERY POWERED ALARM 9000 AA 696
	BPA KIT AA 605	BPA KIT AA 605	BATTERY POWERED ALARM 9000 AA 605
	BPA KIT AA 606	BPA KIT AA 606	BATTERY POWERED ALARM 9000 AA 606
	BPA KIT AA 611	BPA KIT AA 611	BATTERY POWERED ALARM 9000 AA 611
	BPA KIT AA 612	BPA KIT AA 612	BATTERY POWERED ALARM 9000 AA 612
	BPA KIT AA 613	BPA KIT AA 613	BATTERY POWERED ALARM 9000 AA 613
	BPA KIT AA 619	BPA KIT AA 619	BATTERY POWERED ALARM 9000 AA 619
	BPA KIT AA 625	BPA KIT AA 625	BATTERY POWERED ALARM 9000 AA 625
	BPA KIT AA 626	BPA KIT AA 626	BATTERY POWERED ALARM 9000 AA 626
	BPA KIT AA 630	BPA KIT AA 630	BATTERY POWERED ALARM 9000 AA 630
	BPA KIT BB 689	BPA KIT BB 689	BATTERY POWERED ALARM 9000 BB 689
	BPA KIT BB 691	BPA KIT BB 691	BATTERY POWERED ALARM 9000 BB 691
	BPA KIT BB 693	BPA KIT BB 693	BATTERY POWERED ALARM 9000 BB 693
	BPA KIT BB 695	95057283	BATTERY POWERED ALARM 9000 BB 695
	BPA KIT BB 696	BPA KIT BB 696	BATTERY POWERED ALARM 9000 BB 696
	BPA KIT BB 605	BPA KIT BB 605	BATTERY POWERED ALARM 9000 BB 605
	BPA KIT BB 606	BPA KIT BB 606	BATTERY POWERED ALARM 9000 BB 606
	BPA KIT BB 611	BPA KIT BB 611	BATTERY POWERED ALARM 9000 BB 611
	BPA KIT BB 612	BPA KIT BB 612	BATTERY POWERED ALARM 9000 BB 612
	BPA KIT BB 613	BPA KIT BB 613	BATTERY POWERED ALARM 9000 BB 613
	BPA KIT BB 619	BPA KIT BB 619	BATTERY POWERED ALARM 9000 BB 619
	BPA KIT BB 625	BPA KIT BB 625	BATTERY POWERED ALARM 9000 BB 625
	BPA KIT BB 626	BPA KIT BB 626	BATTERY POWERED ALARM 9000 BB 626
	BPA KIT BB 630	BPA KIT BB 630	BATTERY POWERED ALARM 9000 BB 630
	BPAR KIT AA 689	BPAR KIT AA 689	BATTERY POWERED ALARM 9000 AUTO REARM AA 689
	BPAR KIT AA 691	BPAR KIT AA 691	BATTERY POWERED ALARM 9000 AUTO REARM AA 691
	BPAR KIT AA 693	BPAR KIT AA 693	BATTERY POWERED ALARM 9000 AUTO REARM AA 693
	BPAR KIT AA 695	BPAR KIT AA 695	BATTERY POWERED ALARM 9000 AUTO REARM AA 695
	BPAR KIT AA 696	BPAR KIT AA 696	BATTERY POWERED ALARM 9000 AUTO REARM AA 696
	BPAR KIT AA 605	BPAR KIT AA 605	BATTERY POWERED ALARM 9000 AUTO REARM AA 605
	BPAR KIT AA 606	BPAR KIT AA 606	BATTERY POWERED ALARM 9000 AUTO REARM AA 606
	BPAR KIT AA 611	BPAR KIT AA 611	BATTERY POWERED ALARM 9000 AUTO REARM AA 611
	BPAR KIT AA 612	BPAR KIT AA 612	BATTERY POWERED ALARM 9000 AUTO REARM AA 612
	BPAR KIT AA 613	BPAR KIT AA 613	BATTERY POWERED ALARM 9000 AUTO REARM AA 613
	BPAR KIT AA 619	BPAR KIT AA 619	BATTERY POWERED ALARM 9000 AUTO REARM AA 619
	BPAR KIT AA 625	BPAR KIT AA 625	BATTERY POWERED ALARM 9000 AUTO REARM AA 625
	BPAR KIT AA 626	BPAR KIT AA 626	BATTERY POWERED ALARM 9000 AUTO REARM AA 626
	BPAR KIT AA 630	BPAR KIT AA 630	BATTERY POWERED ALARM 9000 AUTO REARM AA 630



