

INSTALLATION INSTRUCTIONS

The Quality System of LA GARD is ISO 9001:2000 approved. In order to maintain this high quality standard and to ensure a problem free application, please read this guide thoroughly before mounting the SMARTPOINT SMARTLINC II system.

SAFEGUARDS FOR MOUNTING

- ① As soon as an electronic lock has been mounted, no more welding can be done on the safe.
- ② Keep metal dust, filings, etc. away from the lock.
- ③ Never remove lock cover, this voids the LA GARD warranty policy.
- ④ Never oil, grease, lubricate or paint the lock.
- ⑤ Keep cables away from sharp edges and moving parts.
- ⑥ Never carry Keypads or Locks by holding on to the cable.
- ⑦ Use ALKALINE batteries only. (LA GARD recommends the use of Quality Energizer e2 Titanium or Duracell Ultra 9-Volt Alkaline batteries)

The SMARTPOINT system is meant to run on AC power as the primary power source. Battery power should be a back-up only.

SMARTPOINT SMARTLINC II INSTALLATION PARTS LIST

Listed below you will find an part requirement for the various SMARTPOINT set-ups.

One Lock

- Logic Module (P/N 9060 [with biometric features] or 9050 [without biometric feature])
- Lock (P/N 4300007B-00-00 or 6040007B-00-00* or 6034007B-00-00* or 6441007B-40-00)
- Programming Assembly, Lock Cable and Serial Interface (P/N 2034)
- Logic Module Programming/Audit Cable (P/N 2041)

Two Locks

- Same As one lock with the addition of:
- One (1) Lock (P/N 4300007B-00-00 or 6040007B-00-00* or 6034007B-00-00* or 6441007B-40-00)
- Interface Box (P/N 4006) [comes with one (1) 18" SMARTPOINT Lock Cable Assembly]
- SMARTPOINT Lock Cable Assembly (P/N 43099-1) [if additional length required, available in 3', 6' or 10' lengths]

Three Locks

- Same As one lock with the addition of:
- Two (2) Locks (P/N 4300007B-00-00 or 6040007B-00-00* or 6034007B-00-00* or 6441007B-40-00)
- Interface Box (P/N 4006) [comes with one (1) 18" SMARTPOINT Lock Cable Assembly]
- At least One (1) SMARTPOINT Lock Cable Assembly (P/N 43099-1 or 43099-3 or 43099-6 or 43099-10)

Four Locks

- Same As one lock with the addition of:
- Three (3) Locks (P/N 4300007B-00-00 or 6040007B-00-00* or 6034007B-00-00* or 6441007B-40-00)
- Two (2) Interface Box (P/N 4006) [comes with one (1) 18" SMARTPOINT Lock Cable Assembly]
- At least Two (2) SMARTPOINT Lock Cable Assembly (P/N 43099-1 or 43099-3 or 43099-6 or 43099-10)

Five Locks

- Same As one lock with the addition of:
- Four (4) Locks (P/N 4300007B-00-00 or 6040007B-00-00* or 6034007B-00-00* or 6441007B-40-00)
- Two (2) • Interface Box (P/N 4006) [comes with one (1) 18" SMARTPOINT Lock Cable Assembly]
- At least Three (3) SMARTPOINT Lock Cable Assembly (P/N 43099-1 or 43099-3 or 43099-6 or 43099-10)

OPTIONAL ACCESSORIES AVAILABLE

- Knob Assembly* (P/N 2666) [for use with Deadbolt or Springbolt locks]
- Large Battery or Battery Alarm Box [recommended if using with Time Delay/Time Lock. Alarm Box is required for use of certain features] (P/N 2789 or 4001 or 4002)
- Armored Cable Protector (P/N 43116)
- A/C Power Adapter (P/N 2784) [for use on any lock to power the entire system with A/C rather than battery as primary power source] NOTE: This should be the primary source of power for the system.
- USB Fingerprint reader (P/N 702003)

SMARTPOINT SMARTLINC II

This system is available with or without biometric identification ability. If using the SMARTLINC II, without biometric ability, please disregard any reference, in these instructions, to fingerprints. The functionality of the two systems are identical except for the use of fingerprints for identification.


SMARTPOINT SMARTLINC II STEP-BY-STEP

Once all parts for the SMARTPOINT System have been received, layout one full system to begin set-up and installation. The images on this page shows all of the parts associated with the SMARTPOINT as well as a description of their use. LA GARD recommends that you follow our instructions for set-up and installation to avoid system malfunctions.


- ① Make sure all parts required for the system have been received.
- ② Install Set-up and Total Audit software on the computer or laptop being used to configure the system. (See Software Installation Instructions, 706.087)
- ③ Set-up Logic Module (See Logic Module and Lock Set-up Instructions, 700.087)
- ④ Set-up Locks (See Logic Module and Lock Set-up Instructions, 700.087)
- ⑤ Enroll locks to Logic Module (See Master Operating Instructions, 702.087)
- ⑥ Install Logic Module and Locks on safe (See Installation Instructions, 701.087)

Other instructions available include:


- Manager Operating Instructions, 703.087
- User Operating Instructions, 704.087
- Total Audit Operating Instructions, 705.087

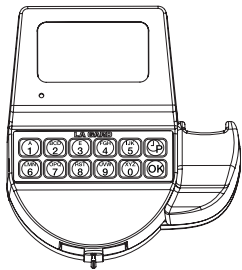


9060 or 9050 [without
biometric features]

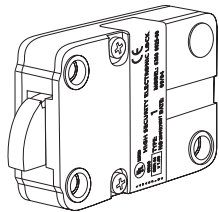


4300007B-00-00 Dual-
Handed Swingbolt Lock

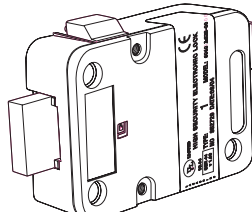


6040007B-00-00 Deadbolt
Lock* or 6034007B-00-00
Springbolt Lock*

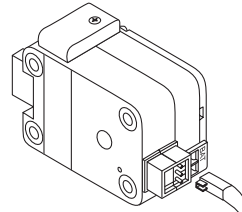


6441007B-00-00 Redundant
Mechanical Lock

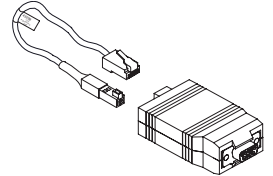


2034 Programming Assembly,
Lock Cable and Serial Interface

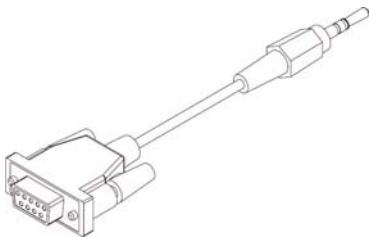


2041 Logic Module Programming / Audit
Cable

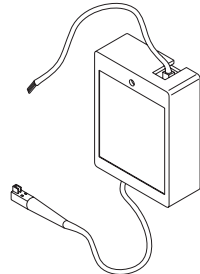


2789 Small Battery Alarm
Box

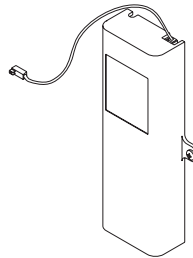


4001 Large Battery Box
4002 Large Battery / Alarm
Box

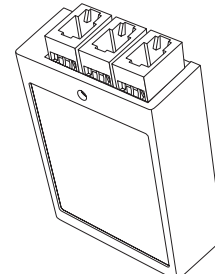


4006 Interface Box

 

2666 Knob
Assembly*
(For use with
Deadbolt or
Springbolt Locks)

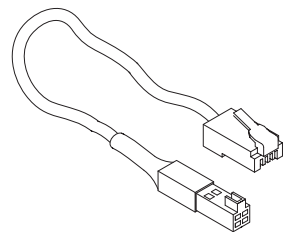


43099-1 (18") Lock Cable Assembly
(Also available in 3', 6' and 10'
lengths)

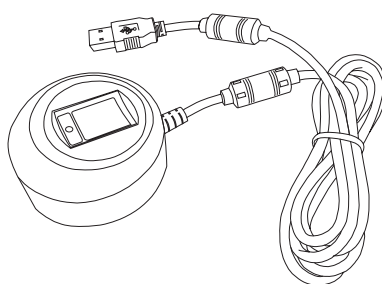

702003 USB Fingerprint Reader



 43116 Armored Alarm Cable
Protector




2784 A/C Power Adapter


LOGIC MODULE MOUNTING

The 3060 Logic Module comes with a backplate for ease of mounting, **see drawing 1**.


- ① Locate, drill and tap holes to mount the Logic Module to the outside of the safe door.
- ② Install the two (2) 8-32 screws to mount the Logic Module to the door, **see drawing 2**.
- ③ Route the Logic Module cable through the opening on the safe door, **see drawing 3**.
- ④ Position the Logic Module over the mounting screws and slide the Logic Module down on to the mounting screws.

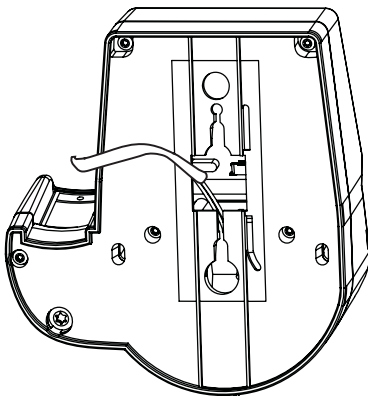

Drawing 1

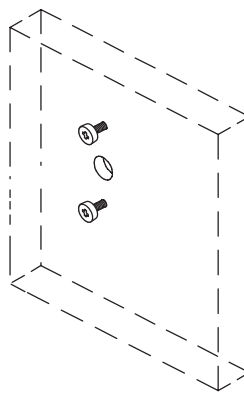

Drawing 2

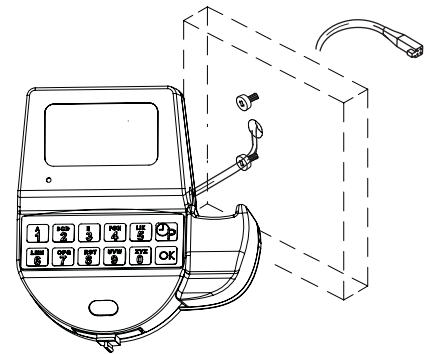


Drawing 3


LOCK CONNECTION AND MOUNTING

The steps involved in lock installation are dependent on the number of locks to be installed in the system. Each available installation is described. Once the locks are programmed and are ready to mount, follow the instructions below for mounting the Dual-Handed Swingbolt lock. Lock mounting instructions for the Deadbolt/Springbolt and Redundant Mechanical can be found at the end of these instructions.


- ① Making sure that the entry cable is running through the channel at the back of the lock. Mount the lock with the three (3) US 1/4"-20. **NOTE:** All four mounting orientations are possible. LA GARD's recommended torque for mounting screws on the Swingbolt lock is 60 inches-pound for the 1/4-20 screws, **see drawing 4**.
- ② Secure any cables with tywrap, making sure to keep out of the way of all moving parts, **see drawing 5**.
- ③ The blocking part "A" of Boltwork should exert pressure on the entire width of the lock bolt. In the locked position the boltwork **MUST NOT** place pressure on the lock bolt. **NOTE:** In case of boltwork construction where two blocking parts are moving opposite one another, the one facing the round side of the lock bolt "B" should be cut-off to avoid jamming of lock bolt, **see drawing 6**.

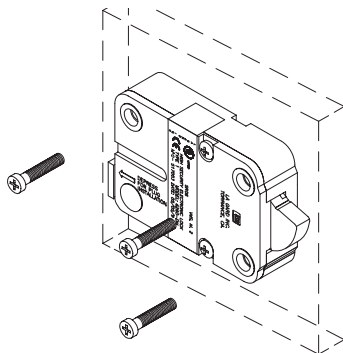

Drawing 4

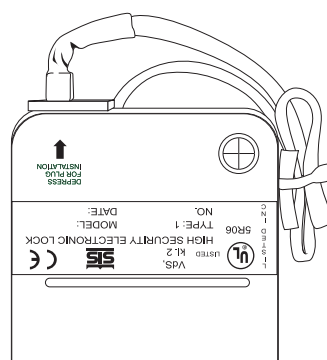

Drawing 5

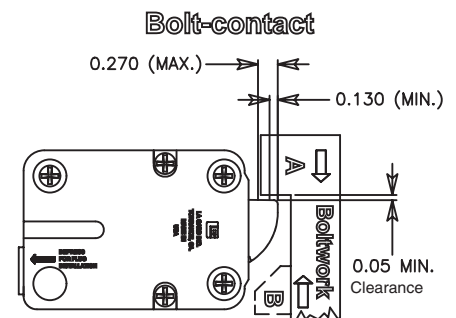

Drawing 6


ONE LOCK SYSTEM

- ① Connect the lock cable coming from the Logic Module directly into the lock, **see drawing 11**.
- ② The cable should be inserted so the lug is facing in the **downward position**.


TWO OR THREE LOCK SYSTEM

An additional Lock Cable Assembly will be required for each additional lock installed into the system. LA GARD offers Lock Cable Assemblies in 18", 3', 6' and 10' lengths.


- ① To install the cable from the Logic Module, first remove the cover from the Interface Box Unit, **see drawing 7**.
- ② Insert the cable through the hole at the bottom of the box, **see drawing 8**.
- ③ In order to plug the cable into the circuit board, remove the circuit board from the box, **see drawing 9**. The cable should be inserted so the lug is facing in the **downward position**.
- ④ Once the cable is installed, slide the circuit board back into the box. Gently pull the cable taut so that there is no slack remaining in the box itself, **see drawing 10**. Replace the cover.

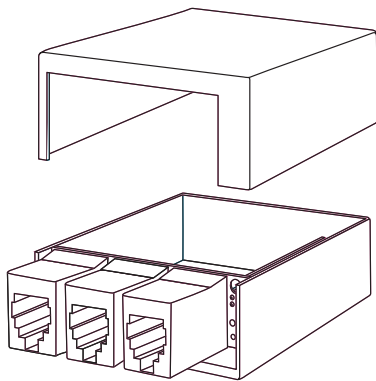

Drawing 7

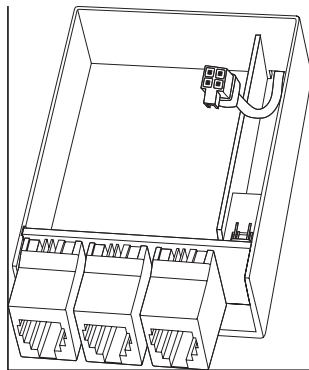

Drawing 8

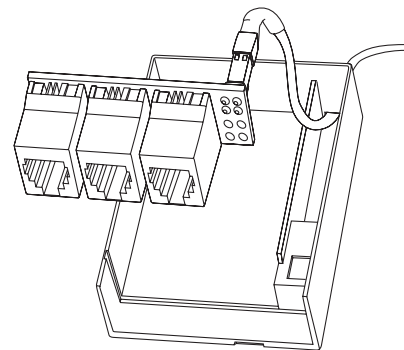

Drawing 9

Once the cable from the Logic Module has been connected to the Interface Box, the locks are ready to be installed, using a Lock Cable Assembly. The lock has two ports for cable connection, one the the Entry marked ENT and one for the A/C Power, Battery/Alarm Box, marked BAT, **see drawing 11**. The cable must be installed with the lug facing in the downward position.


- ① To install the cable carefully insert the cable. Be careful not to press too hard as the pins may bend. A bent pin can lead to a bad connection and cause the unit to malfunction.
- ⑥ Repeat these steps for all locks enrolled in the system.
- ⑦ Plug the telephone style connector on the other end of the Lock Cable Assembly for each lock directly into the Interface Box, **see drawing 12 & 13**. Ports are non-specific, use any open port.

FOUR OR FIVE LOCK SYSTEM


Installing four or five locks into the system requires the use of two Interface Boxes. An additional Lock Cable Assembly will be required for each additional lock installed into the system. LA GARD offers Lock Cable Assemblies in 18", 3', 6' and 10' lengths.

- ① Follow steps ① through ③ stated above in the set-up for Two or Three Locks, but set-up two locks only. The third available port will be used as the connector between the two Interface Box's.
- ② Plug one end into the first Interface Box and the other into the circuit board on the second Interface Box.
- ③ Install the lock cables for locks four and five into the lock and connect the telephone style connector to the second Interface Box, **see drawing 13**.


NOTE: Once all locks have been installed on the safe, they must be enrolled to the Logic Module. Please see the Master or Manager Operating Instructions (702.087 or 703.087) for proper enrollment instructions.

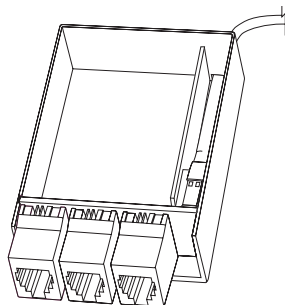


Drawing 10

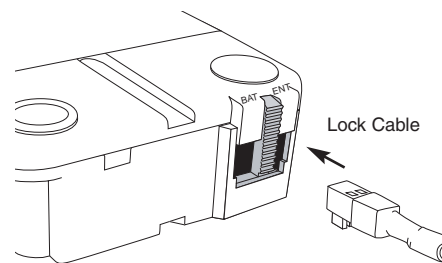


Drawing 11

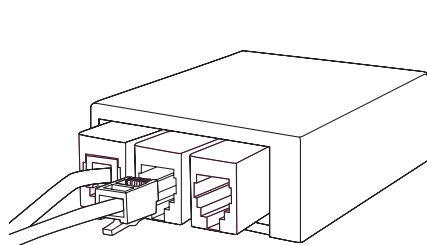

Drawing 12

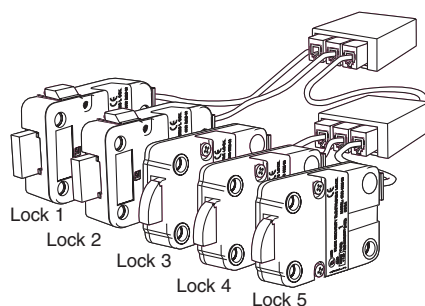

Drawing 13

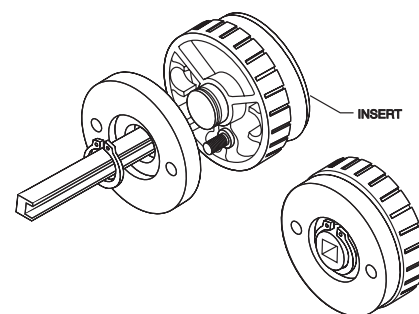


Drawing 14

DEADBOLT OR SPRINGBOLT LOCKS


In order to use either the Deadbolt or Springbolt locks, a method of retracting the bolt will be required. LA GARD recommends use of our Knob Assembly, P/N 2666, **see drawing 14**.

The drilling holes necessary to mount the lock correspond with the standard dimensions for mechanical locks. The spindle hole must be well deburred and no sharp edges may remain. The holes required to mount the knob need to be drilled 1.25" apart.

- ① To install the Knob Assembly, remove the insert from the front of the knob.
- ② Cut the spindle to length, .820" plus the mounting thickness.
- ③ Install using the two 8-32 X 5/16 phillips pan screws, **see figure 15**.
- ④ Install the lock (always with the bolt extended) onto the spindle, placing it flush to the mounting surface.
- ⑤ Fasten the lock using the three US 1/4-20 screws found in the hardware pack.

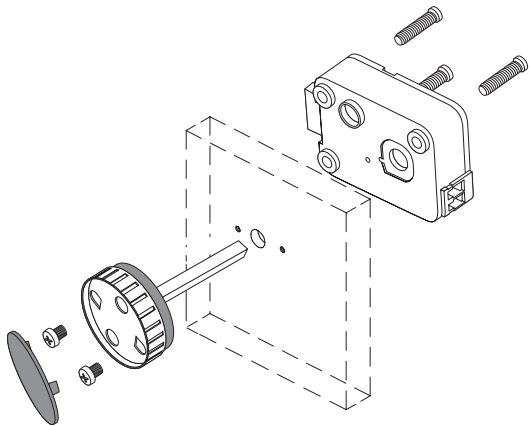

Drawing 15

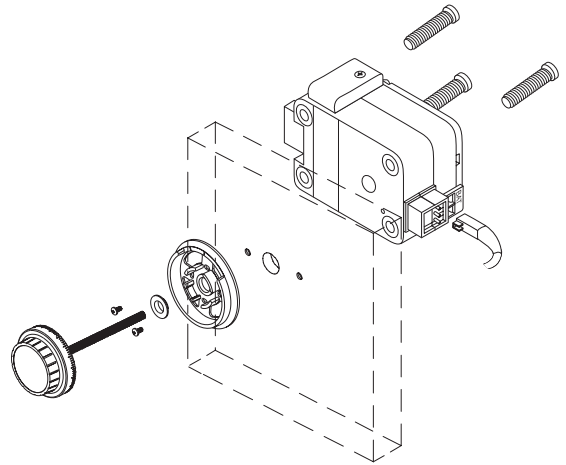

Drawing 16

REDUNDANT MECHANICAL LOCKS

In order to use the Redundant locks, a method of retracting the bolt will be required. LA GARD recommends use of our VISIONGARD Dial, P/N 2085, **see drawing 16**.

- ① To install the Dial, Cut the spindle to length, .820" plus the mounting thickness.
- ② Install using the two 8-32 X 5/16 phillips pan screws.
- ③ Install the lock (always with the bolt extended) onto the spindle, placing it flush to the mounting surface.
- ④ Fasten the lock using the three US 1/4-20 screws found in the hardware pack.

BACK-UP BATTERY INSTALL/CHANGE OUT PROCEDURE

- ① Remove black plastic battery compartment cover (located at the bottom of the keypad) by gently pulling downward on it's handle.
- ② Allow the battery and it's attached leads to drop down and out of the battery compartment. If it does not drop, gently pull on the battery until it does.
- ③ The connector is easily removed by unsnapping it from the two terminals on the top of the battery.

Never Pull on the Battery Leads

- ④ Connect a new High Quality Energizer e2 Titanium or Duracell Ultra 9-Volt Alkaline battery to the battery clip.
- ⑤ Push the battery and the leads completely up into the battery compartment.
- ⑥ Install the battery cover by placing one side of the cover in position and then pressing the other side into position with your finger.

