

1 Working instructions



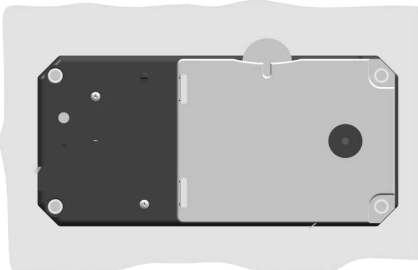
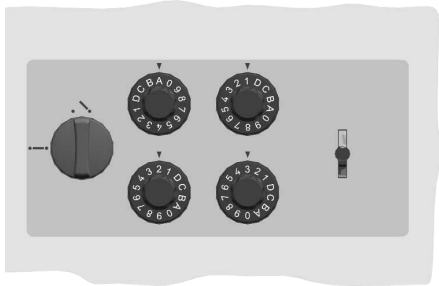
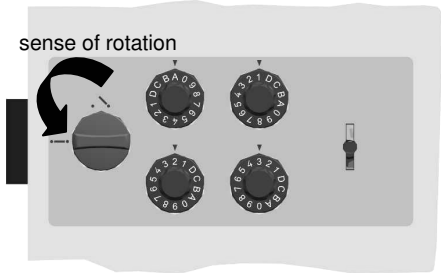
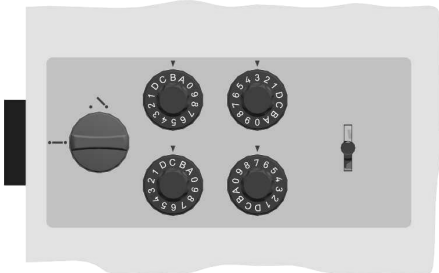
Important points

- Please read the instructions carefully before putting the lock into operation.
- In the standard version the decoding keys are supplied in pairs. These are to be kept in a safe place. In the event of one decoding key being lost, the lock can be changed over to a new set of keys by means of the second decoding key. For further information contact your specialist dealer.
- If an attachment is used (option code EURXXX) a coin has to be inserted before putting the lock into operation. After using the safe the coin must be removed.
- Caution: the decoding mechanism has been set to a specific key permutation i.e. it has been adjusted for use with a particular key.

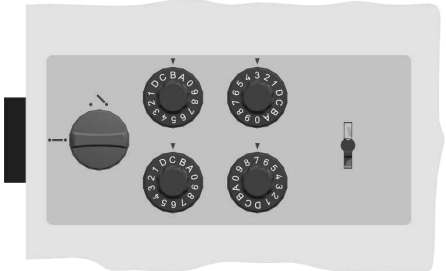
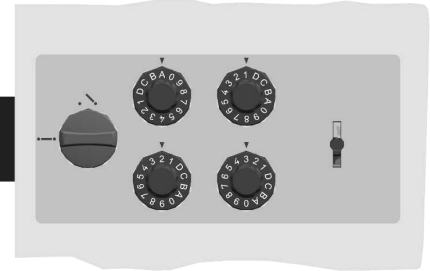
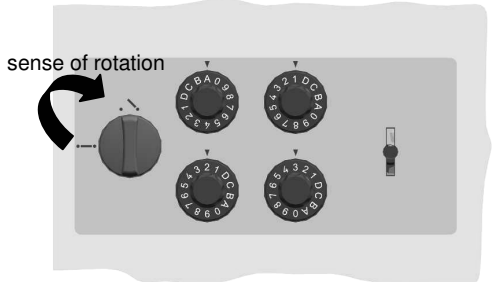
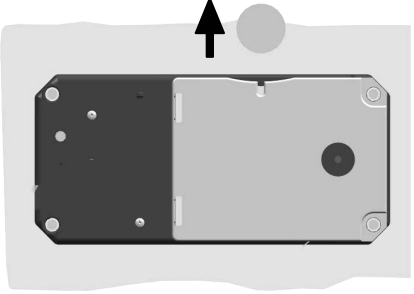
General instructions

- The decoding mechanism works smoothly. No force should be applied. This should be particularly avoided when inserting the key in the lock.
- Opening the lock with a damaged key can damage the lock.
- The lock must not be lubricated.
- The lock must be installed by qualified personnel. Only the manufacturer is permitted to open it. If additional keys are required, use only original Kaba Mauer keys. Failure to comply with this will endanger the correct functioning of the lock and result in your losing warranty entitlements.
- Only original Kaba Mauer keys are to be used should additional keys be required, as otherwise no guarantee claims may be raised.

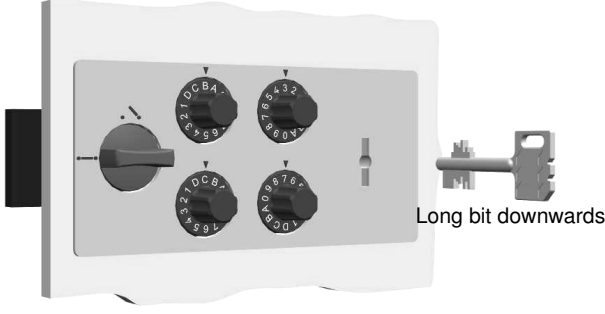
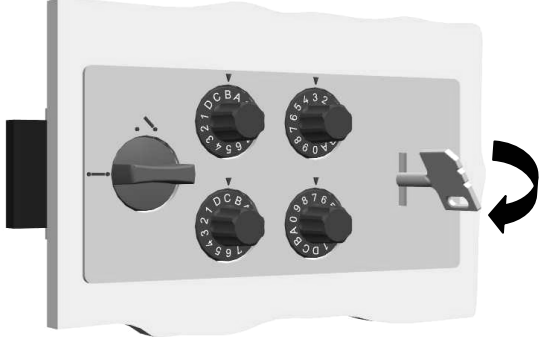
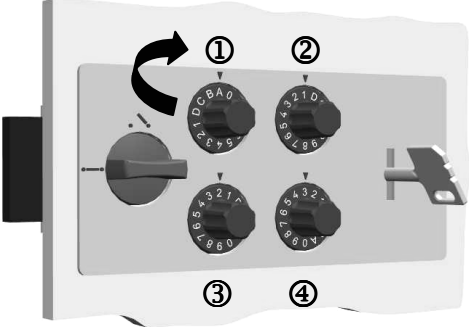
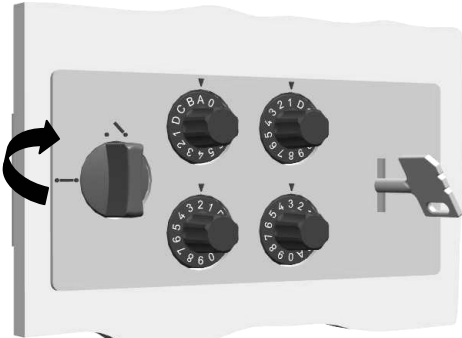
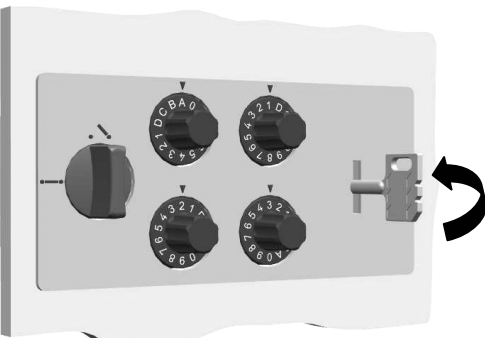
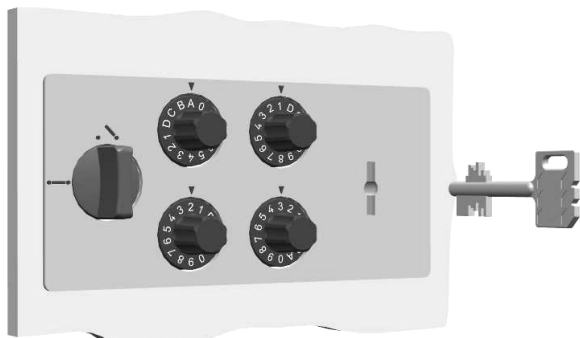
2 Setting a new code – closing the lock

	
<p>If no attachment is used, proceed directly to stage 2.</p> <p>1. Insert coin</p>	<p>2. Set code (example A – 1 – 2 – 3)</p>
	
<p>3. Close lock with bar handle</p>	<p>4. Cancel code</p>

3 Opening with code

	
<p>Lock closed and code cancelled</p>	<p>1. Set code (example A – 1 – 2 – 3)</p>
	
<p>2. Open lock: Turn bar handle clockwise until stop position reached</p>	<p>3. Remove coin</p>

4 Opening without code

 <p>Long bit downwards</p>	
<p>1. Insert key</p>	<p>2. Turn key about 150° clockwise until stop position reached</p>
	
<p>3. Decode lock: turn every adjusting knob in the indicated order (clockwise) until it clicks into place</p>	<p>4. Open lock: Turn bar handle clockwise until stop position reached</p>
	
<p>5. Turn key anti-clockwise until stop position reached</p>	<p>6. Withdraw key and keep it in a safe place</p>