



 
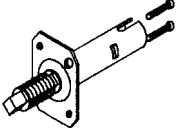


 
 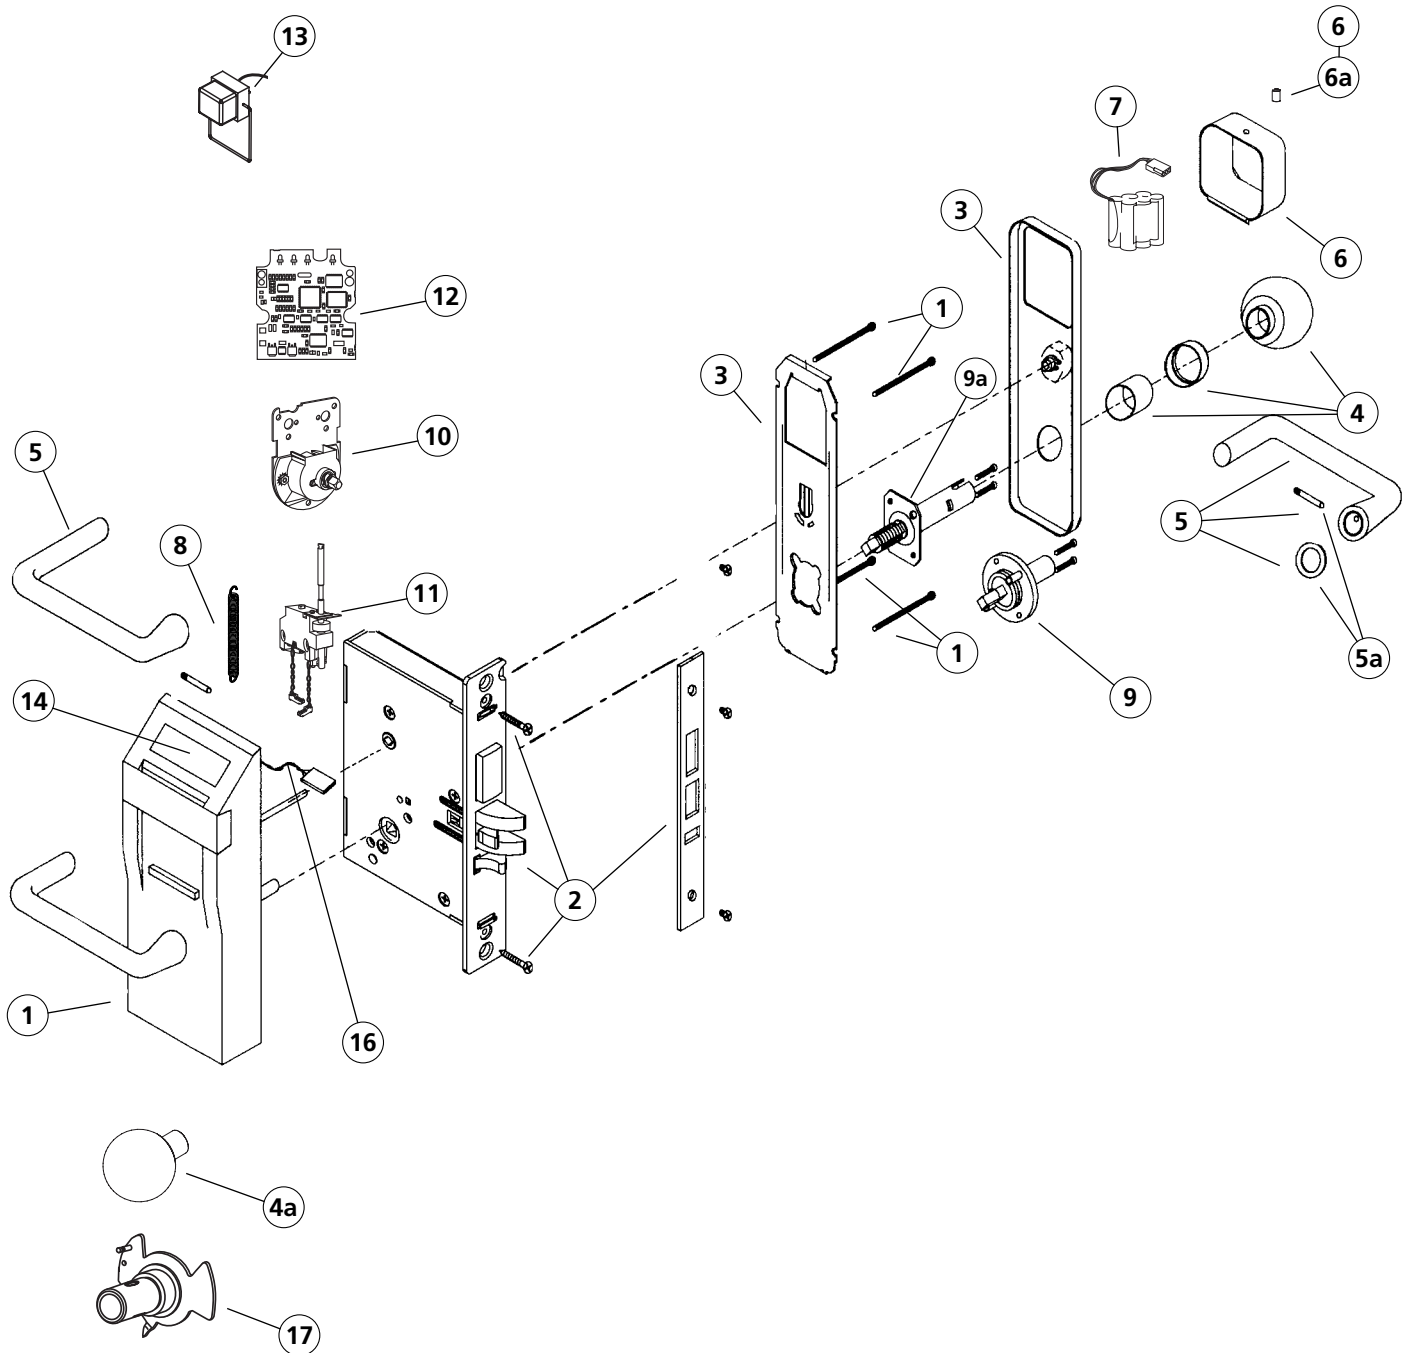


Lock Replacement Parts

System 700 II Series
Exploded View

 

 




 
 



Item	Description	Part #
6	Battery cup Kit 	Includes: Battery cup and screw 502183-K
6a	Battery cup Screw Pack	840-502007-K
7	Battery Pack 	6 AA alkaline batteries in a sealed pack 502238-10
8	Stop plate spring (Lever Spring) 	501100-K
9	Self aligning mechanism (For use with inside Lever) 	Includes: Screws 1 ³ / ₄ " door thickness, Right Hand 1 ³ / ₄ " door thickness, Left Hand Other door thickness, Right Hand Other door thickness, Left Hand For other door thickness specify door thickness 501138-K 501138-LK 501138-VK 501138-LVK
9a	Self aligning mechanism (For use with inside knob) 	Includes: Screws 1 ³ / ₄ " door thickness For other doors, specify door thickness 501233-K 501233-VK
10	Clutch Assembly (Mortise lock) 	For door thickness 1 ³ / ₄ " For other doors, specify door thickness 128-509440-2 128-509440-V
10a	Clutch Assembly (Cylindrical lock) 	128-509442
11	Solenoid Housing 	060-505965
12	Lock Controller Board 	124-504960

Lock Replacement Parts

System 700 II Series

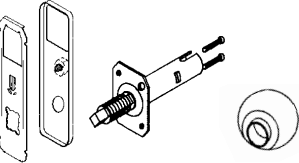

Item	Description	Part #
13	Magnetic Reader Head with Connector 	120-507149
14	LED Window 	Insert Lock 502014-2-K Swipe Lock 502014-1-K
15	Security Bit for Lever Set Screw (5 sided) 	117-506733
	Allen key 3/32" for Lever Set Screw 	138-502728-K
16	Battery Cable 	504409
17	Stop Plate 	Right Hand (marking R2) for all levers 50203801045 Right Hand (marking R2) for all knobs 502038B01045 Left Hand (marking L2) for all levers 502038L01045 Left Hand (marking L2) for all knobs 502038LB01045
18	Retaining Ring 	(not visible in exploded view, concealed in front lock housing) Large for Stop Plate of front Outside Lock Housing 501104-K Small for Turn-Knob Privacy Cam or Back Plate 865-501321-K
19	Stop Plate Microswitch 	(not visible in exploded view, concealed in front lock housing) Right Hand 505568 Left Hand 505568-L Deadbolt Switch assembly 505567-K
	Retrofit of Model 700-1A 	Converts model 700-I(or1A) with 1308(or1308A) mortise to model 700 with ASM mortise 062-509870 model 700-1A with ASM mortise 062-509870-1A Replaces short shaft with long shaft for ASM mortise
	Inside Knob Retro-Kit 	To convert a Lever Lock to a Knob Lock Satin Chrome 062-510465-606 Satin Brass 062-510465-626