


FOR 1/4-20 MACHINE SCREWS USE No.7 (0.201") DRILL & TAP
 FOR #14 WOOD SCREWS USE 5/32" DRILL
 TWO (2) HOLES IN FRAME FOR TRACK

NOTES:

1. DO NOT SCALE DRAWING.
2. DIMENSIONS ARE IN INCHES/(MM).
3. LEFT HAND DOOR SHOWN.
4. SEX NUTS RECOMMENDED FOR ATTACHMENT OF COMPONENTS ON UNREINFORCED, COMPOSITE OR LABELED FIRE DOORS.
5. TEMPLATE FOR 4-1/2" X 4-1/2" BUTT HINGES AND 3/4" OFFSET PIVOTS.
6. MINIMUM DOOR WIDTH 36".

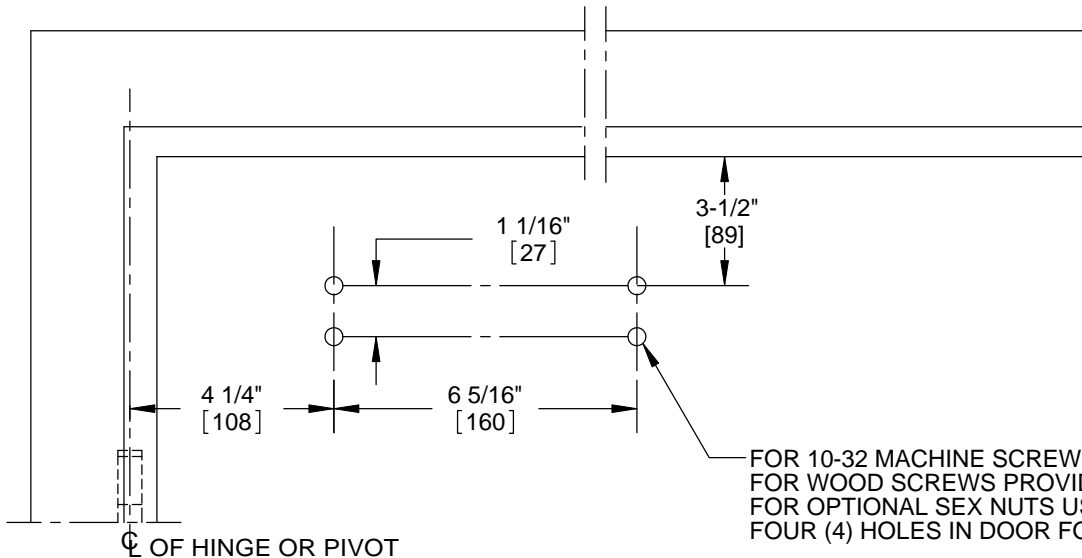

FOR 10-32 MACHINE SCREWS USE No.21 (0.159") DRILL & TAP
 FOR WOOD SCREWS PROVIDED USE 1/8" DRILL
 FOR OPTIONAL SEX NUTS USE 3/8" DRILL
 FOUR (4) HOLES IN DOOR FOR MOUNTING PLATE

DEGREE OF DEADSTOP	DIM. "A"
85°	15-7/8 (403)
90°	15-1/8 (384)
95°	14-3/8 (365)
100°	13-1/4 (337)
105°	N/A
110°	11-7/8 (302)

