




1340KR-EL KEY REMOVABLE MULLION-EL

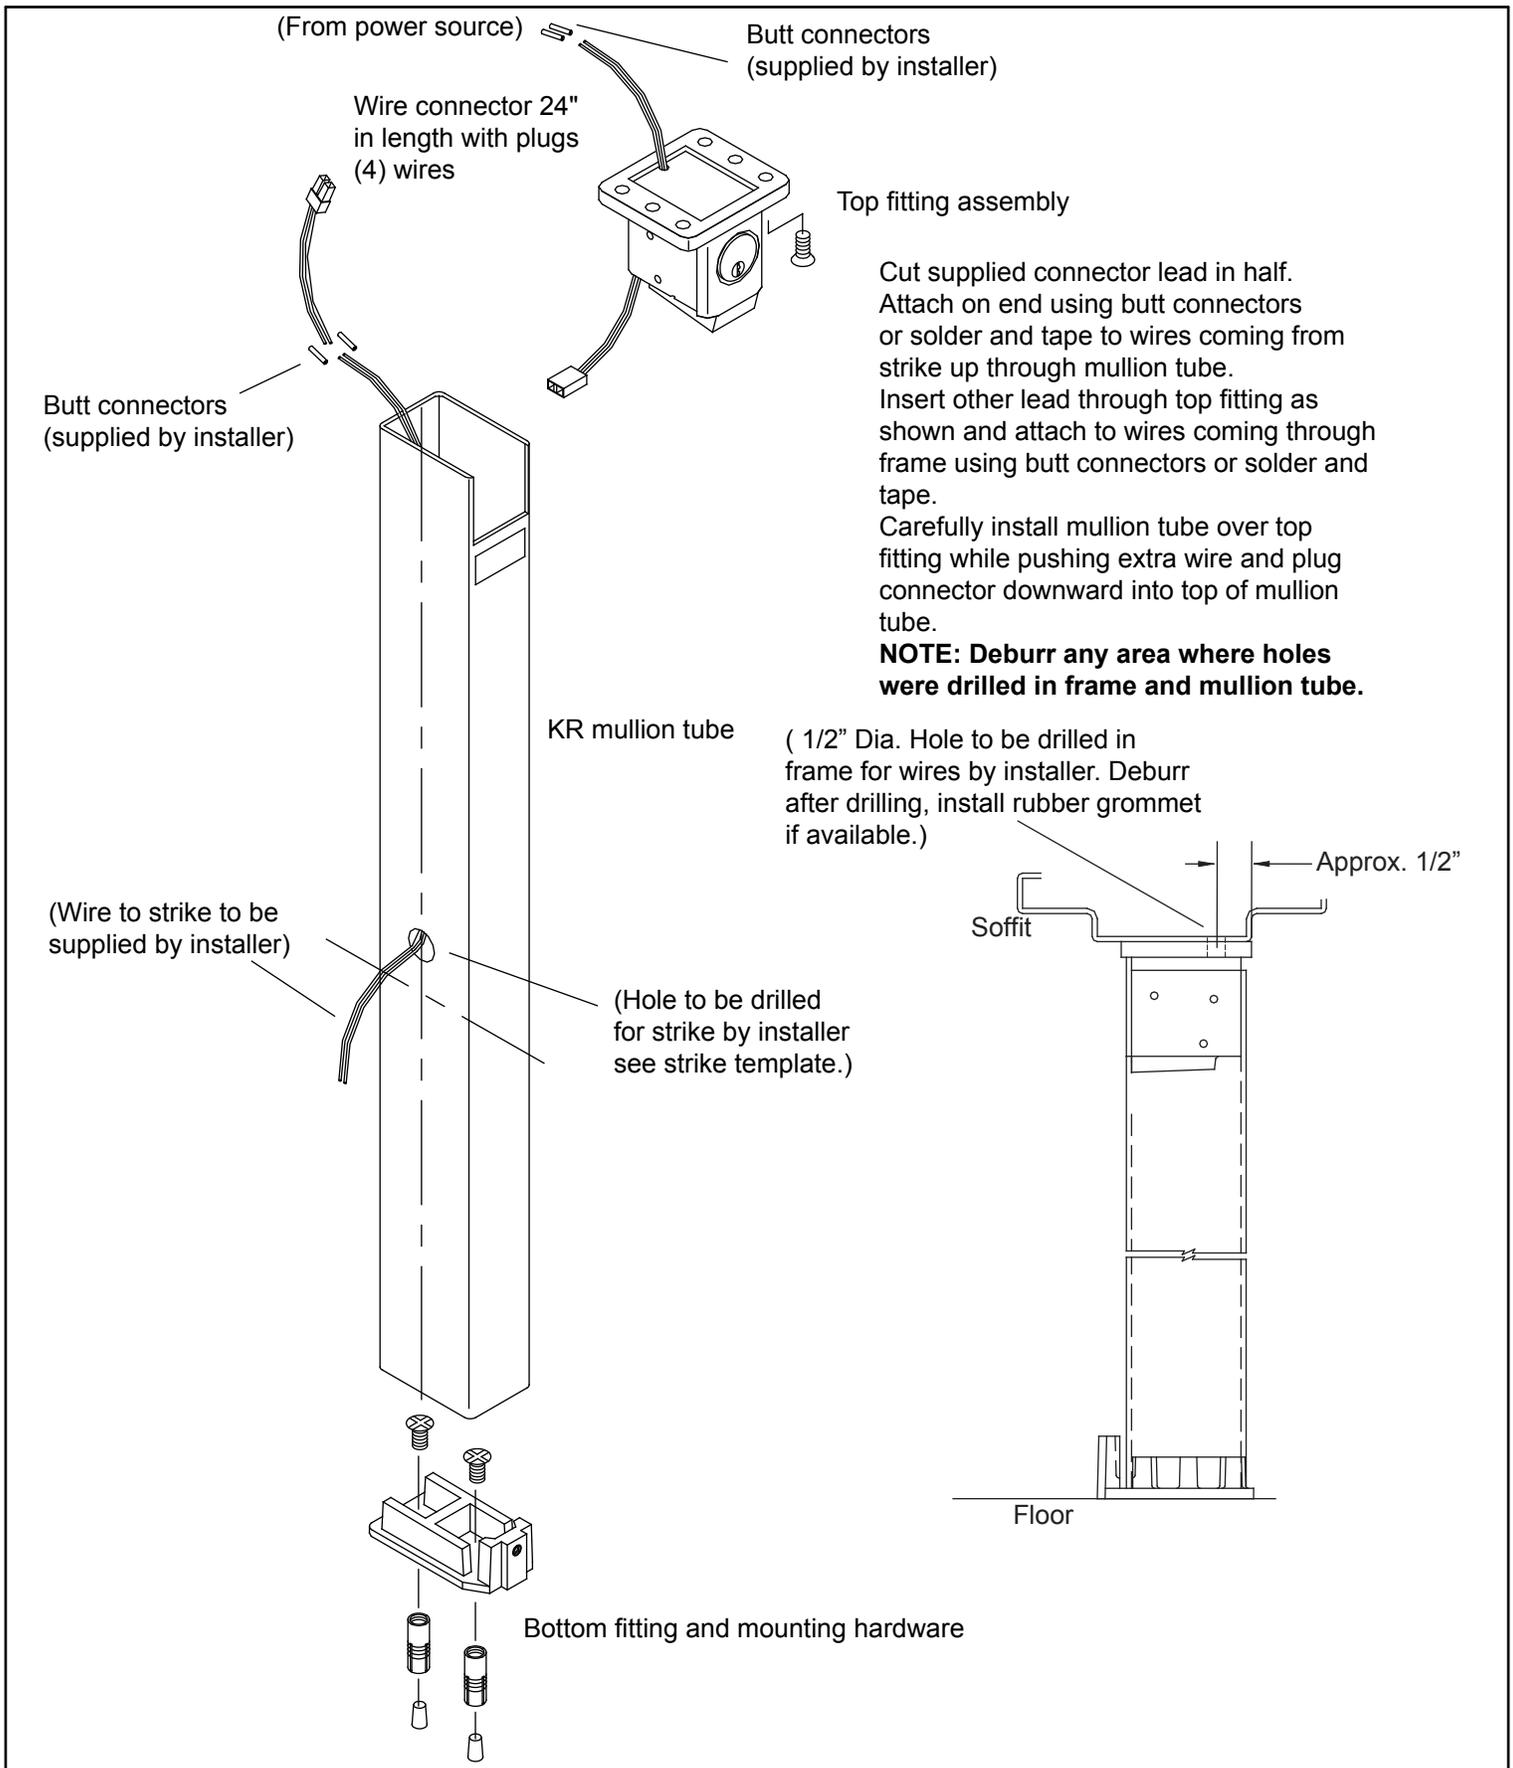

Cut supplied connector lead in half. Attach on end using butt connectors or solder and tape to wires coming from strike up through mullion tube. Insert other lead through top fitting as shown and attach to wires coming through frame using butt connectors or solder and tape. Carefully install mullion tube over top fitting while pushing extra wire and plug connector downward into top of mullion tube.

NOTE: Deburr any area where holes were drilled in frame and mullion tube.

(1/2" Dia. Hole to be drilled in frame for wires by installer. Deburr after drilling, install rubber grommet if available.)

