

TEMPLATE FOR RIM EXIT DEVICE
 YALE 2100/2100F, 7100/7100F
 WITH 757 STRIKE AND CORBIN-RUSSWIN
 ED5200/ED5200A WITH 650F30 STRIKE


LIMITED RIGHTS IN DATA

THIS DOCUMENT CONTAINS PROPRIETARY AND TRADE SECRET DATA OF THE KABA MAS CORPORATION. IT MAY NOT BE USED, REPRODUCED OR RELEASED IN WHOLE OR IN PART FOR ANY PURPOSE OTHER THAN THAT AUTHORIZED BY THE KABA MAS CORPORATION. AUTHORIZATION MUST BE IN WRITING.

NOTES

- 1) PERFORATE ALONG LINE TO AID FOLDING, APPROXIMATELY 10 PERFORATIONS PER INCH. PERFORATIONS TO BE WITHIN .005" OF PRINTED LINE
- 2) BLACK INK ON WHITE PAPER
- 3) ALL TEXT AND DIMENSIONS SHOWN WITHIN THE 11 X 17 OUTLINE IS TO BE PRINTED.

REFERENCE ONLY, NOT TO SCALE
DO NOT USE AS A DRILLING TEMPLATE
CALL 800-849-8324

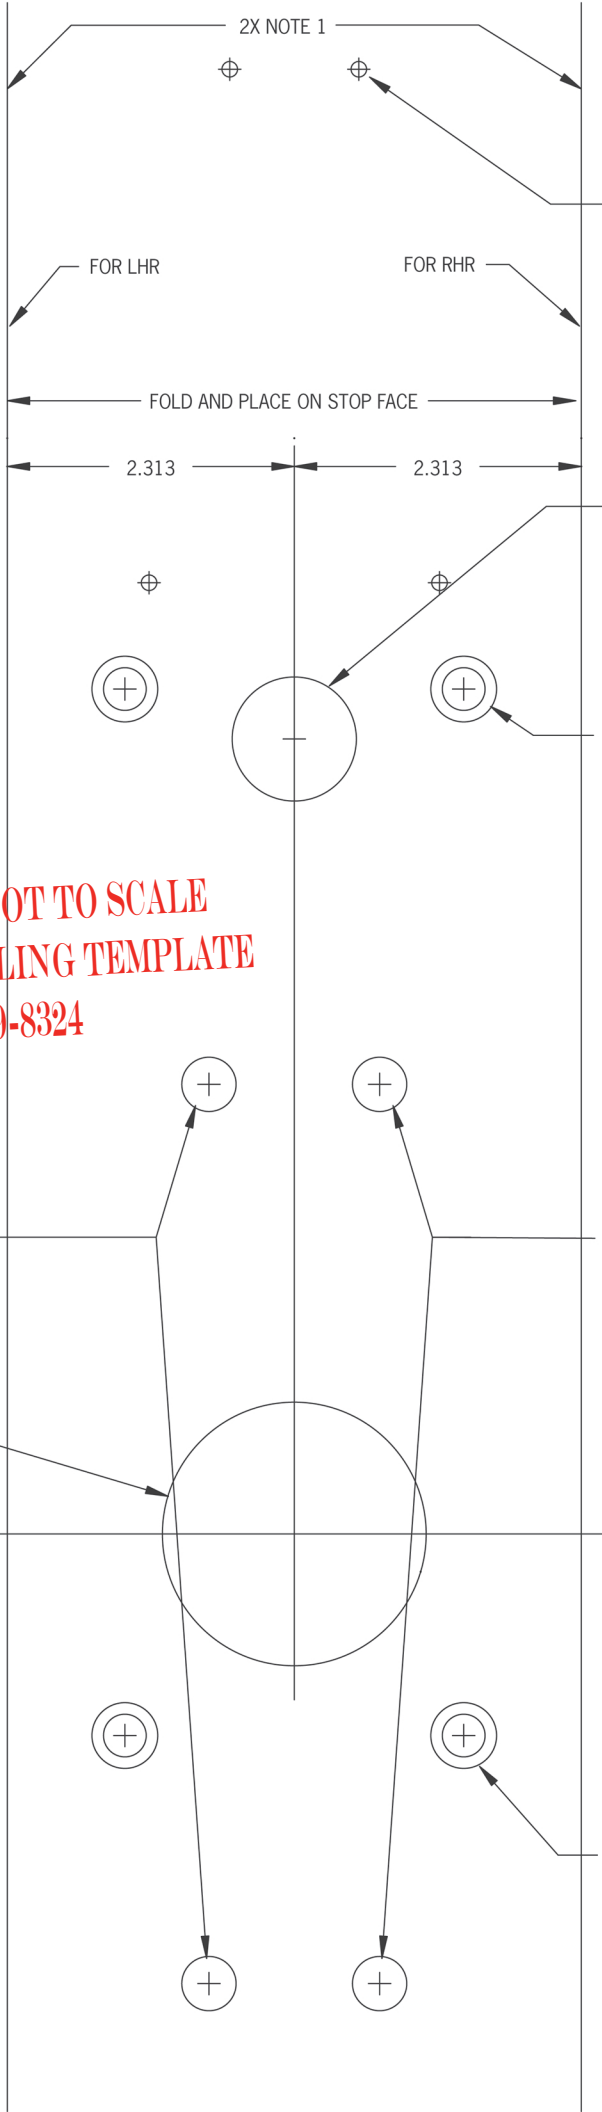

FOR WOOD DOOR:
 -DRILL .125 DIA X 1' DEEP
 ON INSIDE OF DOOR ONLY
 FOR #8 X 1" LONG
 WOOD SCREW
 4 PLCS.

FOR METAL DOOR:
 -DRILL #29 (.136") & TAP #8-32
 ON INSIDE OF DOOR ONLY
 FOR #8-32 X 1/2" LONG
 SEMS MACHINE SCREW
 4 PLCS.

1" DIA THRU FOR
 CABLES TO PASS THRU

FOR POWERLEVER OUTSIDE TRIM:
 1 1/32" DIA THRU HOLE,
 CSK 82? X 1 7/32" DIA
 ON INSIDE OF DOOR ONLY.
 4 PLCS.
 USE 1/4-28 FLAT HEAD
 SCREWS IN TOP 2 HOLES TO
 MOUNT POWER LEVER:
 2 1/4" LONG-1 3/4" THICK DOOR,
 2 1/2" LONG-2" THICK DOOR,
 2 3/4" LONG-2 1/4" THICK DOOR.

FOR RHRB DOORS:
 1 3/32" DIA THRU HOLE.
 USE 10-24 X 1 1/2" LONG
 PAN HEAD SCREWS W/LOCK
 WASHERS IN THESE 2 HOLES
 TO MOUNT EXIT DEVICE. FOR
 LHRB DOORS, THESE HOLES
 ARE NOT USED.

FOR LHRB DOORS:
 1 3/32" DIA THRU HOLE.
 USE 10-24 X 1 1/2" LONG
 PAN HEAD SCREWS W/LOCK
 WASHERS IN THESE 2 HOLES
 TO MOUNT EXIT DEVICE. FOR
 RHRB DOORS, THESE HOLES
 ARE NOT USED.

72.125 THRU HOLE

HORIZONTAL CENTERLINE FOR
 DEVICE AND STRIKE

PowerLever[®]
Door Lock
Series
 P/N 498.084 1205



2941 Indiana Avenue Winston-Salem, NC 27105 USA
 Tel: (800) 849-8324 (336) 725-1331
 Fax: (800) 346-9640 (336) 725-3269

FOR POWERLEVER OUTSIDE TRIM:
 IN THE BOTTOM 2 HOLES
 USE 1/4-28 X 2 3/4" LONG
 FLAT HEAD SCREWS-FOR ALL
 DOOR THICKNESSES