

FOR UTILITY LOCKS, NO DEAD BOLT HOLES ARE REQUIRED.

### INSIDE PREP

REQUIRED FOR ADESE (ODYSSEY) STANDARD MORTISE ONLY

Ø.50 [Ø12.7] ADB ONLY (NOT THRU)

Ø.50 [Ø12.7] STD ONLY (NOT THRU)

3.42 [86.8] ADB DEADBOLT  
2.44 [61.9] STD DEADBOLT

### DOOR EDGE VIEW

2X Ø.17 [Ø4.3] (WOOD DOORS #12-24 TAP (METAL DOORS))

INSIDE HOLE POSITION REGARDLESS OF HAND

1.00 [25.4] LEFT ON LH

Ø.50 [Ø12.7] CHANGES SIDES WITH HAND - ALWAYS CLOSEST TO DOOR EDGE

### OUTSIDE PREP LEFT HAND SHOWN

Ø2.13 [Ø54.0] THRU

.20 [5.1] ALWAYS RIGHT OF CENTER

DOOR EDGE

2.75 [69.9] BACK SET

Ø.88 [Ø22.2] THRU (ALWAYS LEFT OF LOCK CENTER WHEN VIEWED FROM OUTSIDE)

3X Ø.38 [Ø9.5]

4.50 [114.3] FOR STD/ADB (4.70 [119.3] FOR DAJ)

1.75 [44.5]

.50 [12.7]

.30 [7.6]

.23 [5.9]

1.00 [25.4]

6.50 [165.1]

8.00 [203.2]

1.25 [31.8]

(2.50 [63.5])

(2.55 [64.9])

.75 [19.1]

2X R

1.75 [44.5]

1.75 [44.5]

1.25 [31.8]

2X .38 [9.7]

1.50 [38.1]

5.00 [127.0]

2.50 [63.5]

.75 [19.1]

Dimensional Tolerance: ±.02 [0.50]  
TEMPLATE SCALE IS 1:1 IF THIS MEASURES 1" : - - -

\*\*SEE PAGE 2 FOR STRIKE PREP\*\*


# INSTALLATION TEMPLATE QUANTUM RFID™ RECTANGULAR

DATE: 4/18/17

TEMPLATE PART NUMBER/FILENAME:  
QUANTUM RECTANGULAR LOCK PREP  
PAGE 1



DOOR FRAME  
VIEW

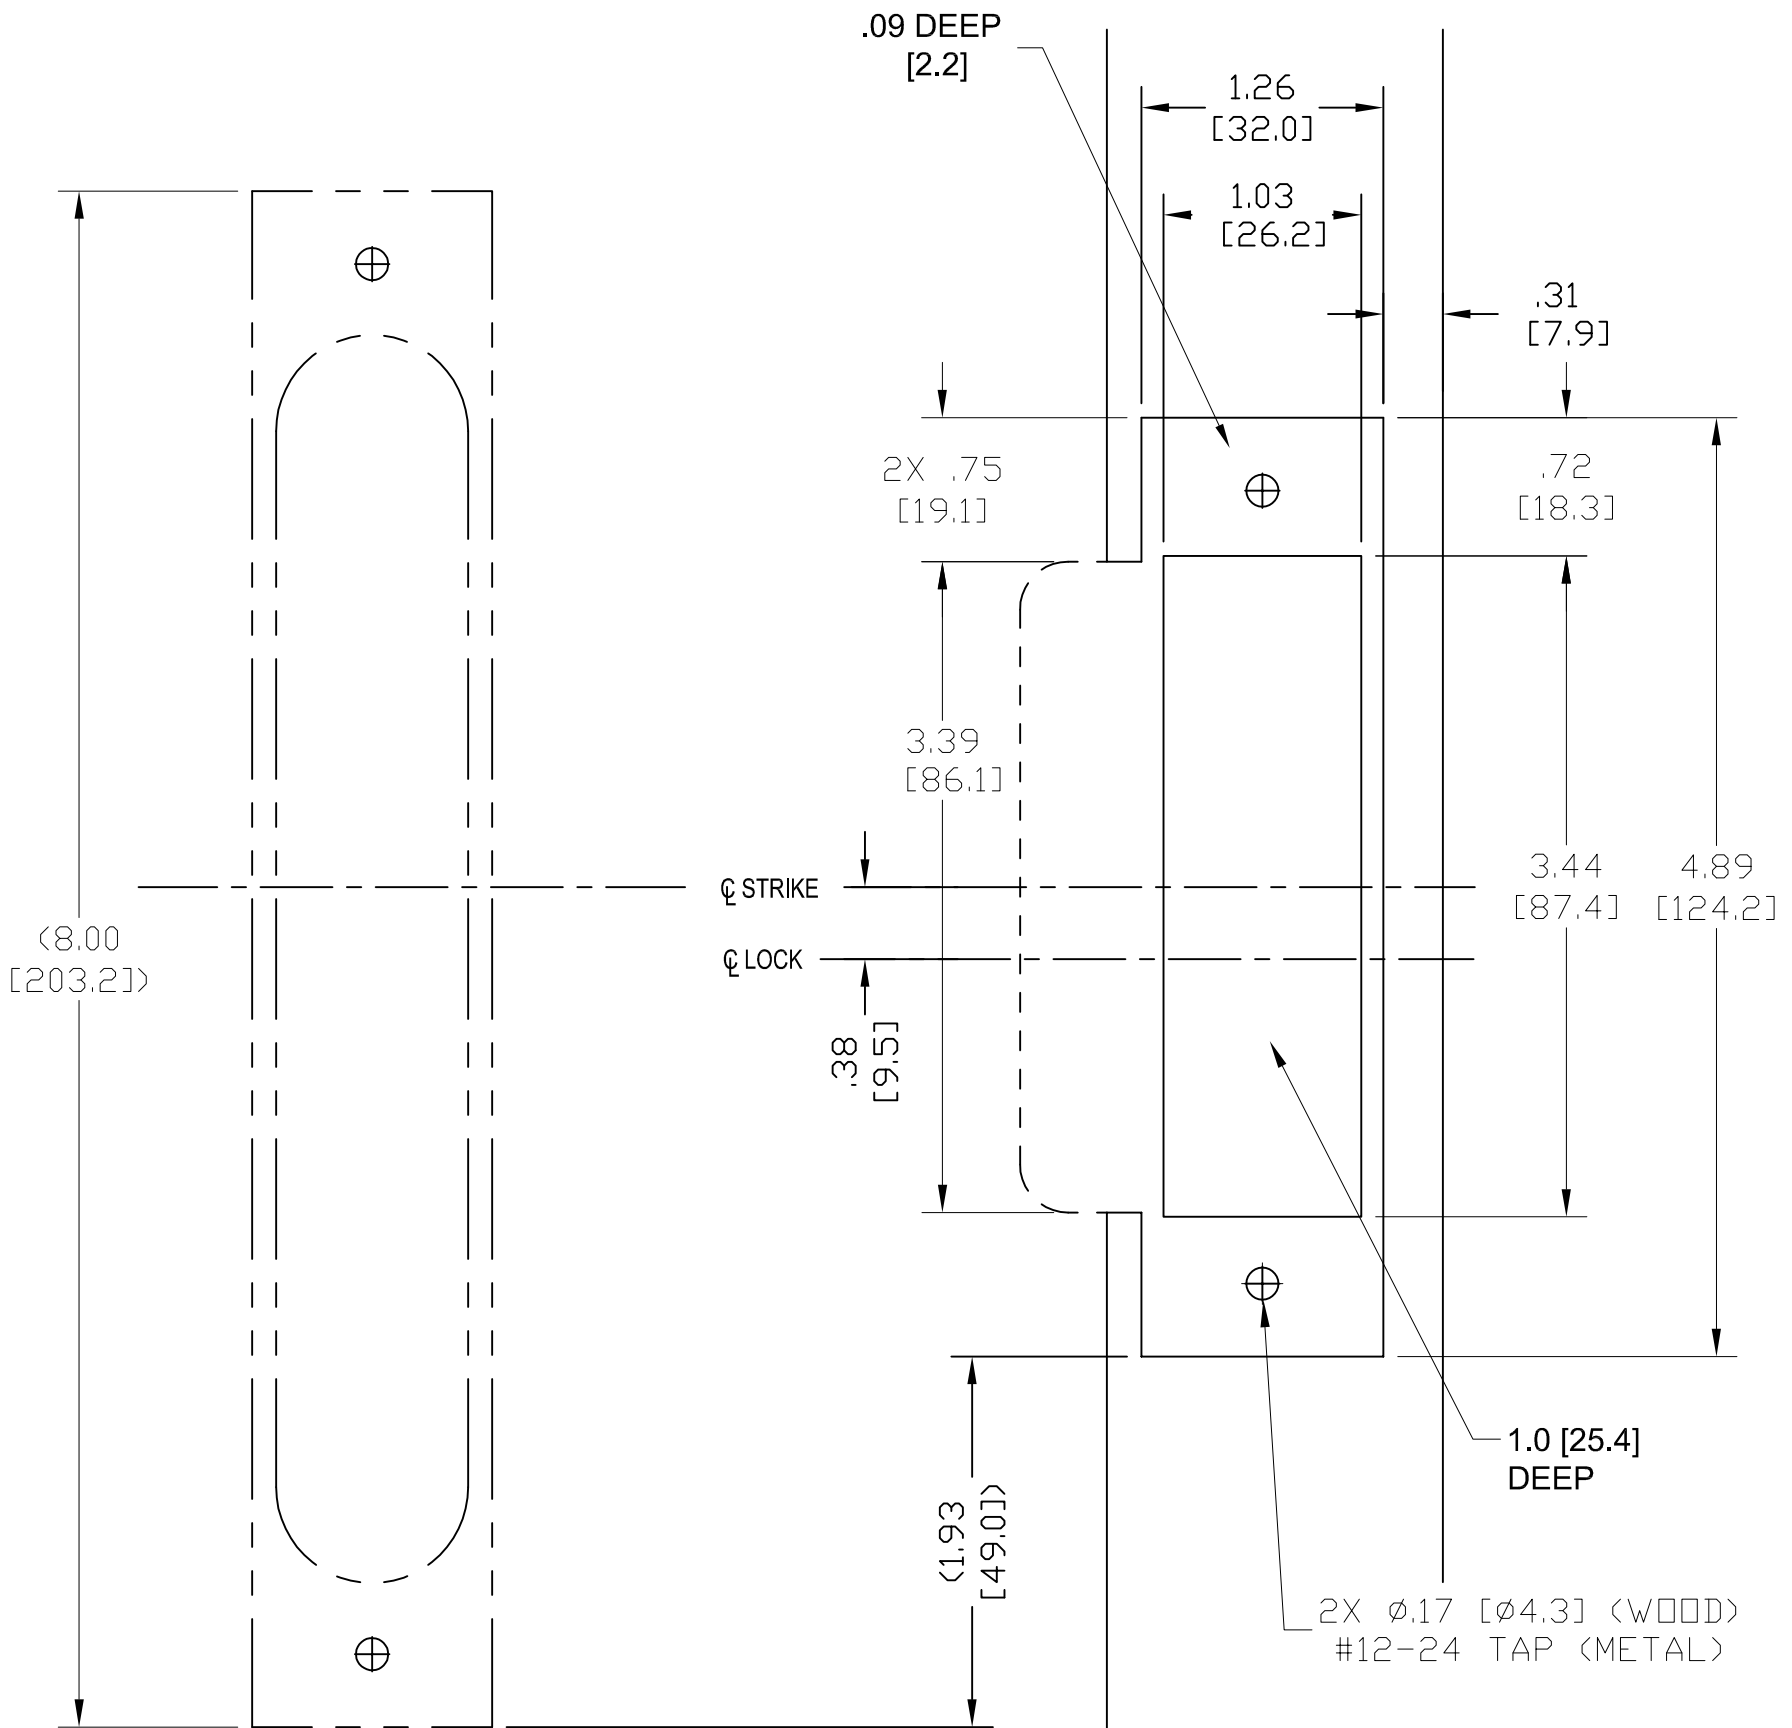

\*\* STRIKE TO BE PREPPED IN ACCORDANCE TO ANSI STANDARDS, ANY MODIFICATIONS TO THE FRAME WILL RESULT IN MISALIGNMENT OF STRIKE. PLEASE CONTACT SAFLOK SALES SUPPORT: 1-800-999-6213 \*\*

DATE: 1/23/17

TEMPLATE PART NUMBER/FILENAME:  
SAFLOK 4-7/8" ANSI STRIKE PREP

DIMENSIONAL TOLERANCE:  $\pm .02$  [0.50]

TEMPLATE SCALE IS 1:1 IF THIS MEASURES 1":



INSTALLATION TEMPLATE  
ANSI 4-7/8" STRIKE PREP