


- NOTES:
1. DIMENSIONS ARE IN INCHES/[MM].
 2. DO NOT SCALE DRAWING.
 3. FOR #12 FHWS, USE 9/64" (.140") DRILL.
 4. FOR #12-24 FHMS, USE #16 (.177") DRILL & TAP.

DOOR CUT-OUTS AS INDICATED UNDER DOOR DETAIL.
FRAME FOR STRIKE SHOWN UNDER LOCK DETAIL.

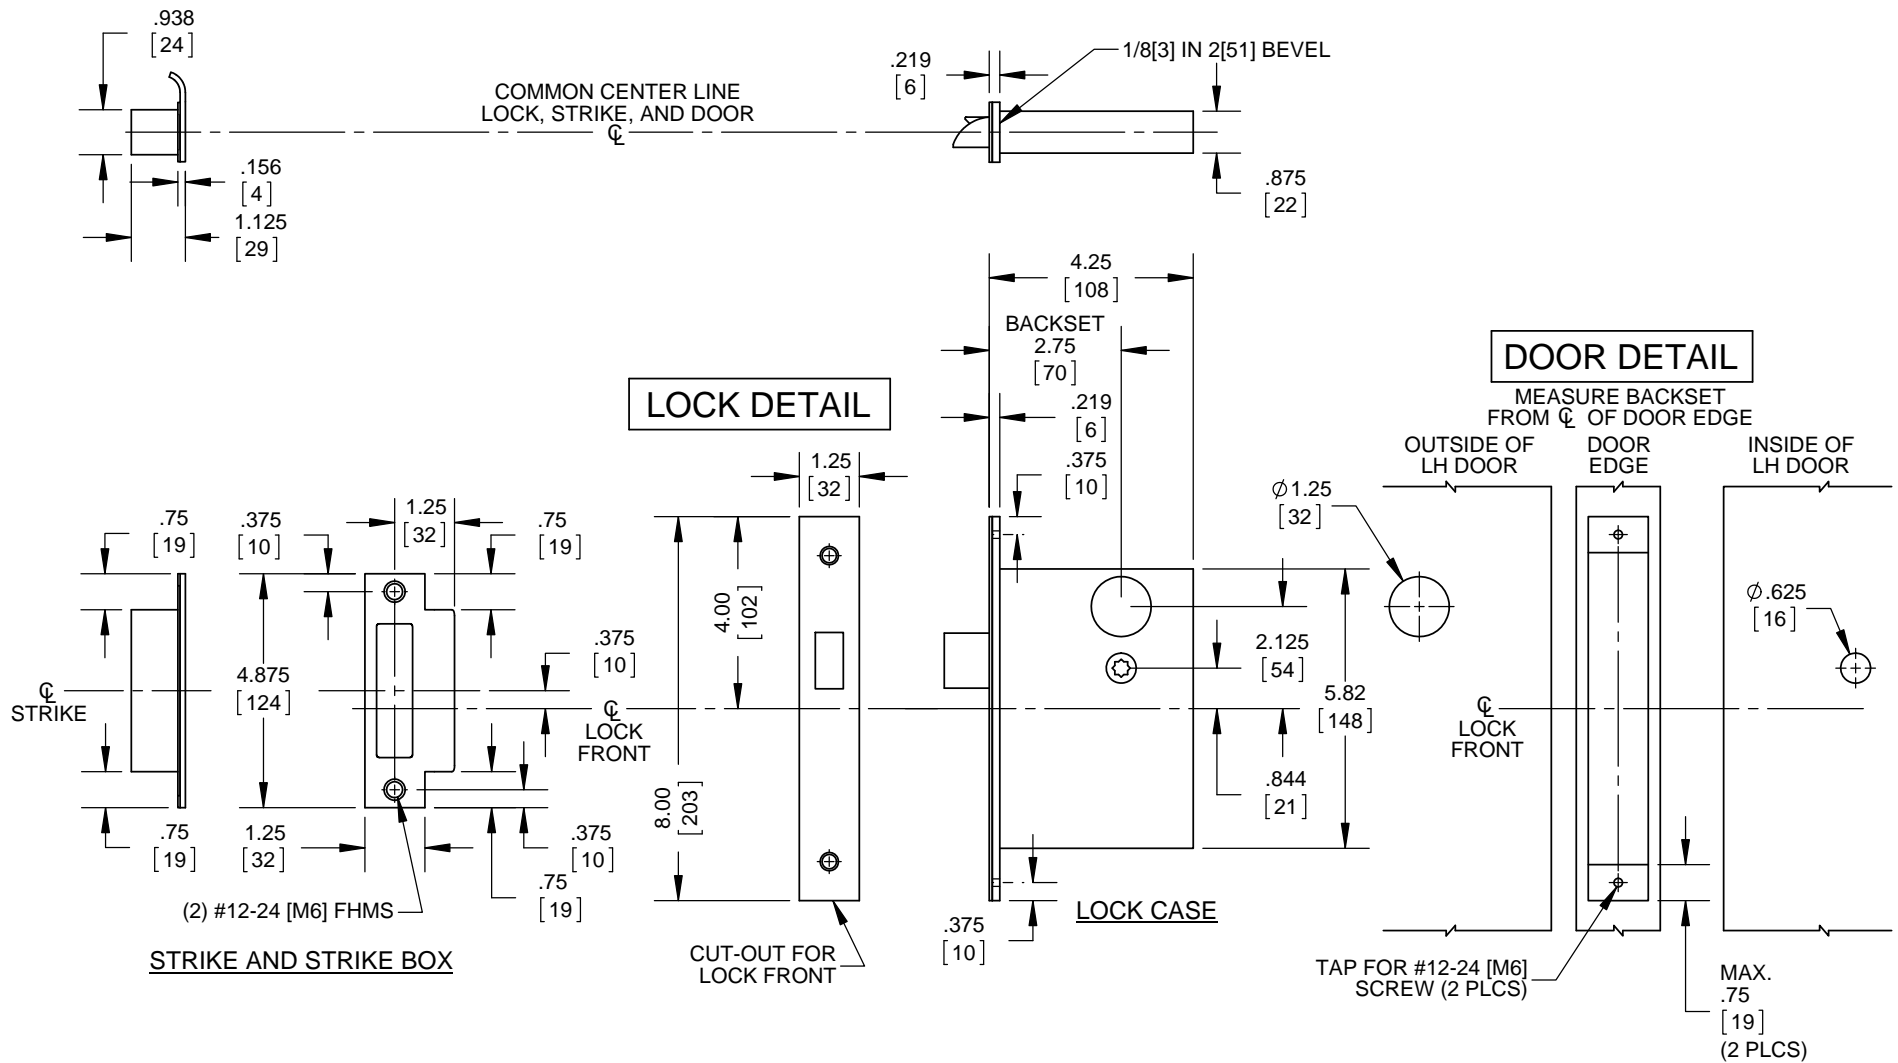

- NOTES:
 1. DIMENSIONS ARE IN INCHES/[MM].
 2. DO NOT SCALE DRAWING.

DOOR CUT-OUTS AS INDICATED UNDER DOOR DETAIL.
 FRAME FOR STRIKE SHOWN UNDER LOCK DETAIL.

STEEL DOORS
 M9960, M9963



DORMA Architectural Hardware
 Reamstown, PA 17567