


ALWAYS CONSULT DORMA'S WEB SITE FOR LATEST TEMPLATE AT WWW.DORMA-USA.COM OR CALL 1 800 523 8483 10 /99

.

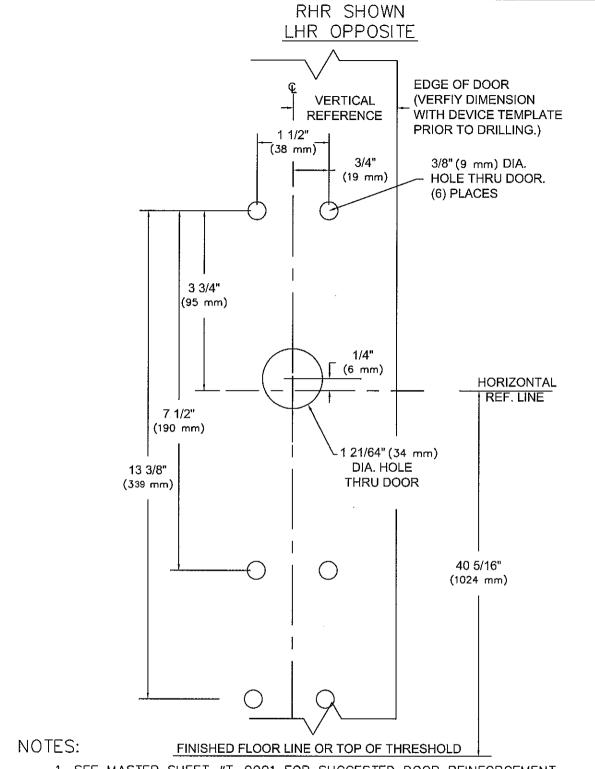

- 1. SEE MASTER SHEET #T-0001 FOR SUGGESTED DOOR REINFORCEMENT.
- 2. SEE ADDITIONAL DEVICE TEMPLATE WHEN REQUIRED.
- "T" STYLE TRIM WILL COVER STANDARD SDI CUTOUT, REQUIRES 80CK KIT.

REV. No. REVSION: Hole Dia. DATE: 5-15-06 TEMPLATE NUMBER V103CV, V303CV, PTT03CV & PRT03CV T-9015 ⑦ **TRIM**