Rev. 03/18

USE 1/8" DRILL FOR No. 10 WOOD SCREWS (6 PLCS)

12-19/32

(320)

13-3/8 (340)

17-31/32


(456)

19-3/16 (487)

+

<del>-</del>

Always consult DORMA's web site for latest template at www.dorma-usa.com or call 1-800-523-8483.

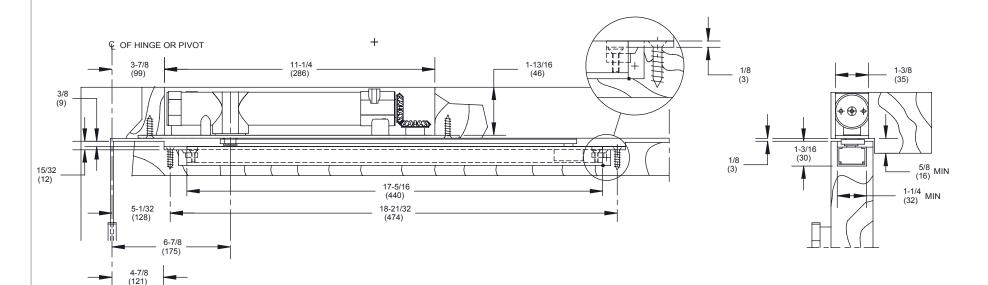

## **DOOR PREP**

R 5/16 (8) (16 PLCS)

25/32

+) € OF DOOR

FRAME PREP

3. RIGHT HAND DOOR SHOWN. 4. MAXIMUM OPENING APPROX. 130°

2. DIMENSIONS ARE IN INCHES/(MM).

5. HOLD OPEN RANGE 80°-120°.

DO NOT SCALE DRAWING.

NOTES:

R5/16"

(8)

6. DOOR HUNG ON 4-1/2" X 4-1/2" BUTT HINGES OR 3/4" OFFSET PIVOTS- LESS TOP PIVOT.

7. ITS96 MAY BE USED ON LABELED WOOD DOORS PENDING APPROVAL OF WOOD DOOR MANUFACTURER.

8. 5/8" MAXIMUM BETWEEN € OF CLOSER AND & OF TRACK.

9. SEE BROCHURE FOR MAXIMUM DOOR WIDTH.

10. ADEQUATE BLOCKING TO BE SUPPLIED BY WOOD DOOR MANUFACTURER FOR MOUNTING TRACK IN DOOR.

DOOR CLOSER MODEL: ITS9613 CLOSER IN FRAME, TRACK IN DOOR WITH ACCESSORY TRACK BRACKETS

(WOOD DOOR AND FRAME)

5/8 (16)

> 2-7/8 (73)



DORMA Architectural Hardware Reamstown, PA 17567