


NOTES:

1. DO NOT SCALE DRAWING.
2. DIMENSIONS ARE IN INCHES/(MM).
3. STRIKE LOCATION ON FRAMES MUST BE ADJUSTED FOR THICKNESS OF DOOR SILENCERS WHEN USED.
4. CURVED STRIKE EXTENSION BEYOND JAMB AT "Z" MUST NOT BE LESS THAN 3/16"(5).
5. 1-1/8"(29) LIP LENGTH FOR 1-3/8"(35) TO 1-3/4"(44) DOORS. OTHER LENGTH AVAILABLE.
6. DIMENSIONS X,Y, Z ARE VARIABLES DEPENDING ON DOOR THICKNESS.


Always consult Dorma's web site for latest template at [www.dorma-usa.com](http://www.dorma-usa.com) or call 1-800-523-8483.

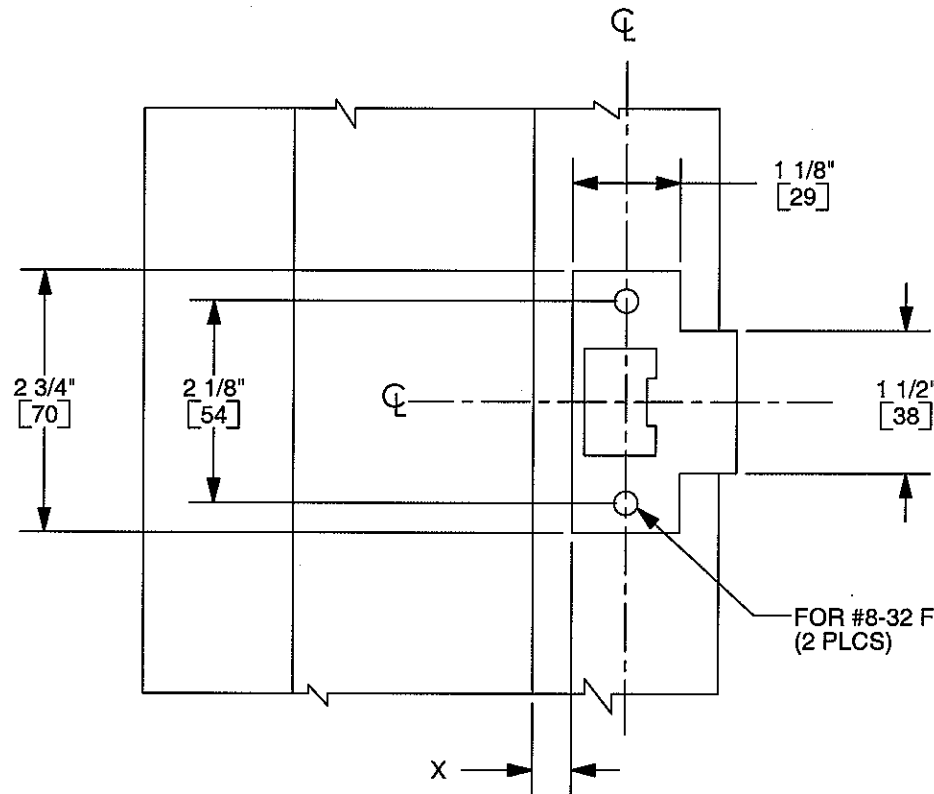

NOTES:

1. DO NOT SCALE DRAWING.
2. DIMENSIONS ARE IN INCHES/(MM).
3. STRIKE LOCATION ON FRAMES MUST BE ADJUSTED FOR THICKNESS OF DOOR SILENCERS WHEN USED.
4. CURVED STRIKE EXTENSION BEYOND JAMB AT "Z" MUST NOT BE LESS THAN 3/16"(5).
5. 1-1/8"(29) LIP LENGTH FOR 1-3/8"(35) TO 1-3/4"(44) DOORS. OTHER LENGTH AVAILABLE.
6. DIMENSIONS X,Y, Z ARE VARIABLES DEPENDING ON DOOR THICKNESS.

FOR #8-32 FHMS (M4) DRILL 7/64 (0.109") AND TAP (2 PLCS)

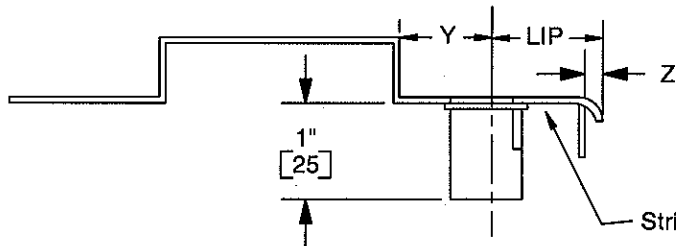

Always consult Dorma's web site for latest template at [www.dorma-usa.com](http://www.dorma-usa.com) or call 1-800-523-8483.