


**NOTES**

1. Allow plus tolerance for clearance per ANSI A115.2.
2. Lock and latch case support by door manufacturer.
3. Plaster guard by door manufacturer.
4. Prepare for a #8-32 screw.
5. When a strike box is used, 9/64" [3.6 mm].
6. For all electrified products that require concealed wiring, a 3/8" [10 mm] diameter raceway through the door is required.
7. Extend the latch bore to provide room for TCM connections. (1" [25 mm] dia. x 3" [76 mm] deep).
8. For 3-3/4" [95 mm] and 5" [127 mm] backsets, position the vertical centerline of the lock appropriately.

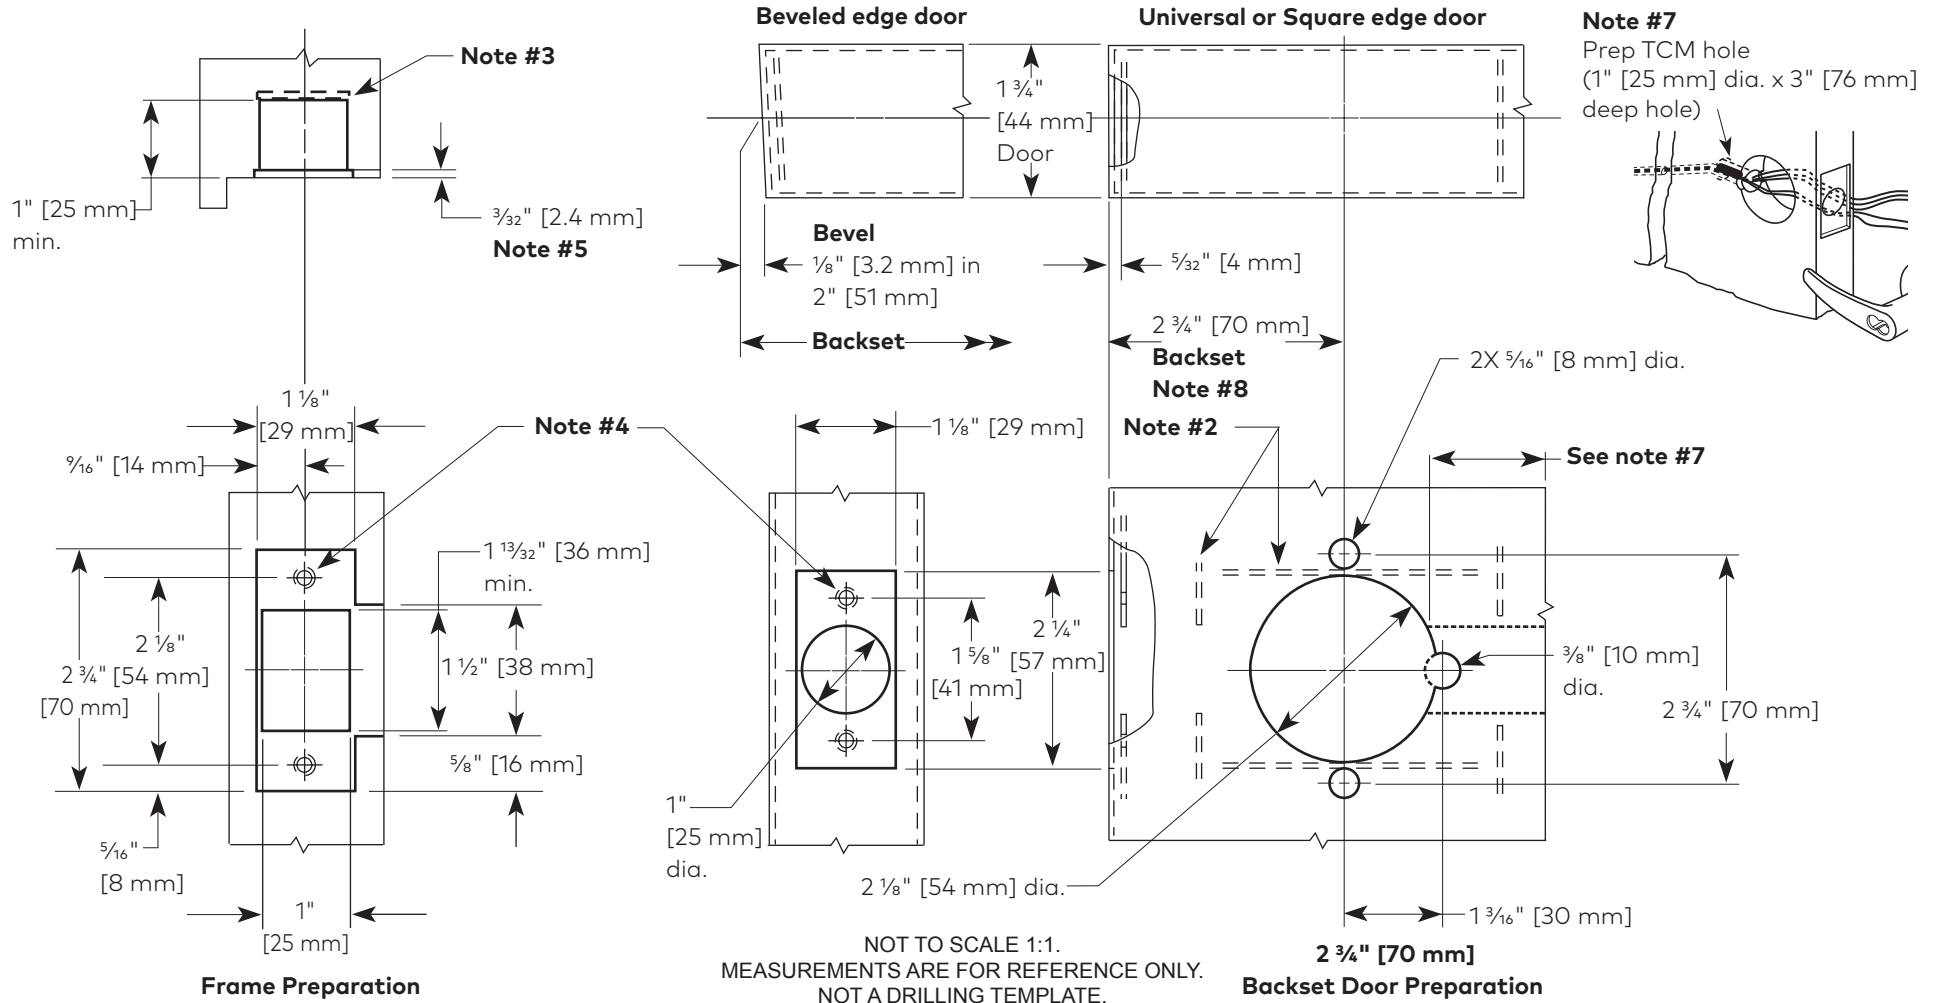

METAL OR WOOD DOOR FOR:  
C100 SERIES WITH 2-3/4" BACKSET  
ELECTRIFIED TRIM

