




In or Out...we make it Easy!®

IMPORTANT: FOR NON FIRE RATED MODELS ONLY

This part can be used to cover previous frame cutouts before installing an RCI No Cut strike

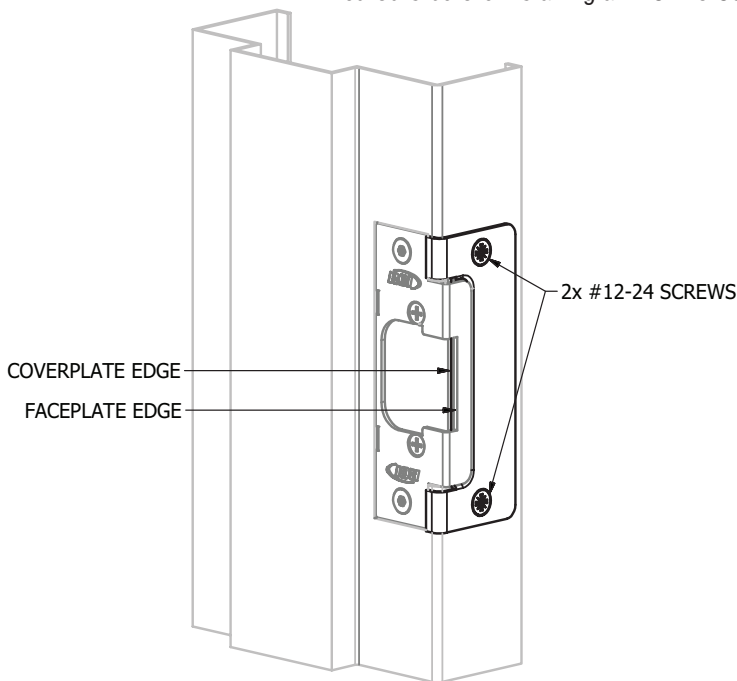

Step 1: Align coverplate edge with faceplate edge.

This is critical for cylindrical models 5114, 5114LM, 5314 or 5314LM.

Step 2: Mark center of 2 x coverplate mounting holes on the frame

Step 3: Drill and tap marked hole center for #12-24 screws.

Step 4: Secure the strike to the frame per IS5CYL and IS5MORT instructions.