TMP NO. 08279172

PAGE 1 OF 1

REV. 3/21

Always consult dormakaba's web site for latest template at www.dormakaba.us or call 1-800-523-8483.


ANGLE OF


CUSHION

NOTES:

- 1) DO NOT SCALE THIS DRAWING
- 2) DIMENSIONS ARE IN INCHES / [MM]
- 3) RIGHT HAND DOOR IS SHOWN
- 4) CAUTION: SEX NUTS ARE REQUIRED FOR ATTACHMENT OF COMPONENTS TO UNREINFORCED DOORS AND TO WOOD OR PLASTIC FACE COMPOSITE TYPE FIRE DOORS, UNLESS AN ALTERNATIVE METHOD IS IDENTIFIED IN THE INDIVIDUAL DOOR MANUFACTURER'S LISTINGS.
- 5) OPTIONAL DPK FASTENERS (DPK86) FOR STEEL DOOR & FRAME ONLY.

9-3/8" 12-1/4" 83°-85° [238] [311] 8-7/8" 11-3/4" 88°-90° [225] [298] 10-3/4" 7-7/8" 98° - 100° [273] [200] ARM SHOE - TWO (2) HOLES IN FRAME 7-1/8" 10" 5/16-18 MACHINE SCREWS - #F (0.257") DRILL & TAP 108° - 110° No.20 WOOD SCREWS - 7/32" DRILL [181] [254] DPK FASTENERS - 1/8" DRILL

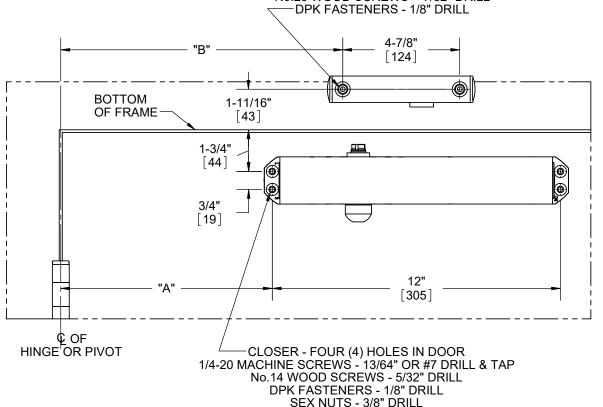

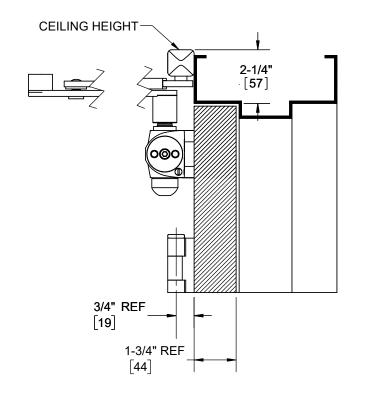

DIMENSION "A" DIMENSION "B"

(ARM SHOE)

(CLOSER)

TMP NO. 08279174

PAGE 1 OF 1


REV. 3-21

Always consult dormakaba's web site for latest template at www.dormakaba.us or call 1-800-523-8483.

NOTES:

- 1) DO NOT SCALE THIS DRAWING
- 2) DIMENSIONS ARE IN INCHES / [MM]
- 3) RIGHT HAND DOOR IS SHOWN
- 4) CAUTION: SEX NUTS ARE REQUIRED FOR ATTACHMENT OF COMPONENTS TO UNREINFORCED DOORS AND TO WOOD OR PLASTIC FACE COMPOSITE TYPE FIRE DOORS, UNLESS AN ALTERNATIVE METHOD IS IDENTIFIED IN THE INDIVIDUAL DOOR MANUFACTURER'S LISTINGS.
- 5) OPTIONAL DPK FASTENERS (DPK86) FOR STEEL DOOR & FRAME ONLY.

DIMENSION "A" DIMENSION "B" ANGLE OF CUSHION (BACK PLATE) (ARM SHOE) 12-1/4" 9-3/4" 83°-85° [248] [311] 9-1/4" 11-3/4" 88°-90° [235] [298] 10-3/4" 8-1/4" 98° - 100° [273] [210] 10" 7-1/2" 108° - 110° [191] [254]

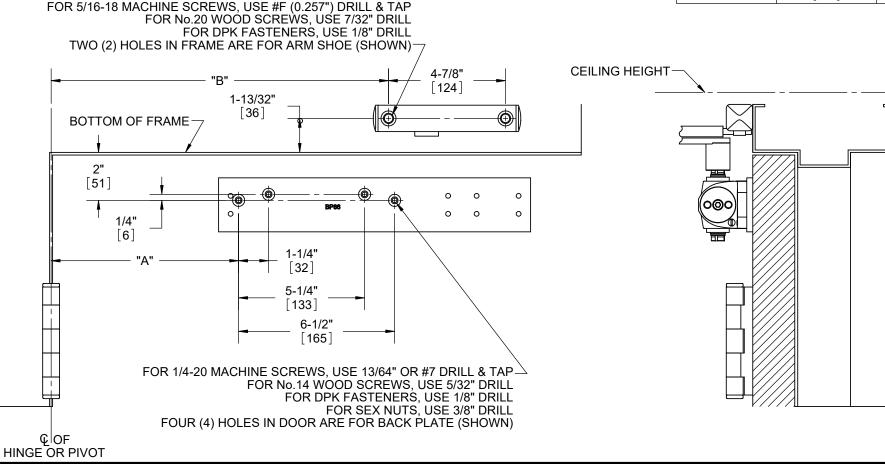

DOOR CLOSER MODELS: 8616 SIS REGULAR INSTALLATION (PULL SIDE MOUNT) WITH BACK PLATES BP86 & BP86FC SPRING INTEGRA CUSHION ARM

dormakaba 🚧

dormakaba USA Inc DORMA DRIVE REAMSTOWN, PA 17567 800 523 8483

2-1/2" MIN.

[64]