


# Installation Instructions

## 355.5 Floor Pivot

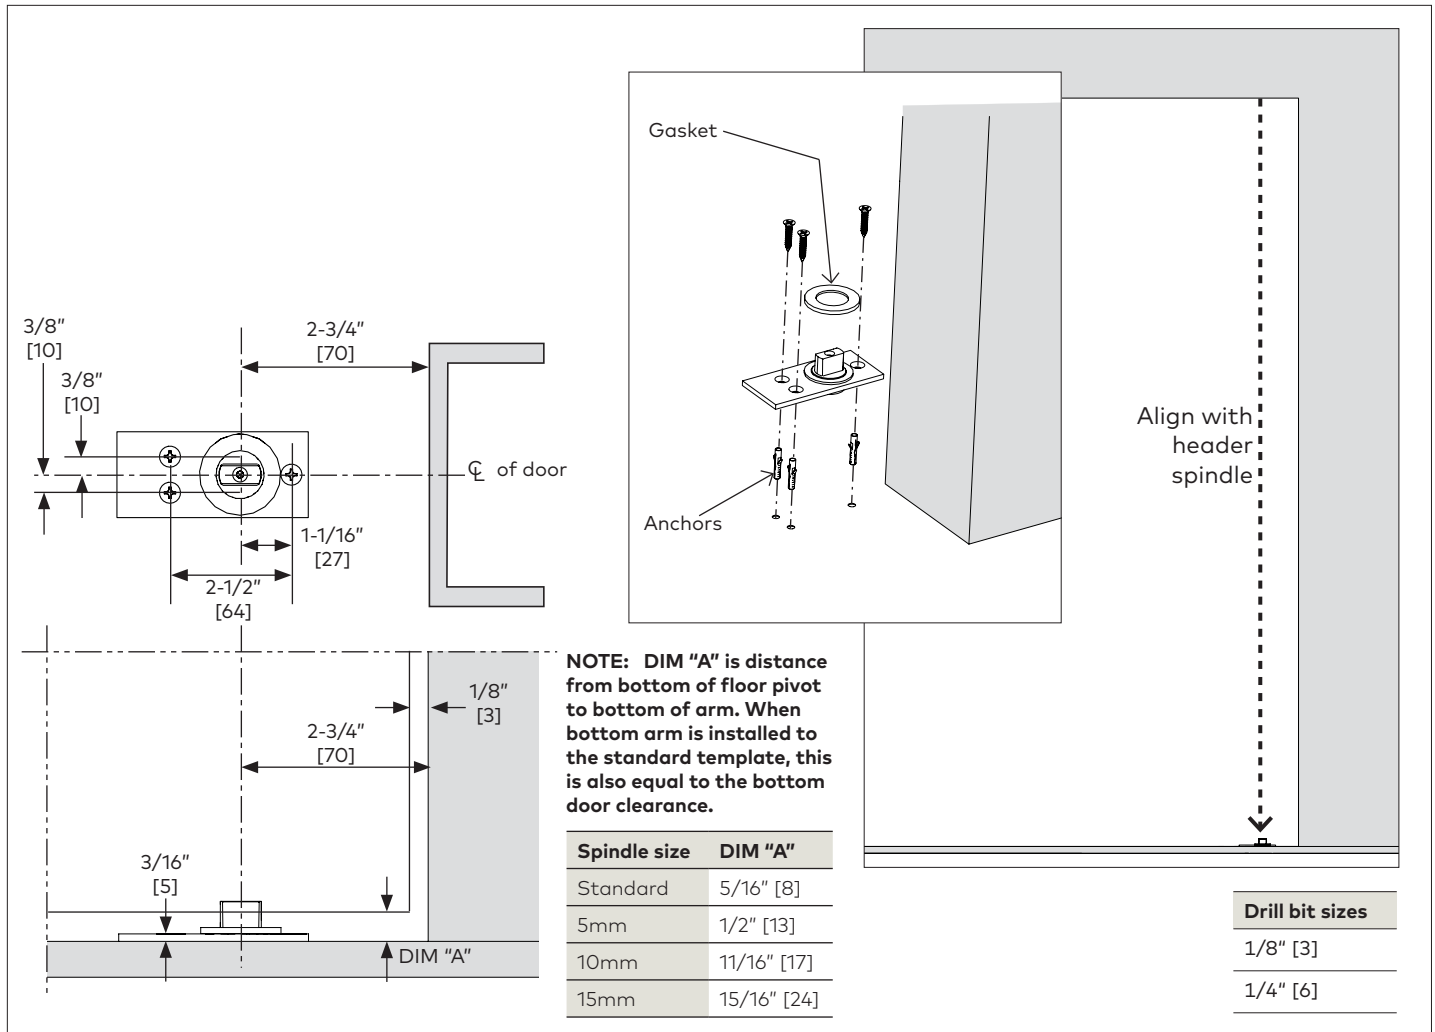

- 1.1 Using a plumb bob, align header spindle with bottom pivot spindle.
- 1.2 Mark and drill holes, and recess in flooring surface.
  - Recess: 1-1/2" [38] deep x 3/8" [10] diameter recess
  - Wood Floors: 1/8" [3] drill bit.
  - Concrete Floors: Drill 1" [25] deep holes, using 1/4" [6] drill bit.
- 1.3 Insert anchors, if necessary.
- 1.4 Ensure pivot is aligned and plumb.
- 1.5 Slide gasket onto pivot extension.
- 1.6 Secure floor bearing with included fasteners.