


FIRE RATED LESS BOTTOM ROD POPPER INSTALLATION INSTRUCTIONS FOR PAIRS OF DOORS

1. Lay out parts included in kit.
2. Drill 1" (25 mm) Dia. hole per detail below in active leaf door edge. Install popper cap.
3. Drill 13/16" (21 mm) Dia. hole per detail below in in-active leaf door edge.
4. Install POPPER ASSEMBLY in edge of in-active door.
5. Install (4) screws as shown. (6-32 Tap for metal door.)

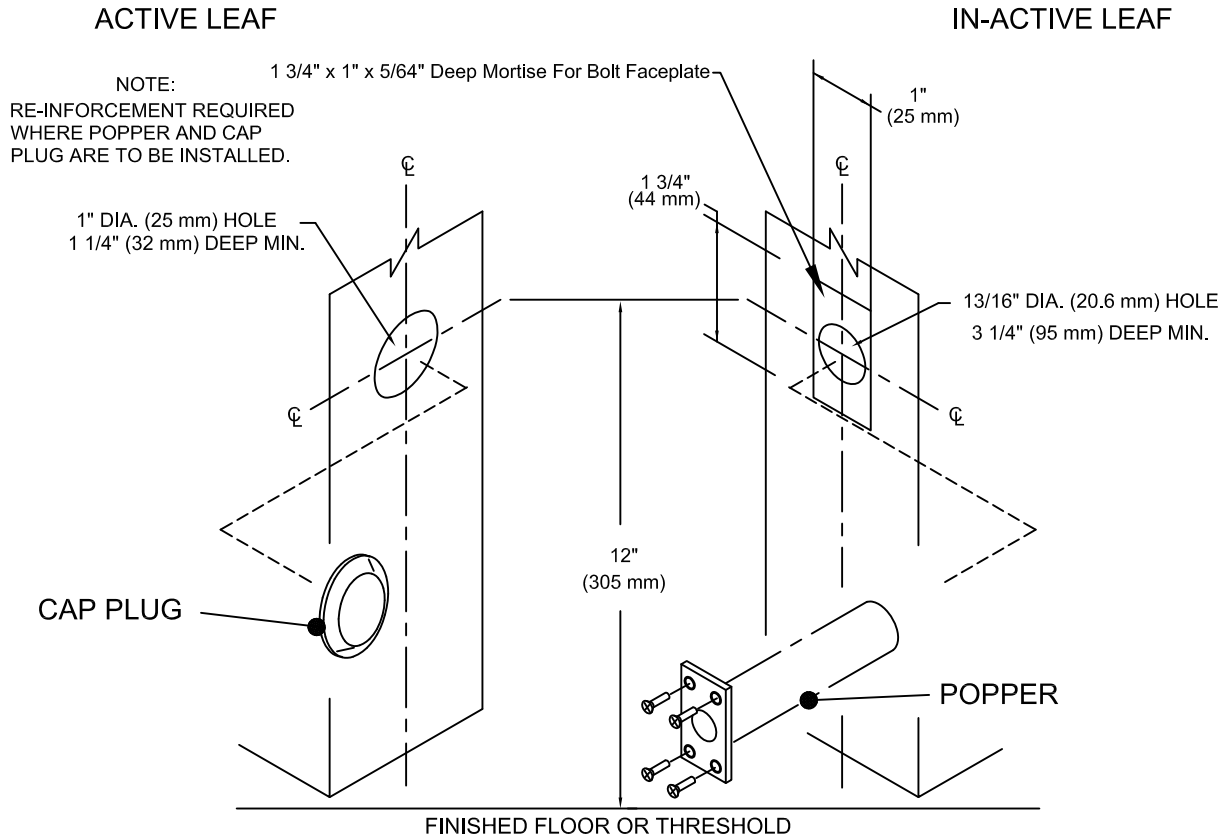

REV. No. 4	REVISION: DIM. ERROR	DATE: 2-10-09
	<p>POPPER INSTALLATION INSTRUCTIONS</p>	<p>TEMPLATE NUMBER</p> <p>T-4012 (4)</p>