



760/76M Rework Installation Sheet


IMPORTANT: Wear Safety glasses before starting the replacement of parts.

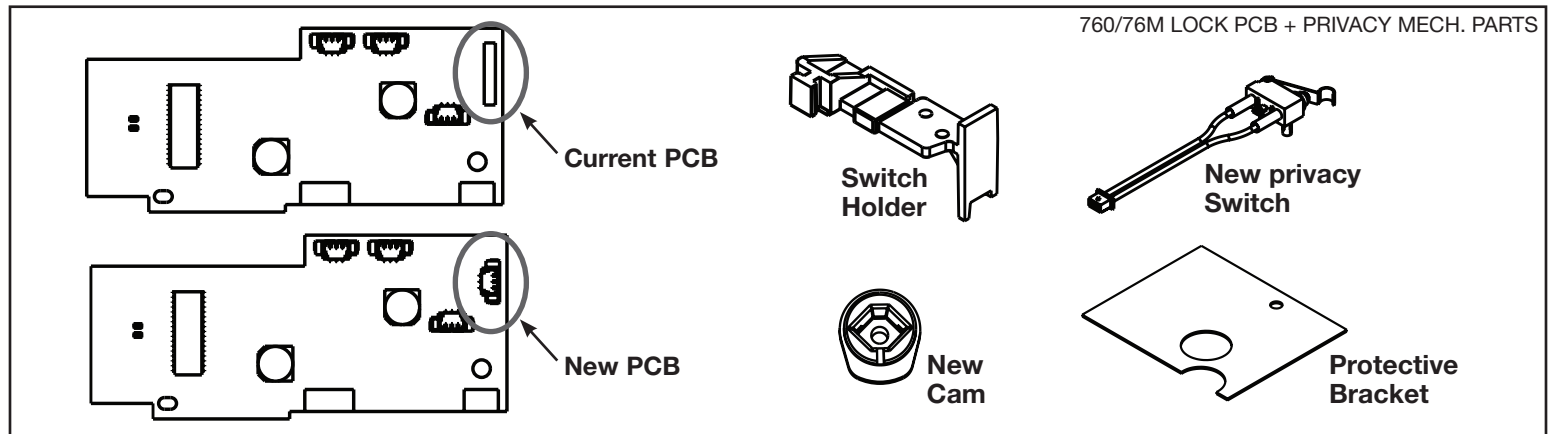


1 Remove screw and take out battery pack

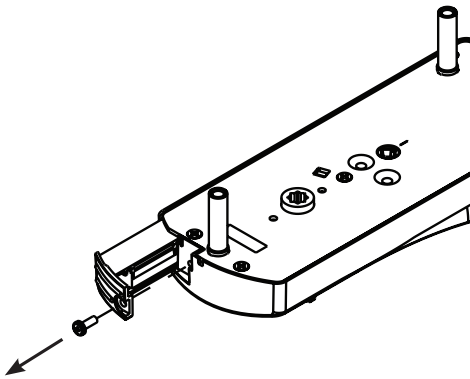


2 Remove 5 screws and take off the back plate

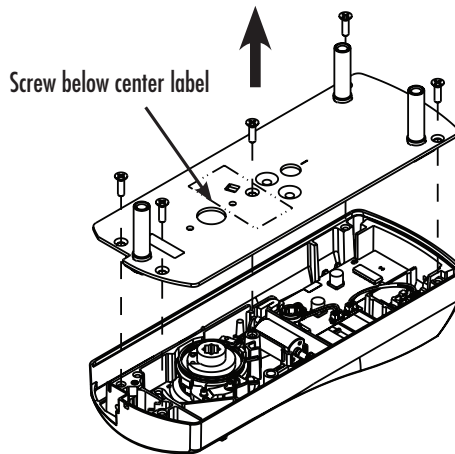


3 Assemble protective bracket and hold with one of the 5 screws from step 2

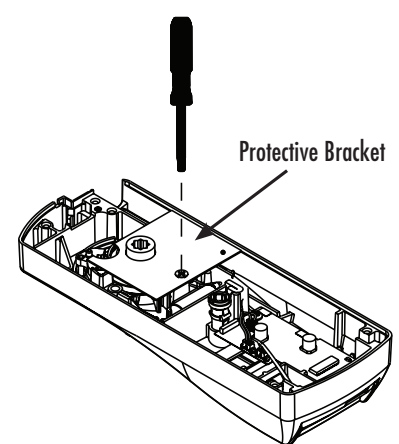


4 Remove foam, cam & screws and disconnect cables

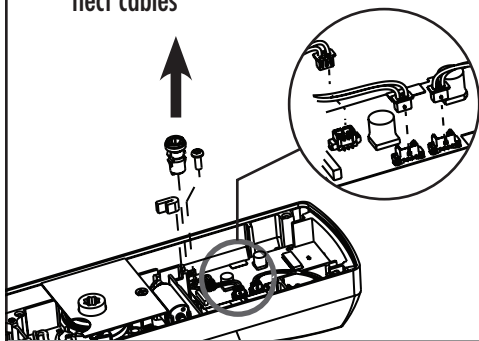

5 Remove PCB

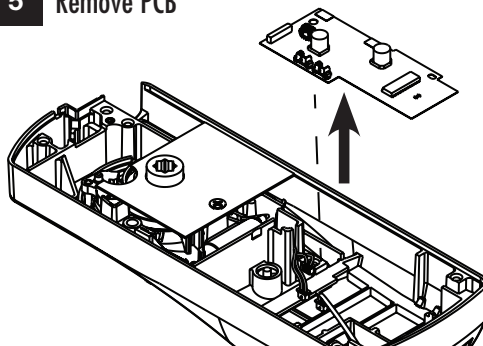


6 Assemble New PCB

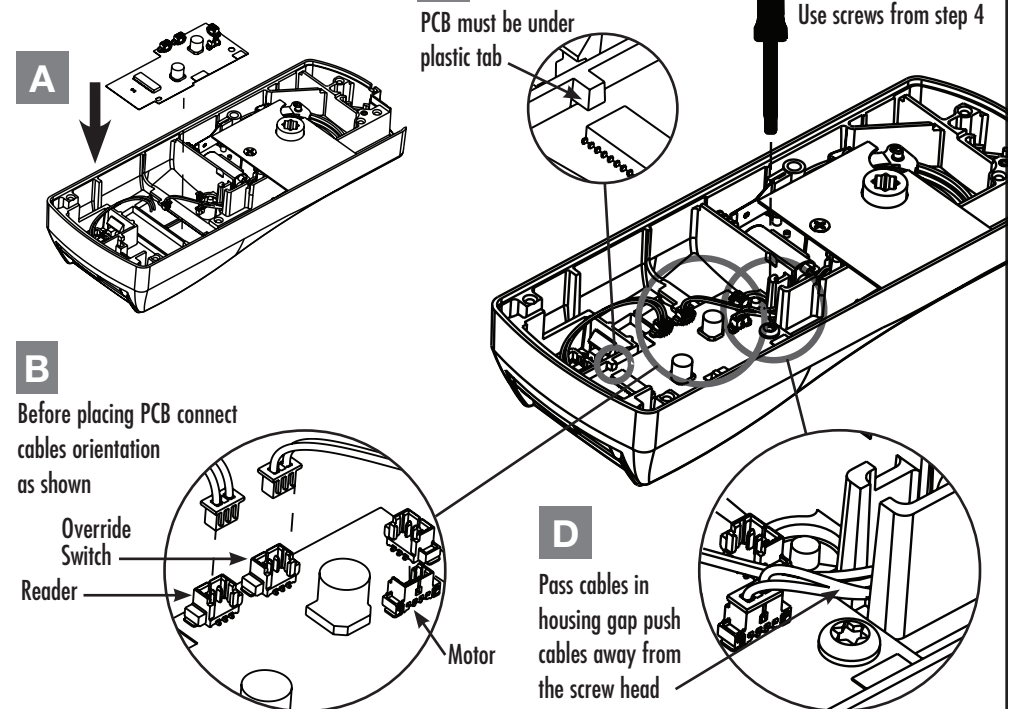


760 Rework Installation Sheet


- 7** Connect privacy switch to PCB. Location as shown

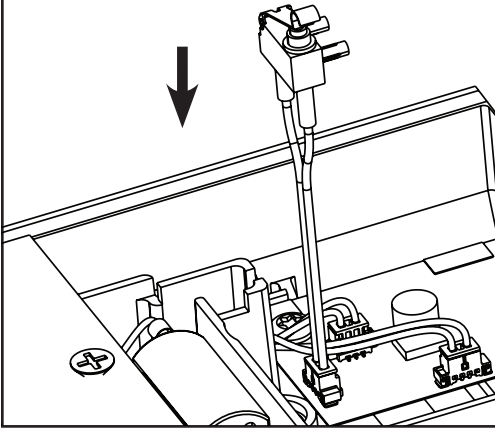


- 8** Assemble the switch holder, push down until it sits on the housing, be careful not to pinch wires.

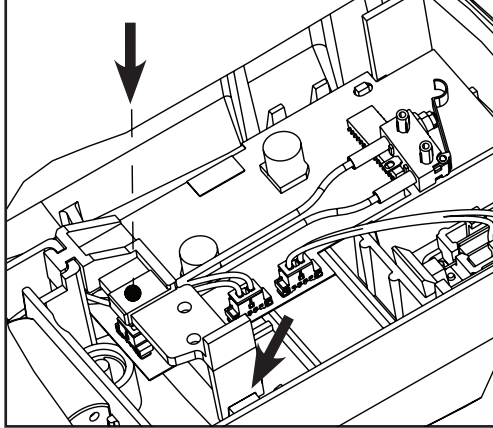

- 9** Assemble privacy switch on switch holder

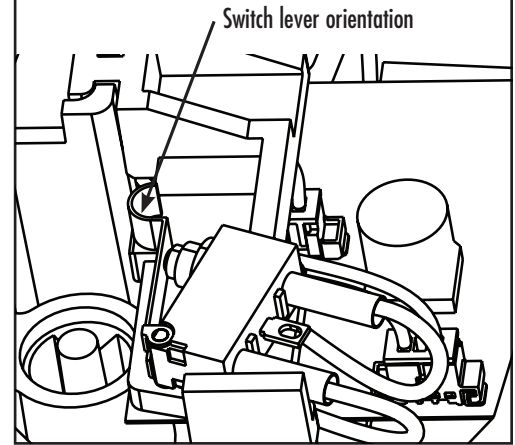


- 10** Assemble new cam. Move switch lever (see arrow) first and assemble cam after

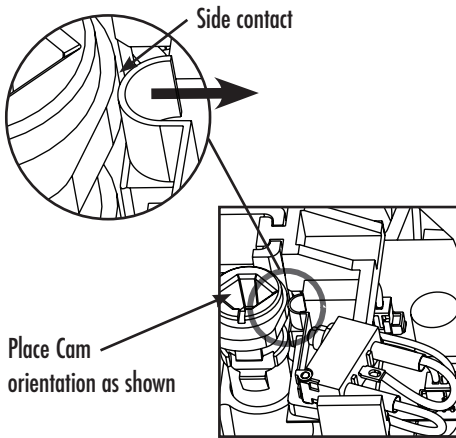


- 11** Remove protective bracket

Be careful that the spring does not jump and is still in its position

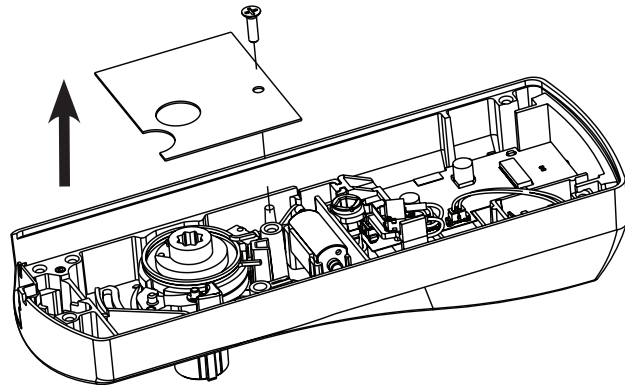

- 12** Assemble back plate with 5 screws

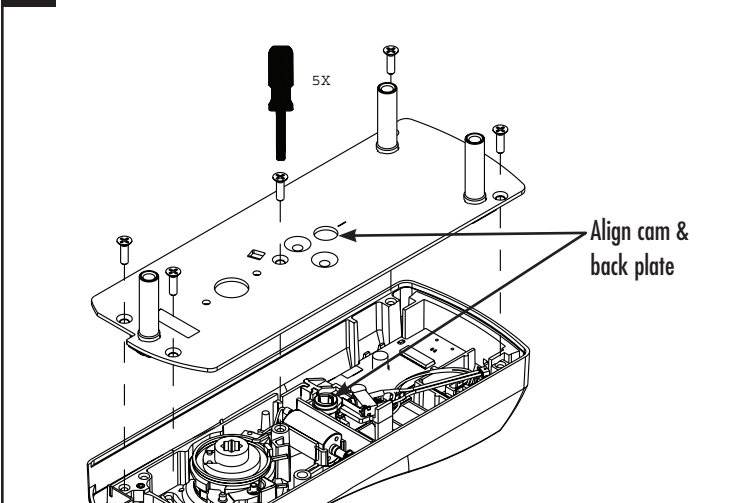

- 13** Assemble battery pack with screw

