


Saffire LX-P & Saffire EVO LZ-P

VON DUPRIN 9847/9947 exit door preparation

NOTES


- FOR EXIT DEVICE AND MORTISE LOCK CUT-OUT REFER TO EXIT DEVICE MANUFACTURER INSTALLATION INSTRUCTIONS.
- 2. BACKSET SHOWN FOR REFERENCE ONLY, ADJUST BACKSET TO EXIT DEVICE MANUFACTURER INSTALLATION INSTRUCTIONS. BACKSET TO BE ADJUSTED TO LOW AND HIGH BEVEL DOOR EDGE AS PER BACKSET ADJUSTMENT TABLE.
- 3. DIMENSIONS ARE SYMETRICAL ABOUT & UNLESS OTHERWISE NOTED.
- 4. GROOVE TO BE DONE ONLY IN SOLID DOORS. TO PASS WIRES INSIDE THE DOOR FOR HOLLOW DOORS.
- 5. REFER TO SPECIFIC TOLERANCES TABLE FOR DIMENSIONS MARKED WITH #.
- 6. DRAWING IS NOT TO SCALE.
- 7. DIMENSIONS ARE IN INCHES [mm].

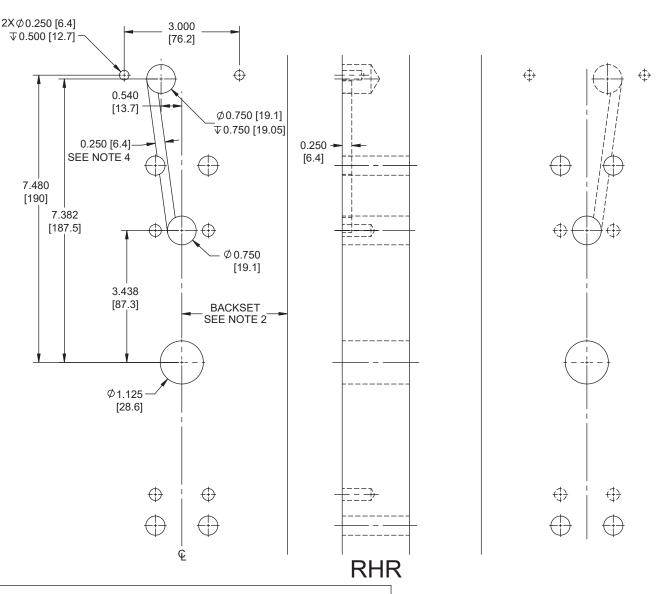


INSIDE HIGH BEVEL HAND LOW BEVEL LOW BEVEL HAND HAND HAND HAND HAND HAND HAND REVERSE REVERSE OUTSIDE

DIMENSIONS = IMPERIAL/IMPÉRIAL [MILLIMETER / MILLIMÈTRE] 3D FILE GOVERNS ALL UNSPECIFIED DIMENSIONS & GENERAL

TOLERANCES APPLY / LES DIMENSIONS NON SPÉCIFIÉES SONT DÉFINIES PAR LE FICHIER 3D ET LES TOLÉRANCES GÉNÉRALES S'APPLIQUENT GENERAL TOLERANCE, UNLESS OTHERWISE S'PECIFIED TOLÉRANCES GÉNÉRALES, SAUF SI SPÉCIFIÉ AUTREMENT

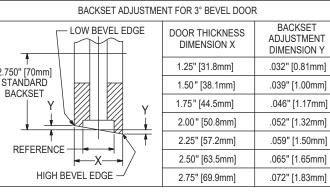

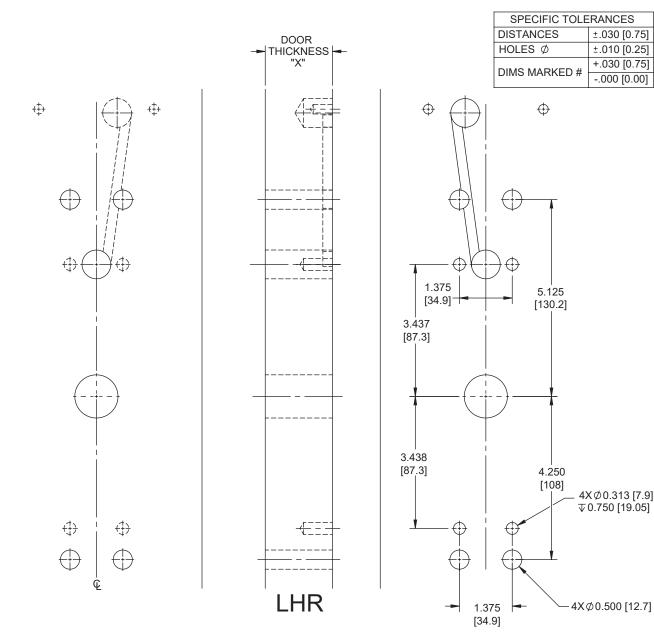

WA DNING

- To verify lock coverage and door operation meets expectations, dormakaba strongly recommends completing a full door mockup. This will ensure that all necessary products and parts for a successful installation are included.
- Always validate that you have selected the correct template for specific lock model being installed. The same lock model can be offered with different locking device options.
- Drawing is not to scale. Measurements are for reference only. Not a drilling template.
- If you have any questions, please contact your local sales representative or authorized reseller.