

1340KR-EL key removable mullion-EL

Installation Instructions

Tools required
Drill
Drill bits: 3/8" [9.5], 1/2" [12.7]
#2 Phillips screwdriver
Wire cutter
Center punch
Deburring tool

Parts list
1. Top fitting assembly
2. KR mullion tube
3. KR mullion screw pack
4. Bottom fitting
5. Instructions

1 Installing connector leads


- 1.1 Cut installer-supplied connector lead in half.
- 1.2 Attach first half of connector lead using butt connectors, or alternatively, solder and tape connector lead to wire coming from strike, which has been routed through mullion tube.
- 1.3 Insert second half of connector lead through top fitting.
- 1.4 Attach connector lead using butt connectors, or alternatively, solder and tape connector lead to wire coming through frame from power source.

2 Assembling mullion tube and top fitting assembly

- 2.1 Assemble mullion tube to top fitting assembly by securing two-pin plug receiver to two-pin plug connector.
- 2.2 Slide mullion tube over top fitting assembly, carefully guiding extra wire and secured plug down into top of mullion tube.

NOTE: Deburr any area where holes were drilled in frame and mullion tube.

NOTE: Installer to drill 1/2" [12.7] dia. hole in frame for wires. Deburr after drilling; install rubber grommet if available.

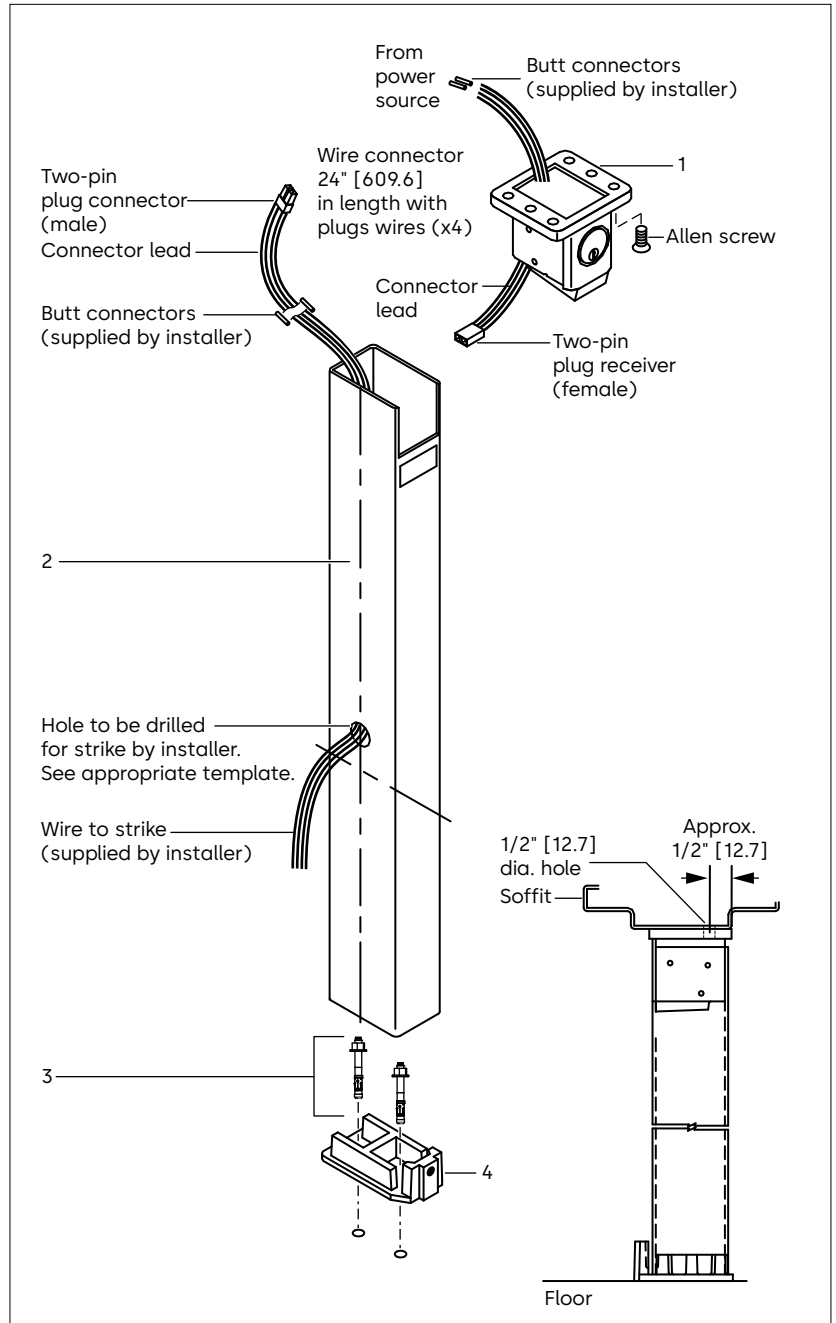

Document translations available.
 Scan for product details and downloads.
 Call 1-800-392-5209 or visit
<https://dhwsupport.dormakaba.com/hc/en-us>
 for assistance or warranty information.