


IMPORTANT:
CHECK DOOR THICKNESS
BEFORE DRILLING.

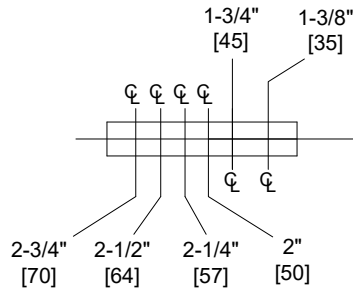

DRILL 1" [25] DIA.
HOLE ON DOOR EDGE
CENTER LINE

FOLD AND ALIGN TEMPLATE ON EDGE OF DOOR


FOR WOOD OR METAL DOOR

DRILL TWO 5/16 DIA. HOLES ON
VERTICAL CENTER LINE FROM BOTH
SIDES OF DOOR.

2-3/4" [70] BACKSET

2-3/8" [60] BACKSET

**PLACE TEMPLATE ON
HIGH EDGE OF BEVEL**

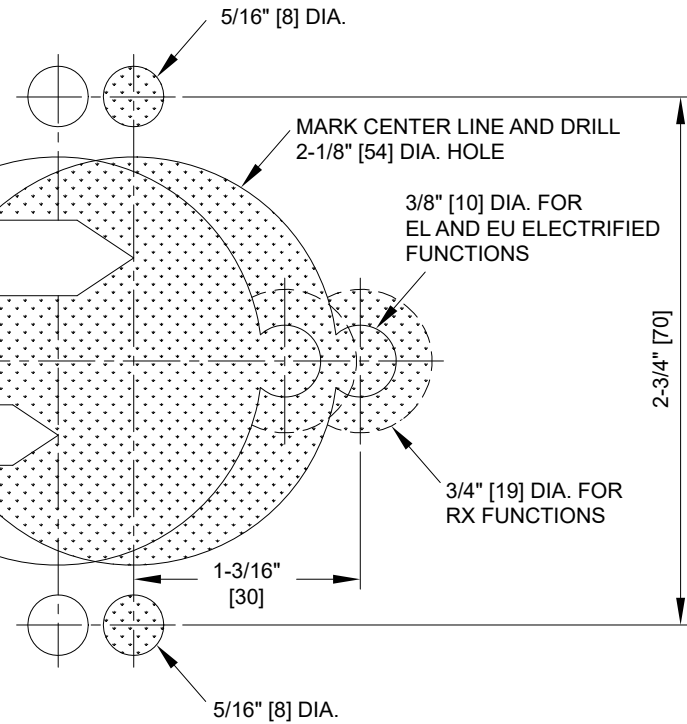

TEMPLATE TO SCALE 1:1, FULL SIZE. MEASUREMENTS ARE FOR REFERENCE ONLY. NOT A DRILLING TEMPLATE.

METAL OR WOOD DOOR FOR:
C100 SERIES WITH 2-3/4" BACKSET
ELECTRIFIED TRIM

