
USE 1/8" DRILL FOR No. 10 WOOD SCREWS (6 PLCS)

12-19/32

(320)

13-3/8

(340)

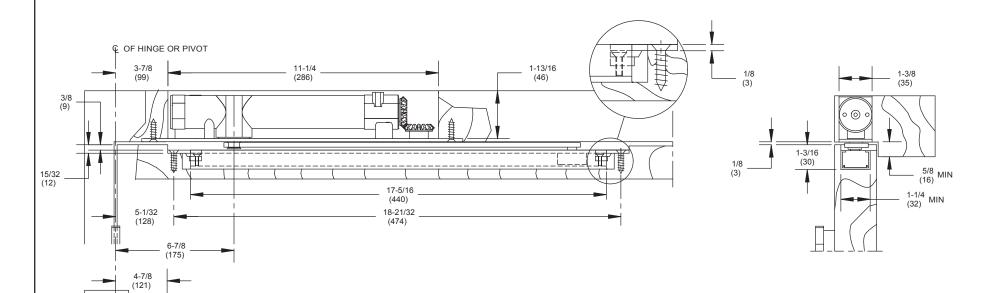

FRAME PREP

25/32

(20)

DOOR PREP € OF DOOR 5/8 () (16) 17-31/32 R5/16" (456)(8) 19-3/16 (487)2-7/8 (73)R 5/16 (8) (16 PLCS)

NOTES:

- 1. DO NOT SCALE DRAWING.
- 2. DIMENSIONS ARE IN INCHES/(MM).
- 3. RIGHT HAND DOOR SHOWN.
- 4. MAXIMUM OPENING APPROX. 130°
- 5. HOLD OPEN RANGE 80°-120°.
- 6. DOOR HUNG ON 4-1/2" X 4-1/2" BUTT HINGES OR 3/4" OFFSET PIVOTS- LESS TOP PIVOT.
- 7. ITS96 MAY BE USED ON LABELED WOOD DOORS PENDING APPROVAL OF WOOD DOOR MANUFACTURER.
- 8. 5/8" MAXIMUM BETWEEN € OF CLOSER AND & OF TRACK.
- 9. SEE BROCHURE FOR MAXIMUM DOOR WIDTH.
- 10. ADEQUATE BLOCKING TO BE SUPPLIED BY WOOD DOOR MANUFACTURER FOR MOUNTING TRACK IN DOOR.

DOOR CLOSER MODEL: ITS9613 CLOSER IN FRAME, TRACK IN DOOR WITH ACCESSORY TRACK BRACKETS (WOOD DOOR AND FRAME)

Ф-

3/8 (9)

