


# C501 - DUMMY LEVER INSTRUCTIONS

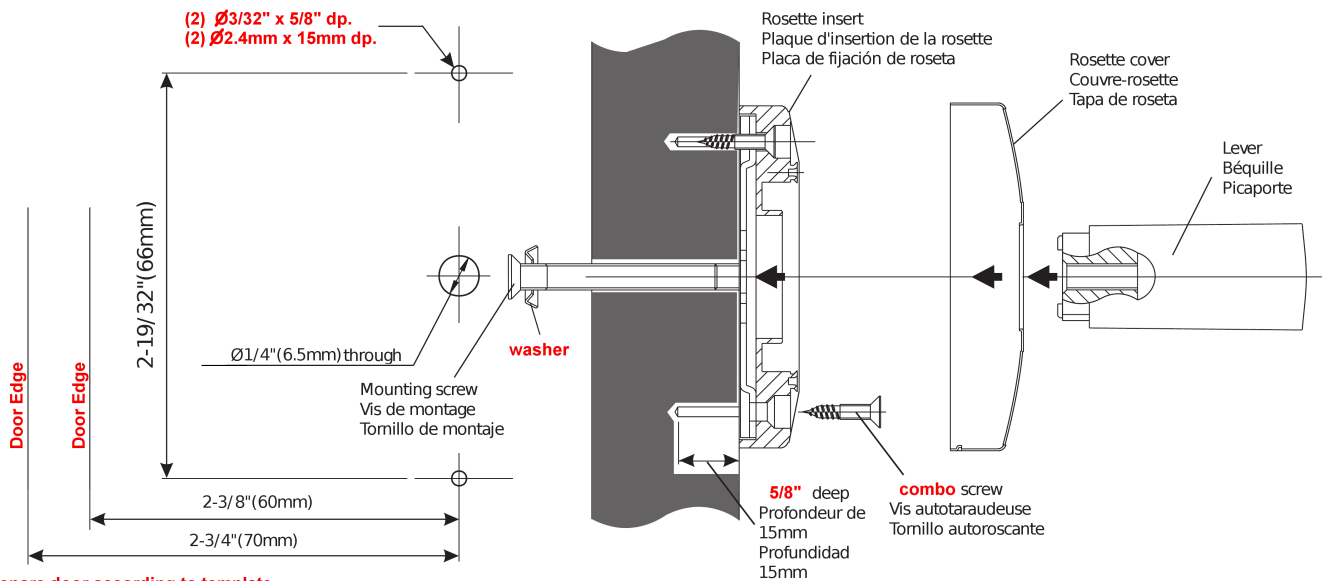

1. Prepare door according to template above.

2. Attach rose insert to door with (2) combo screws

3. Attach rosette (rose cover) by aligning tabs in cover with slots on insert then rotate clock-wise.

4. Attach lever by inserting the lever in the rose, rotate slightly to insure engagement with anti-rotation plate and installing screw through opposite side of door.

1. Poser le gabarit pour le perçage de trou.

2. Poser les vis autotaraudeuses pour serrer la plaque d'insertion de la rosette contre la face de la porte.

3. Poser le couvre-rosette sur la plaque d'insertion et le tourner pour le réglage.

4. Insérer la béquille pour la faire pénétrer dans la plaque de fixation de la béquille.

5. Poser la vis de montage de l'autre côté de la porte et la serrer pour fixer la béquille.

1. Usar plantilla para hacer los agujeros.

2. Fijar la placa de la roseta a la puerta con tornillos autoroscantes.

3. Colocar la tapa de roseta sobre la placa de fijación de la misma y hacerla girar para que quede fija.

4. Insertar el picaporte en la placa de fijación del mismo.

5. Fijar el picaporte en posición con un tornillo autoroscante colocado del lado opuesto.

Rev.09/00 **76011630**

cut dieline: 225X165mm