


DEGREE OF HOLD OPEN	DIM. "A"
75°	$\frac{9-5/8}{(244)}$
80°	$\frac{8-7/8}{(225)}$
85°	$\frac{8-1/4}{(210)}$
90°	$\frac{7-1/2}{(191)}$
95°	$\frac{7}{(178)}$
100°	$\frac{6-1/2}{(165)}$

NOTES:

1. DO NOT SCALE DRAWING.
2. DIMENSIONS ARE IN INCHES/(MM).
3. RIGHT HAND DOOR SHOWN.
4. SEX NUTS RECOMMENDED FOR ATTACHMENT OF COMPONENTS ON UNREINFORCED, COMPOSITE OR LABELED FIRE DOORS.
5. TEMPLATE FOR 4-1/2" X 4-1/2" BUTT HINGES AND 3/4" OFFSET PIVOTS.
6. MINIMUM DOOR WIDTH 36".

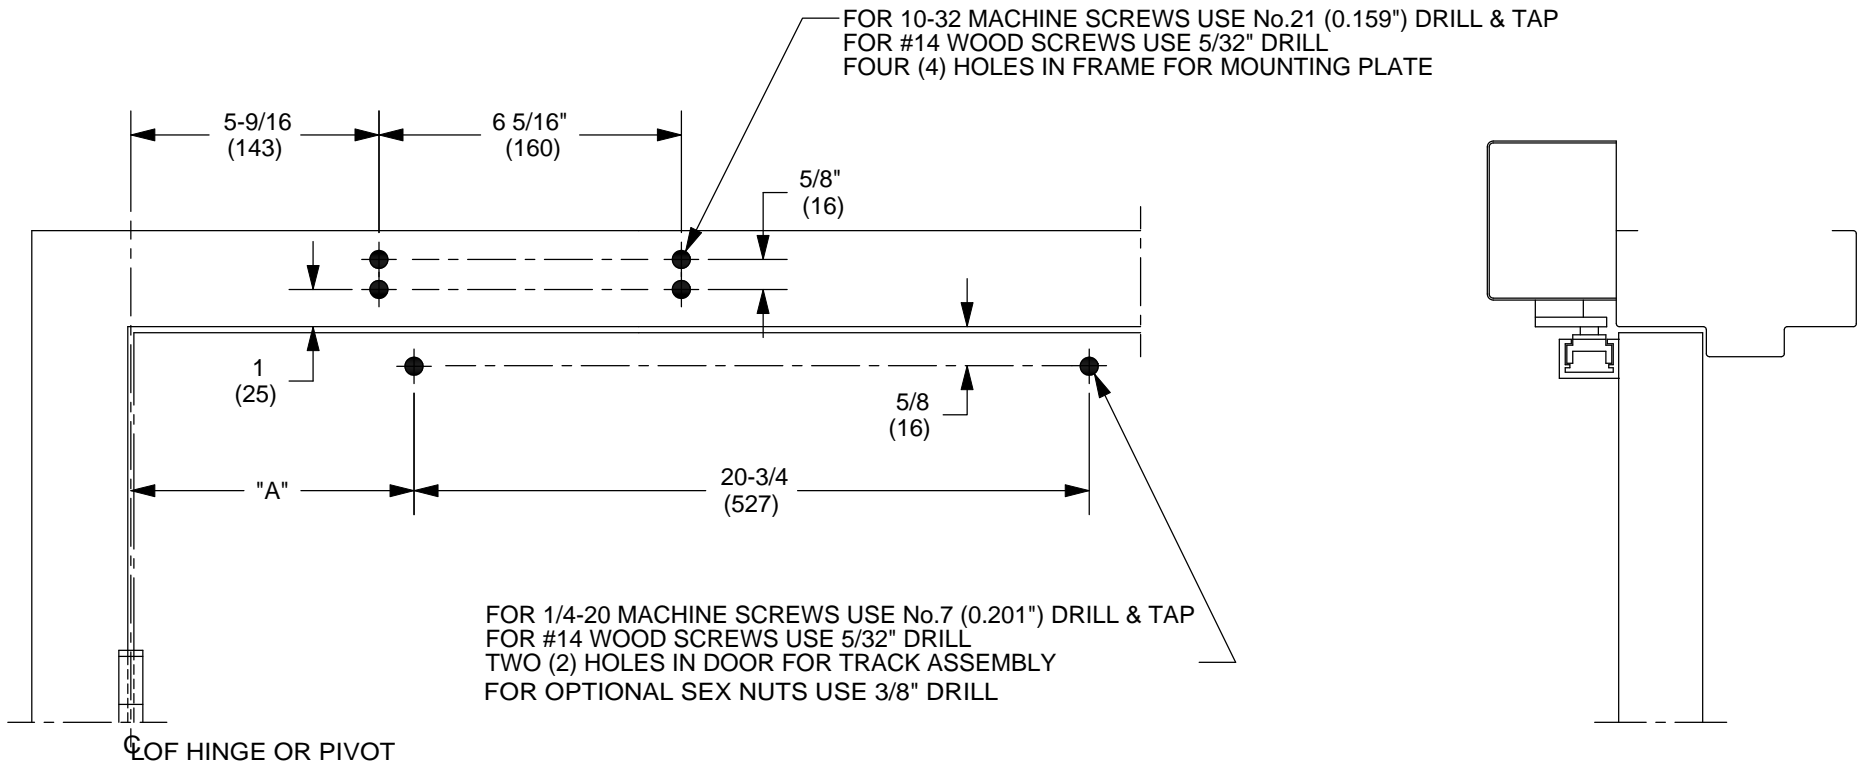

Always consult Dorma's web site for latest template at www.dorma-usa.com or call 1-800-523-8483.

