


Installation Instructions

7471K Center Hung Floor Pivot

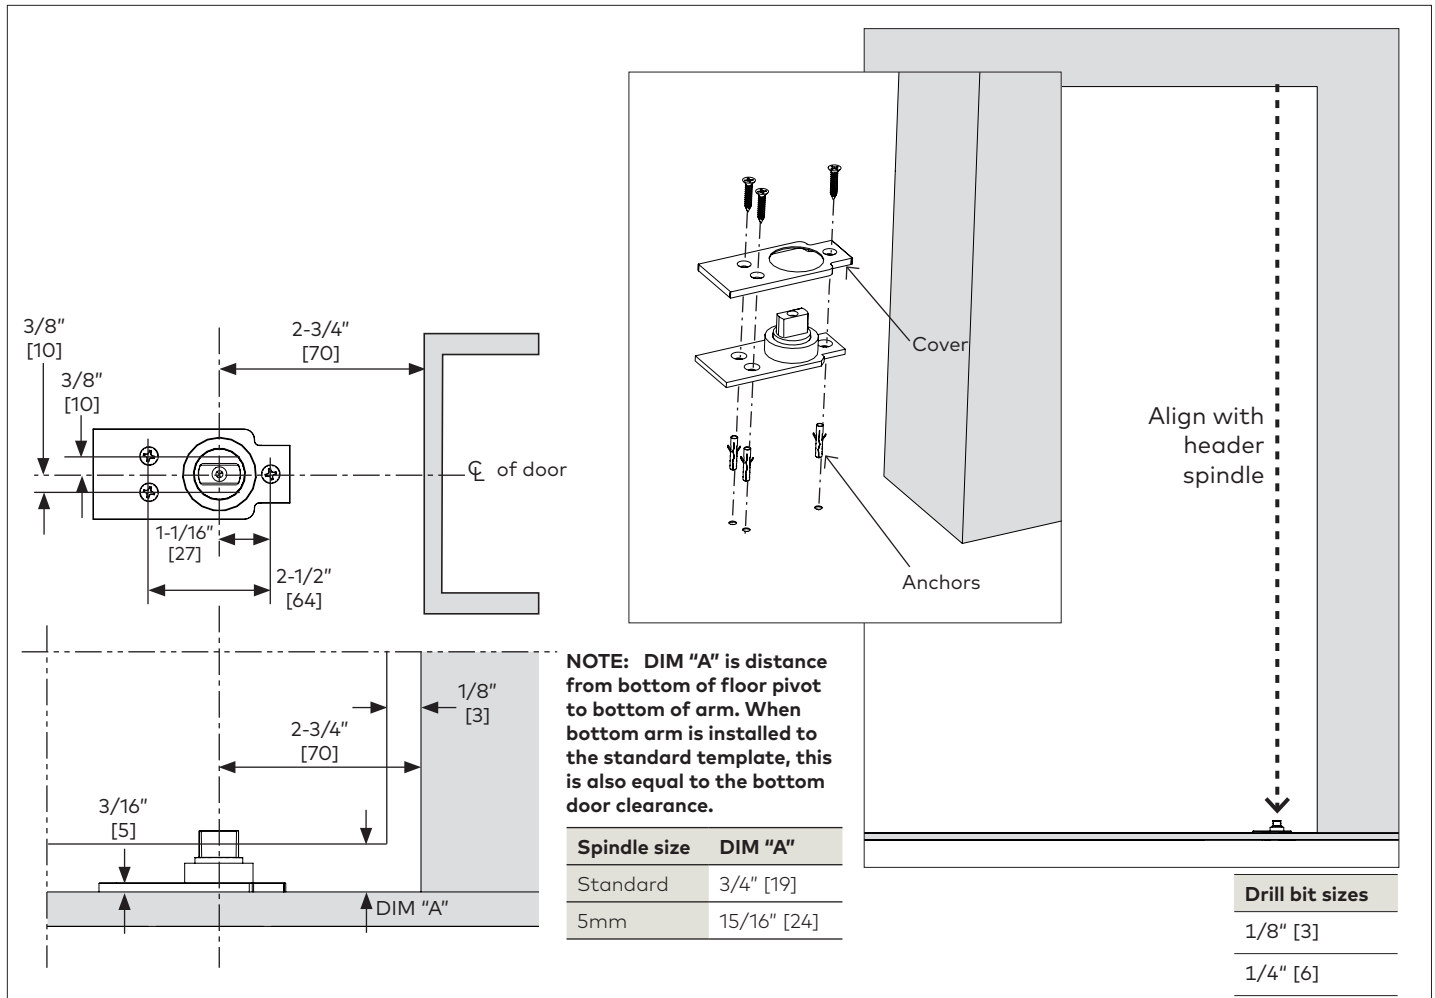

- 1.1 Using a plumb bob, align header spindle with bottom pivot spindle.
- 1.2 Mark and drill holes in flooring surface.
 - Wood Floors: 1/8" [3] drill bit.
 - Concrete Floors: Drill 1" [25] deep holes, using 1/4" [6] drill bit.
- 1.3 Insert anchors, if necessary.
- 1.4 Ensure pivot is aligned and plumb.
- 1.5 Secure floor bearing and cover using included fasteners.