TMP NO. 76018383	PAGE 1 OF 1	Rev. 12/11	**Always consult DORMA's web site for latest template at www.dorma-usa.com or call 1-800-523-8483.**

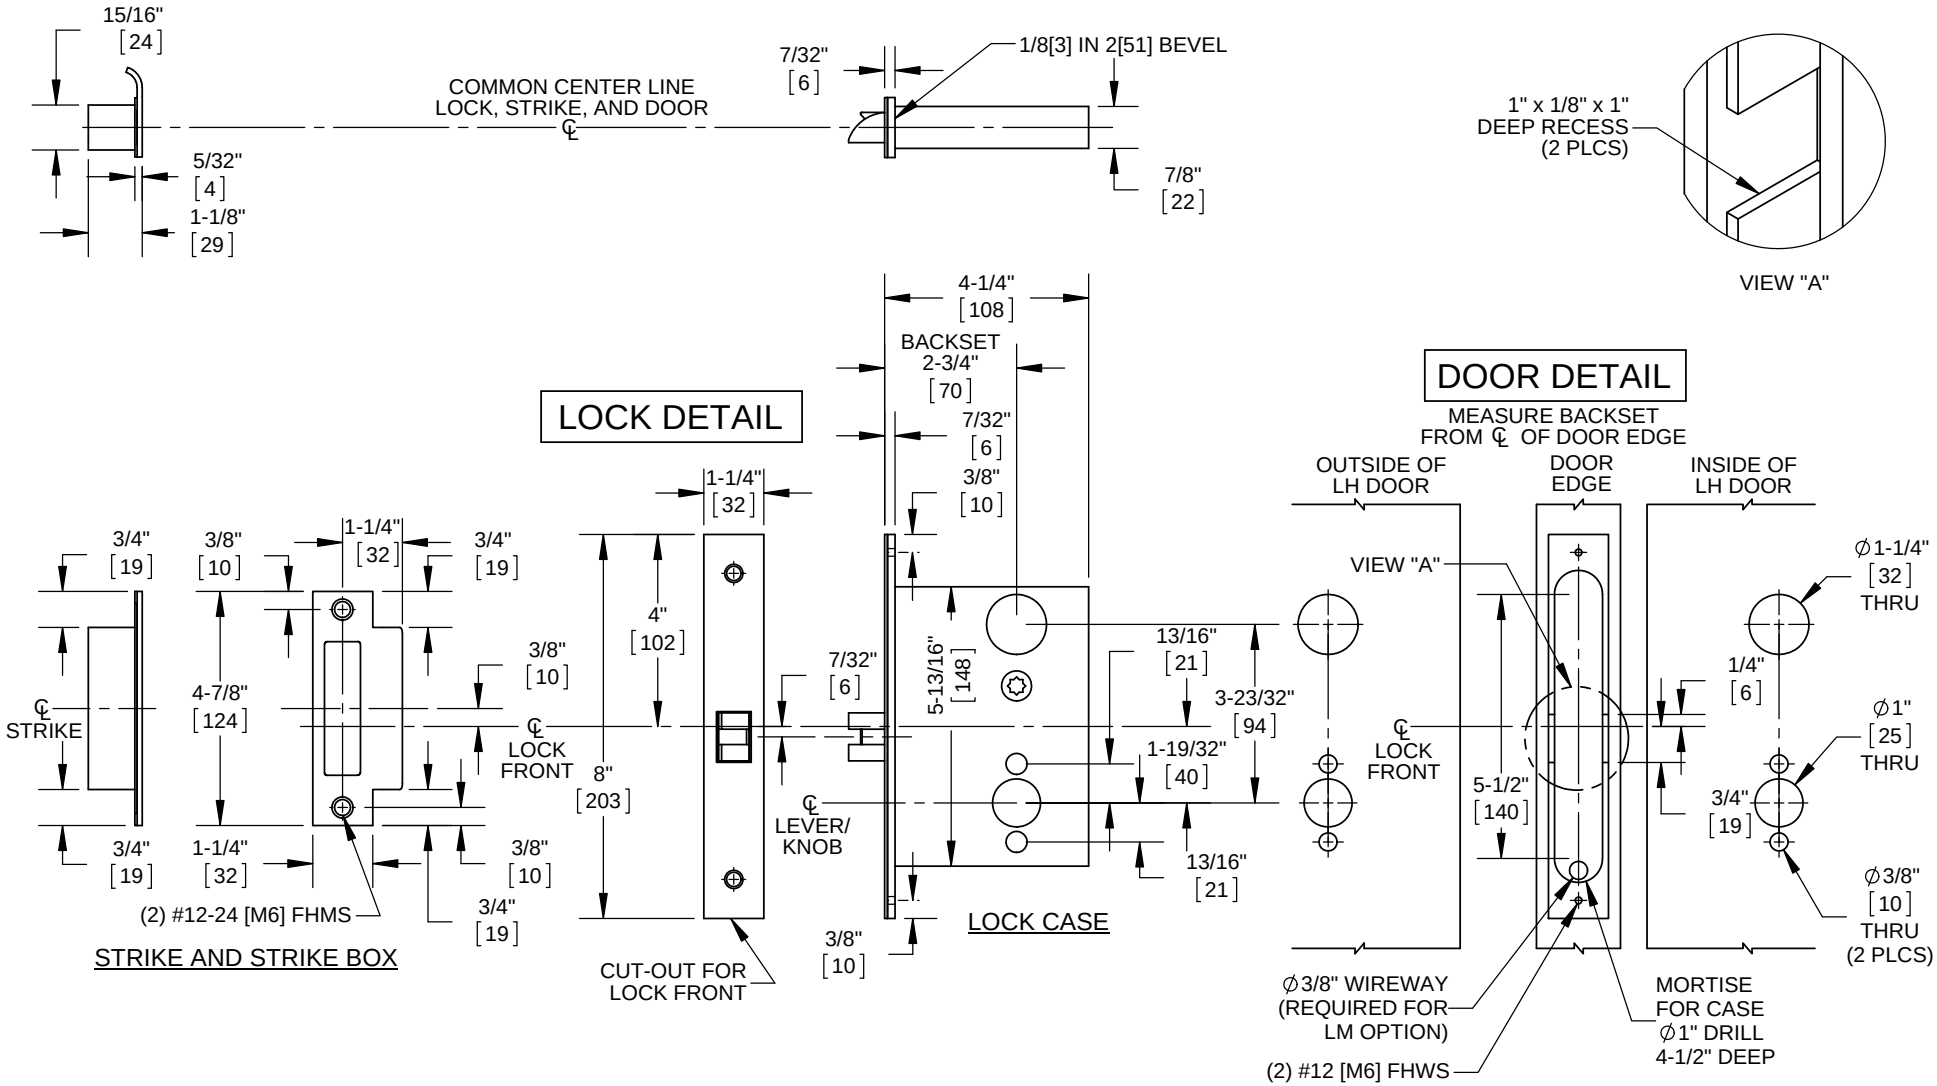

NOTES:
1. DIMENSIONS ARE IN INCHES/[MM].
2. DO NOT SCALE DRAWING.
3. FOR #12 FHWS, USE 9/64" (.140") DRILL.
4. FOR #12-24 FHMS, USE #16 (.177") DRILL & TAP.

DOOR CUT-OUTS AS INDICATED UNDER DOOR DETAIL.
FRAME FOR STRIKE SHOWN UNDER LOCK DETAIL.

WOOD DOORS - A&B Rose Trim, M Escutcheon Trim
M9060, M9071, M9077, M9082, M9082LM

DORMA Architectural Hardware
Reamstown, PA 17567

TMP NO. 76018384	PAGE 1 OF 1	Rev. 12/11	**Always consult DORMA's web site for latest template at www.dorma-usa.com or call 1-800-523-8483.**

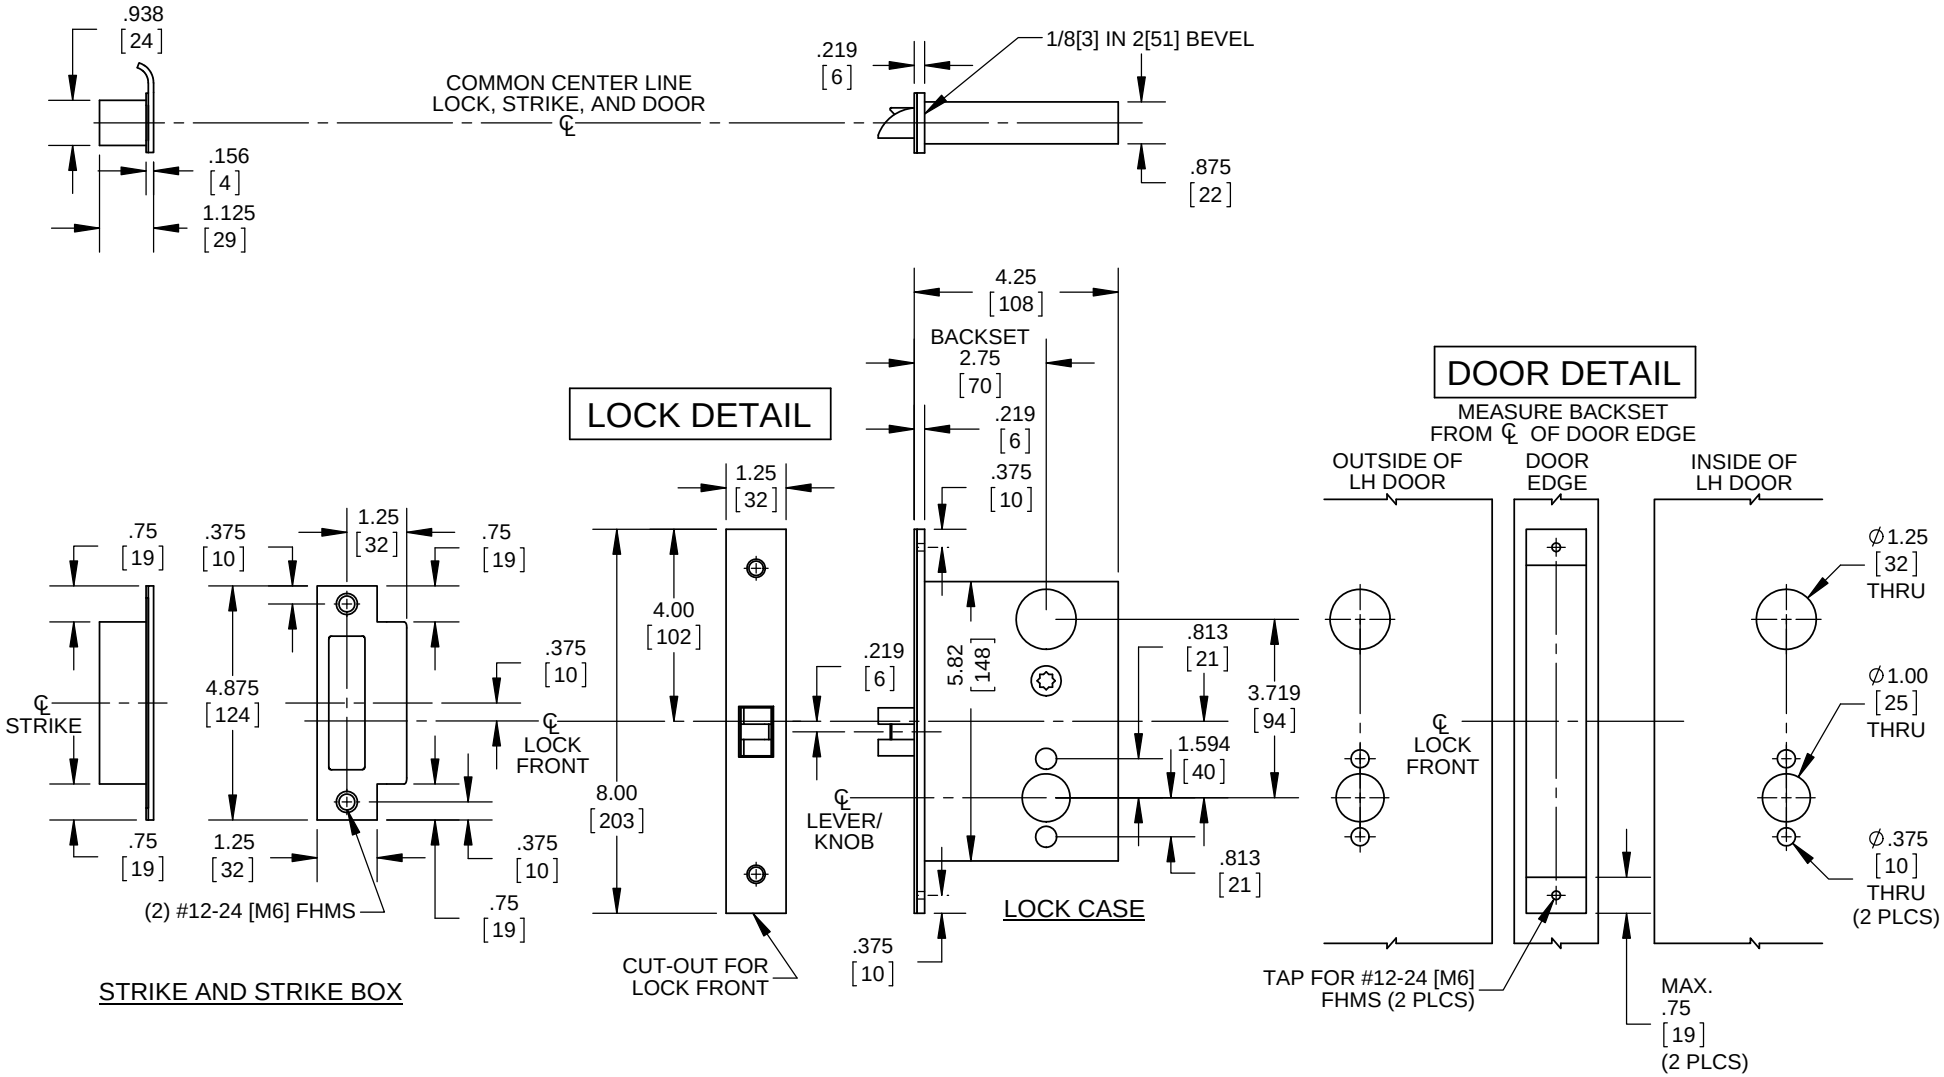

NOTES:
1. DIMENSIONS ARE IN INCHES/[MM].
2. DO NOT SCALE DRAWING.
3. FOR #12 FHWS, USE 9/64" (.140") DRILL.
4. FOR #12-24 FHMS, USE #16 (.177") DRILL & TAP.

DOOR CUT-OUTS AS INDICATED UNDER DOOR DETAIL.
FRAME FOR STRIKE SHOWN UNDER LOCK DETAIL.

STEEL DOORS - A&B Rose Trim, M Escutcheon Trim
M9060, M9071, M9077, M9082

DORMA Architectural Hardware
Reamstown, PA 17567