


Saffire LX-I & Saffire EVO LZ-I

2-3/4" Backset
5-1/2" Drilling template

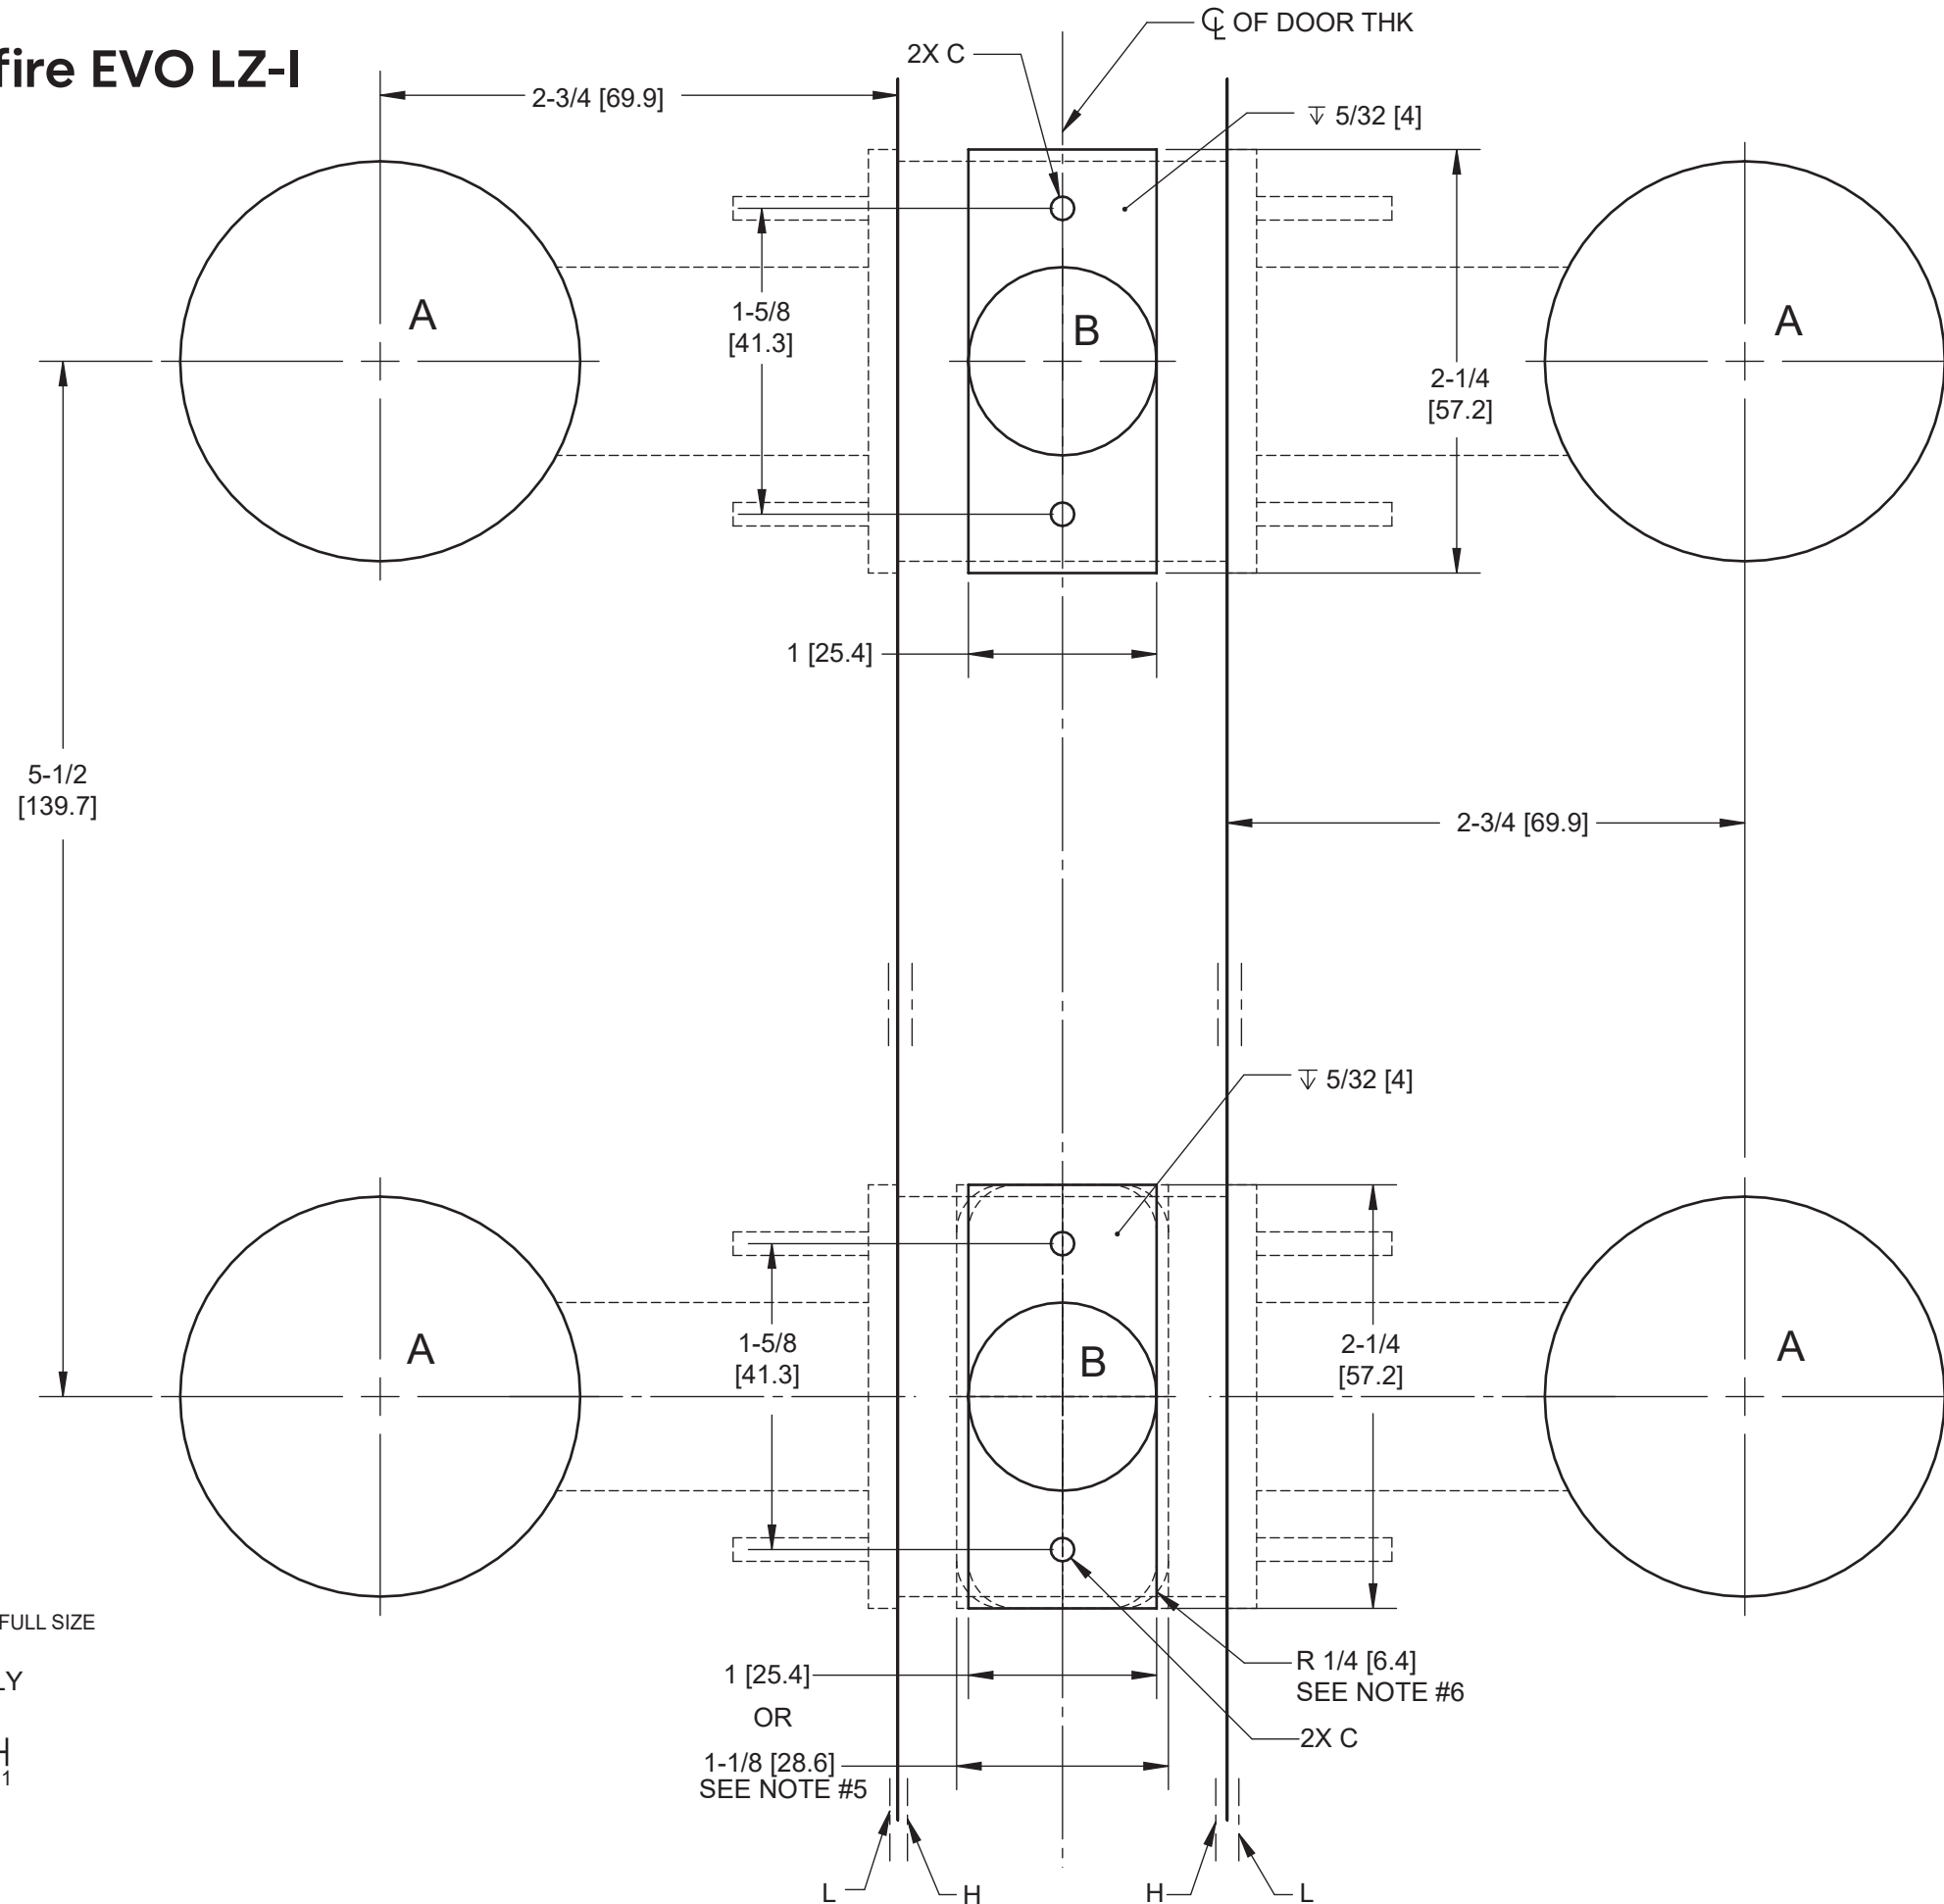


TEMPLATE TO SCALE 1:1, FULL SIZE

VERIFY EXACTLY
1" [25.4].




HOLE ID	DIM inch/[mm]	▽ inch/[mm]	COMMENTS
A	Ø 2-1/8 [Ø 54.0]	-	
B	Ø 1 [Ø 25.4]	UP TO HOLE "A"	
C	Ø 3/32 [Ø 2.38]	5/8 [15.87]	
D	Ø 5/32 [Ø 4.0]	3 [76.2]	JAMB SIDE
E	Ø 1/8 [Ø 3.2]	3/4 [19.1]	

UNLESS OTHERWISE NOTED, DRILL HALF DOOR THICKNESS ON BOTH SIDES.

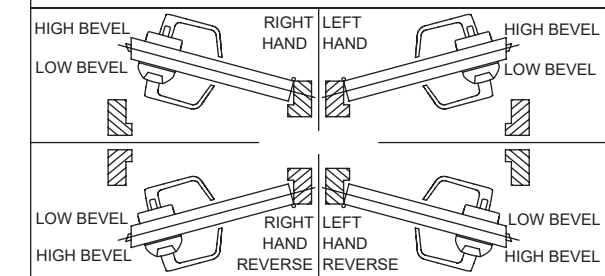


- NOTES:
- FOR DIMENSIONS AND TOLERANCES REFER TO CORRESPONDING DOOR PREPARATION DRAWING IP-516480.
 - FOLDING LINES HIGH (H) AND LOW (L) FOR BEVEL EDGES SHOWN ARE FOR DOOR WITH 3° BEVEL ANGLE.
 - SYMBOLS:
 - ▽ DEEP
 - ⊘ CENTERLINE OF DOOR
 - Ø DIAMETER
 - ALL DIMENSIONS ARE IN INCHES [mm].
 - DO THE CUT OUT ACCORDING TO SELECTED LATCH BOLT (1" OR 1-1/8" WIDE).
 - IF THE SELECTED LATCH BOLT HAS RADIUS, MAKE CUT OUT WITH RADIUS.

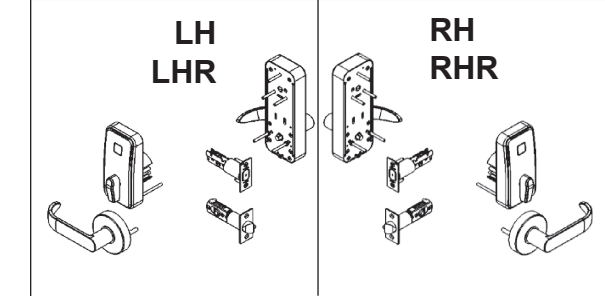

WARNING

- To verify lock coverage and door operation meets expectations, dormakaba strongly recommends completing a full door mockup. This will ensure that all necessary products and parts for a successful installation are included.
- Always validate that you have selected the correct template for specific lock model being installed. The same lock model can be offered with different locking device options.
- Always validate after printing to confirm the dimensions listed on the drawing have printed on a 1:1 scale.
- If you have any questions, please contact your local sales representative or authorized reseller.

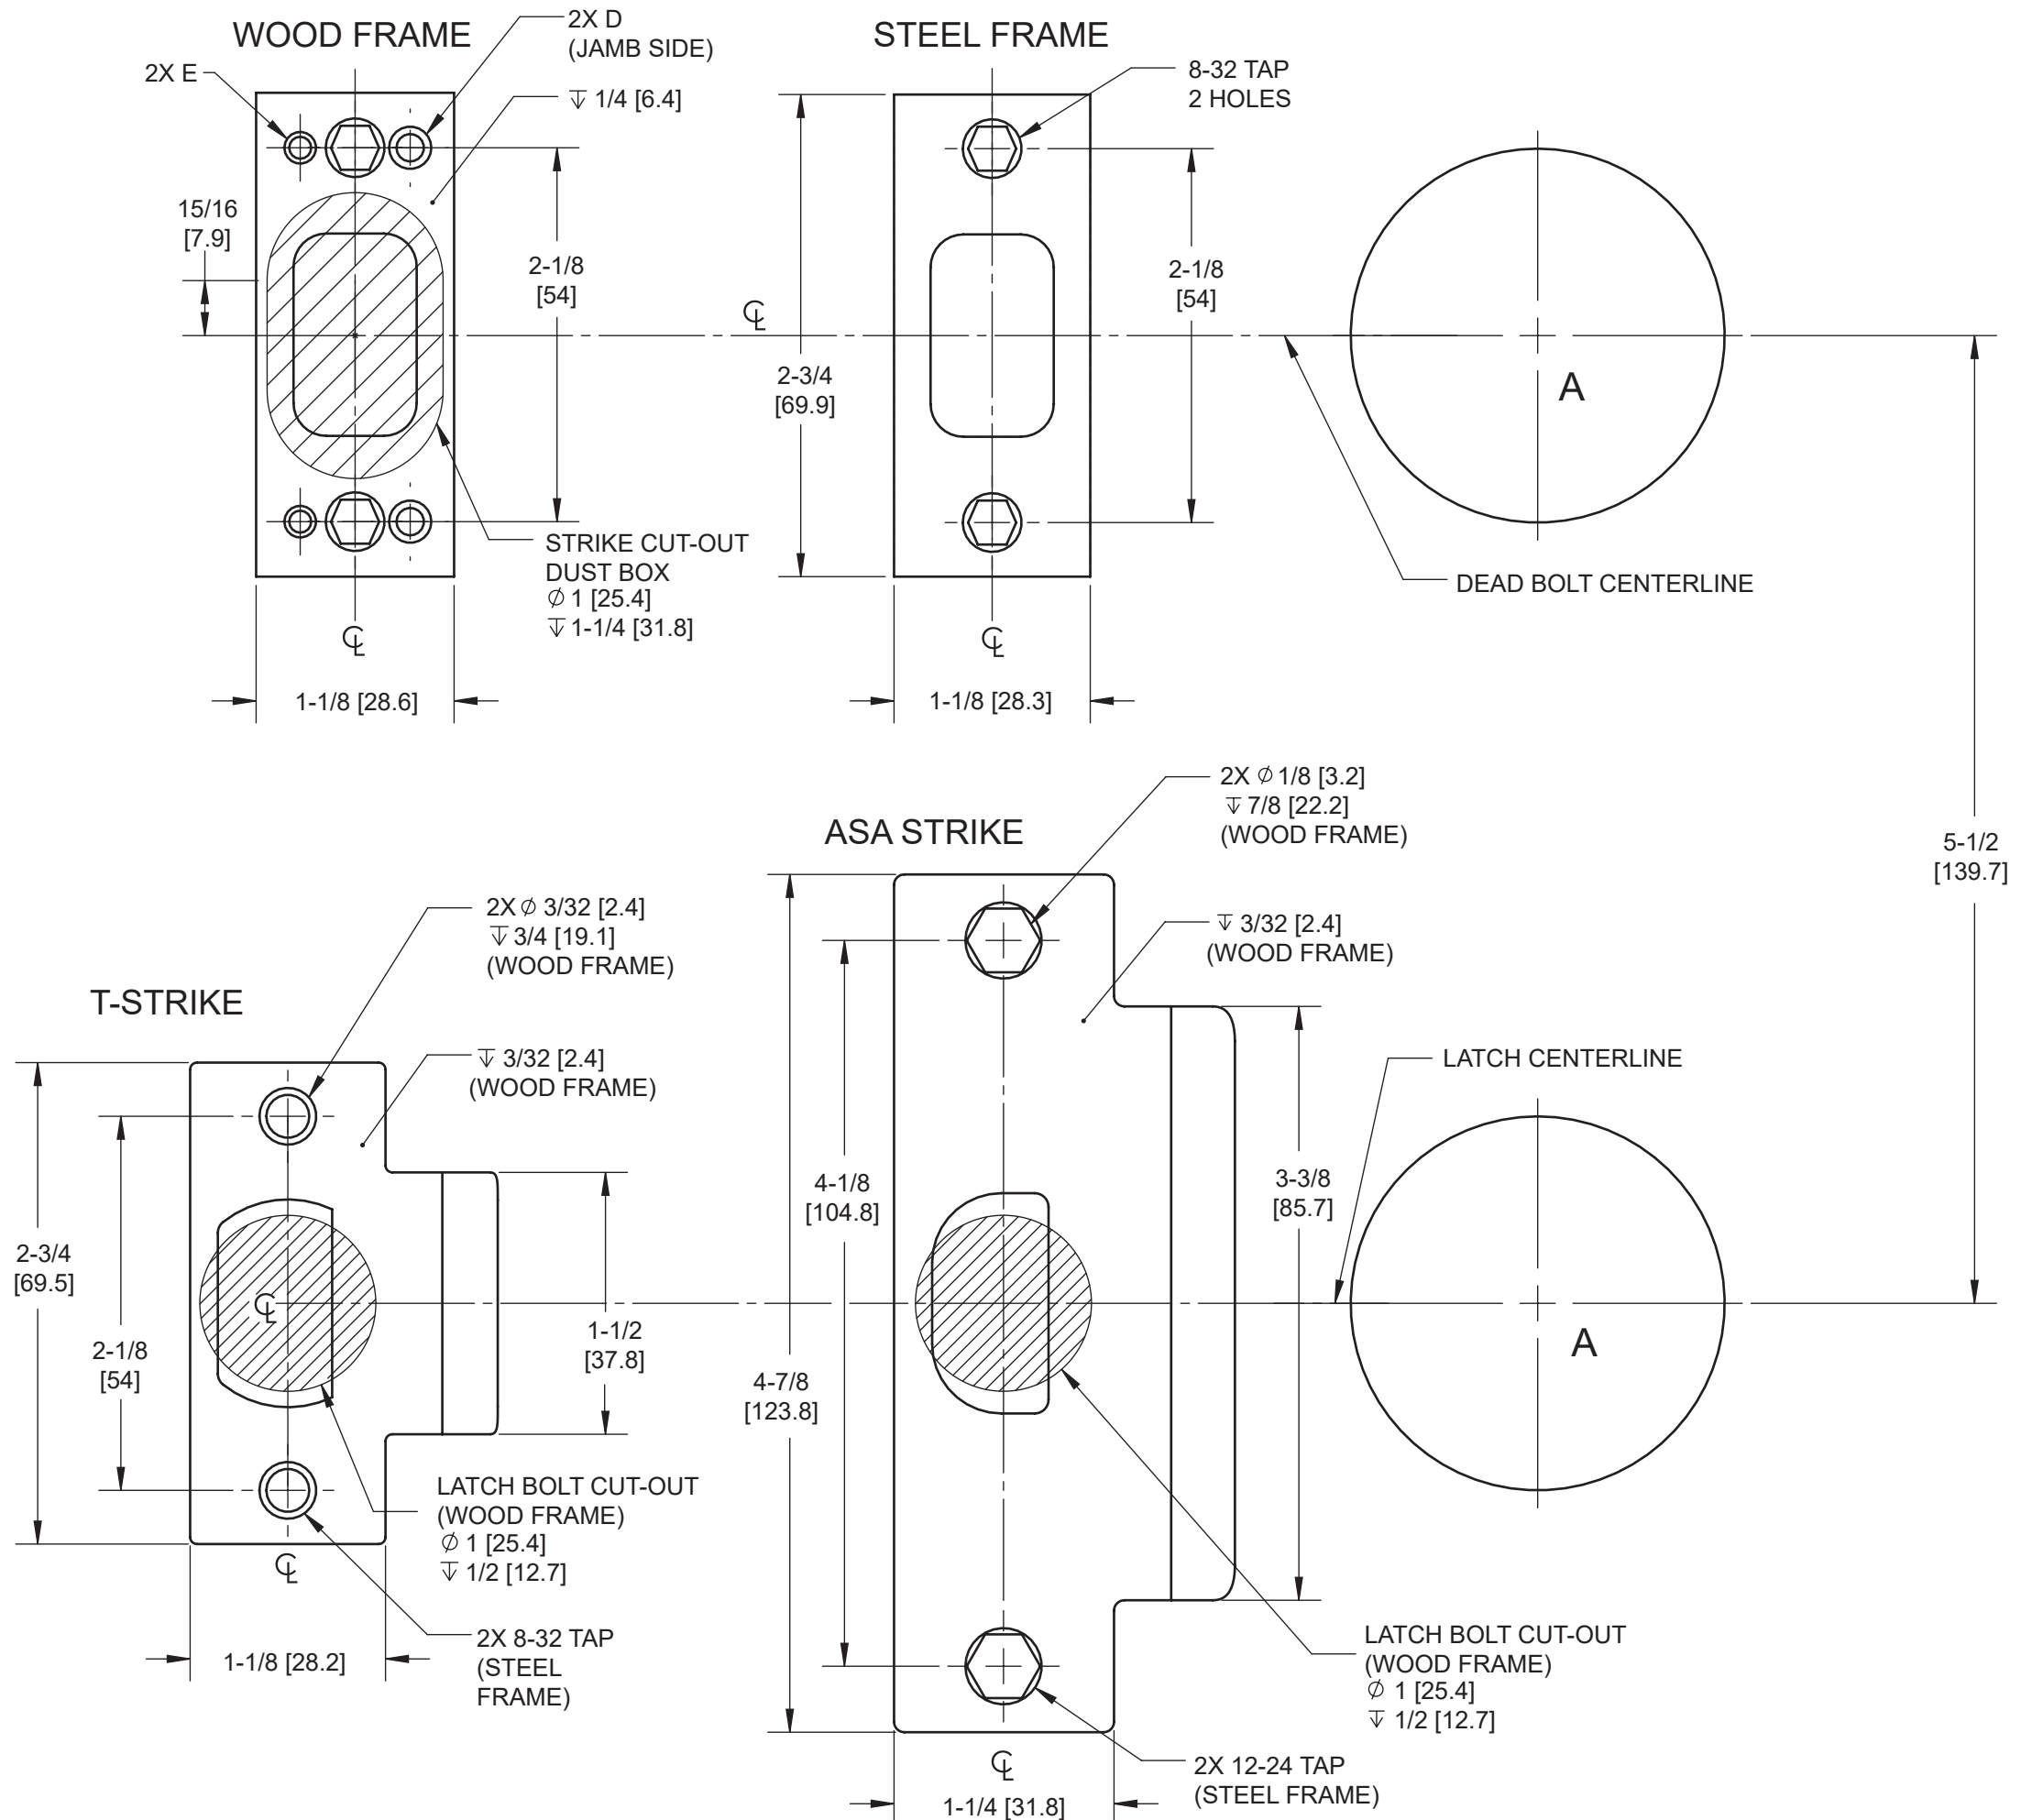

TEMPLATE TO SCALE 1:1, FULL SIZE

VERIFY EXACTLY 1" [25.4].

