

MUTO Premium XL120

Wall mount with Dormotion and Self-close (Wood door)

Installation Manual

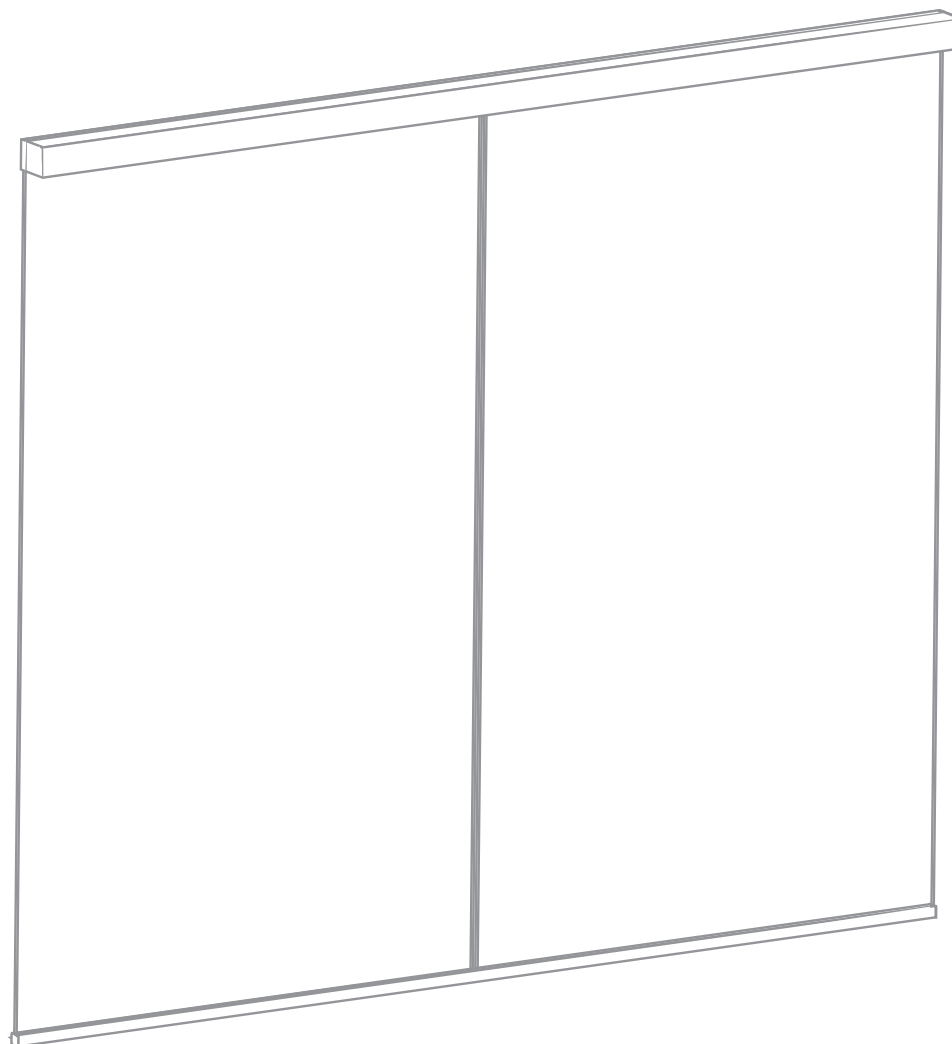


Table of contents

1	Technical specifications	3
1.1	Overview	3
	1.1.1 General information	3
	1.1.2 Intended use	3
	1.1.3 Door requirements and fittings	3
	1.1.4 Safety instructions	3
	1.1.5 Symbols used - Safety/Installation	3
	1.1.6 Maintenance, care, repair	3
	1.1.7 Disposal	3
1.2	Specifications - technical data	3
2	Installation instructions	4
2.1	Overall	4
2.2	Securing wood door adaptor	5
2.3	Securing track to mounting surface	5
2.4	Door/wall dimensions	6
2.5	Installing roller carriers:	7
2.6	Installing DORMOTION start/stop	8
2.7	Disengaging the anti-jump	8
2.8	Installing the end stops	9
2.9	Install door/rollers in track	9
2.10	Install floor guide	10
2.11	Engaging anti-jump	11
2.12	Adjustment door height	11
2.13	Adjustment end stop location: LEADING end stop	12
	Adjustment end stop location: TRAILING end stop	12
2.14	Install RH DORMOTION units	13
2.15	Install optional LH DORMOTION unit in opening cycle	14
2.16	Adjust start/stop pin height (if necessary)	15
2.17	Install self-close hold open clamp	15
2.18	Install self-close hold open ball	16
2.19	Install self-close cable connector	16
2.20	Install self-close cable unit	17
2.21	Prepare self-close cable unit	17
2.22	Adjust tension in self-close cable unit	18
2.23	Cover clips	19
2.24	Install brush profile	19
2.25	Install view protection clips	20
2.26	Install cover and view protection profile	21
2.27	Install end caps	21

1 Technical specifications

1.1 Overview

These instructions are for installation of MUTO PREMIUM sliding door system XL120 for wood doors for the following mounting and style versions:

1. Wall mount

1.1.1 General information

- dormakaba glass hardware is not suitable for application in rooms where chemicals (e.g. chlorine) are used as indoor swimming pools, saunas or salt-water pools.
- Never move sliding panels faster than walking speed and always stop the door manually before it reaches end position.
- Do not slide doors with excessive force. Install limiting stop to prevent door from opening too far.

1.1.2 Intended use

- For sliding door in dry indoor areas only
- For manual slowly opening and closing only

1.1.3 Door requirements and fittings

- The substructure/wall must be able to bear permanent loads and be level (max. tolerance: 1/16" [2] per 39" [1m]).
- Fasteners must be sufficiently dimensioned for the substructure/wall and weight of the door.
- When adjusting door components, always stick to the required clearance for the respective hardware.

1.1.4 Safety instructions

- Installation requires two people.
- Only properly qualified and specially trained staff are authorized to mount dormakaba glass hardware.

1.1.5 Symbols used - Safety/Installation



CAUTION

Mounting components must meet the requirements of substructure/wall and door weight. Please read the technical information for fittings.



WARNING

TIPS AND RECOMMENDATIONS

Information note



CLOSING EDGE



1.1.6 Maintenance, care, repair

- Immediately replace damaged parts.
- Always use original dormakaba parts.
- Clean clamping area with alcohol-based standard commercial cleaning agent before mounting the glass hardware.
- Use a damp clothe for occasional cleaning, especially the track.
- Always use silicone - and oil-free cleaners (e.g. acetone).
- Check door hardware at regular intervals for proper positioning and smooth operation and correct adjustment.
- High traffic door systems require inspection by properly qualified staff (specialized companies or installation firms.)

1.1.7 Disposal

Disposal in accordance with local, state and national regulations.


1.2 Specifications - technical data

		Single Door	Double Door
		XL120	XL120
Wall mount	Door leaf weight lbs [kg]*	≤264lbs [≤120]	2 x ≤264lbs [2 x ≤120]

* Including weight of auxiliary hardware.

2 Installation instructions


2.1 Overall

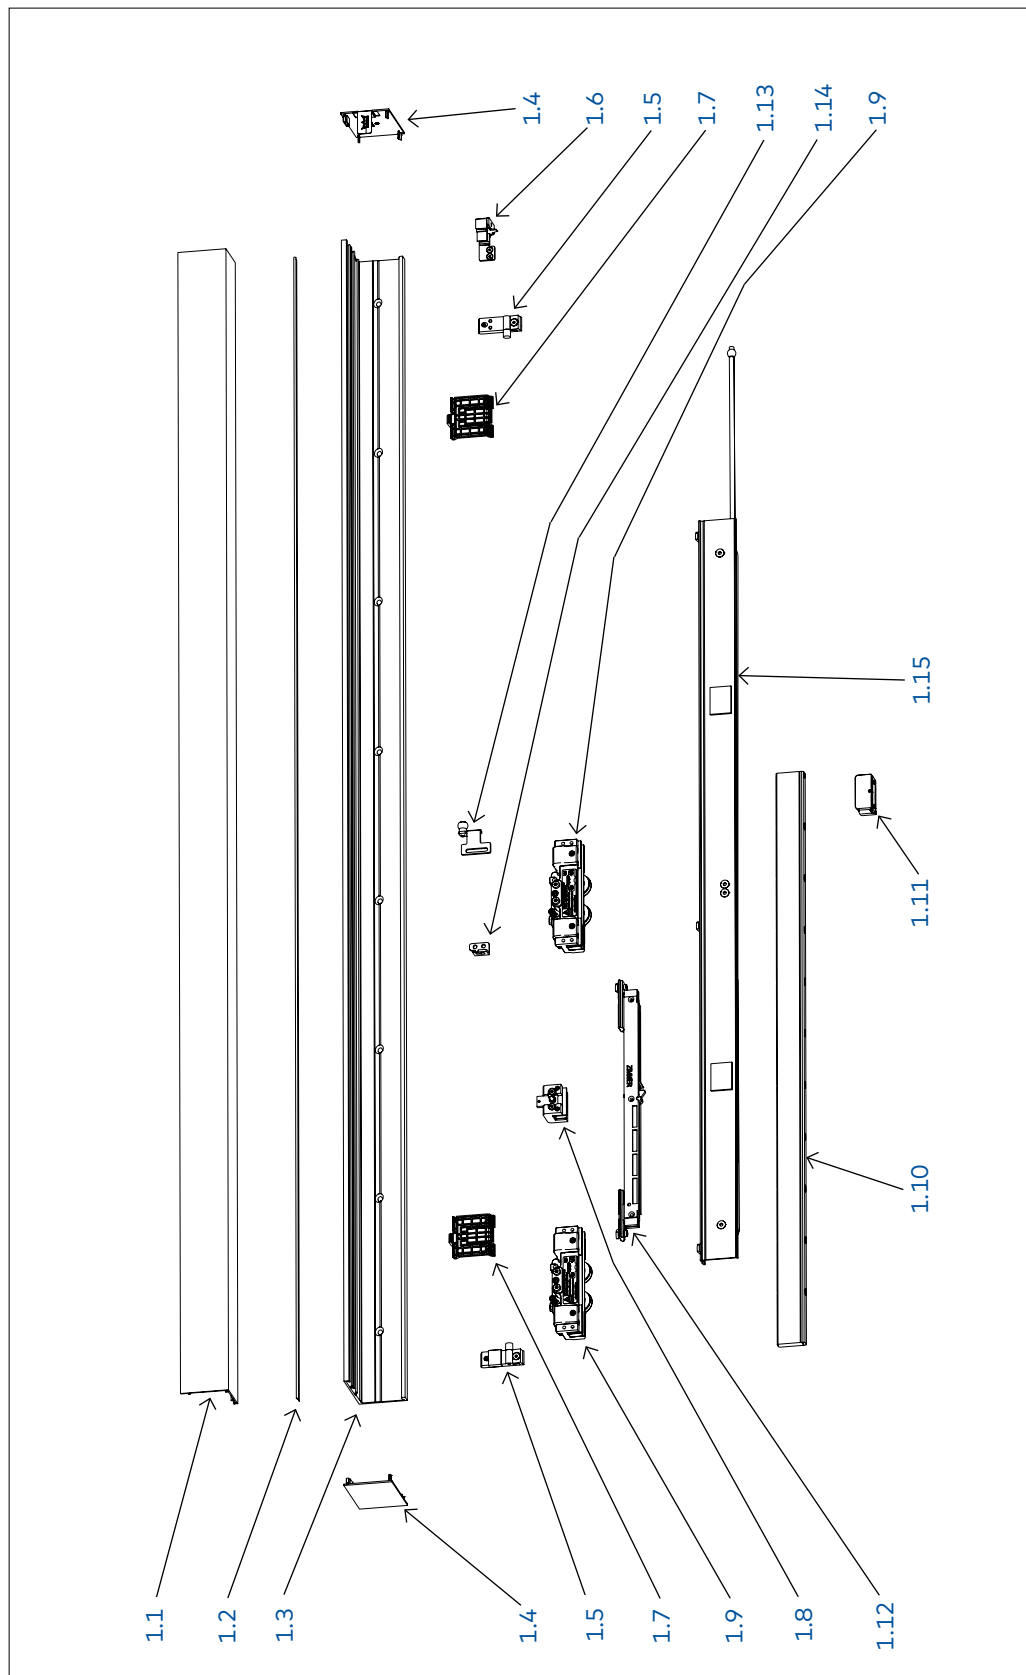

- | | | | | | |
|-----|----------------------------|------|-------------------|------|----------------------------|
| 1.1 | Cover | 1.9 | Roller carrier | 1.13 | Self-close hold open ball |
| 1.2 | Brush strip | 1.10 | Wood door adaptor | 1.14 | Self-close cable connector |
| 1.3 | Track | 1.11 | Floor guide | 1.15 | Self-close cable unit |
| 1.4 | End stop | 1.12 | Dormotion unit | | |
| 1.5 | Self-close hold open clamp | | | | |
| 1.6 | Self-close hold open ball | | | | |
| 1.7 | Track | | | | |
| 1.8 | End cap | | | | |

2.2 Securing wood door adaptor

Fig. 1

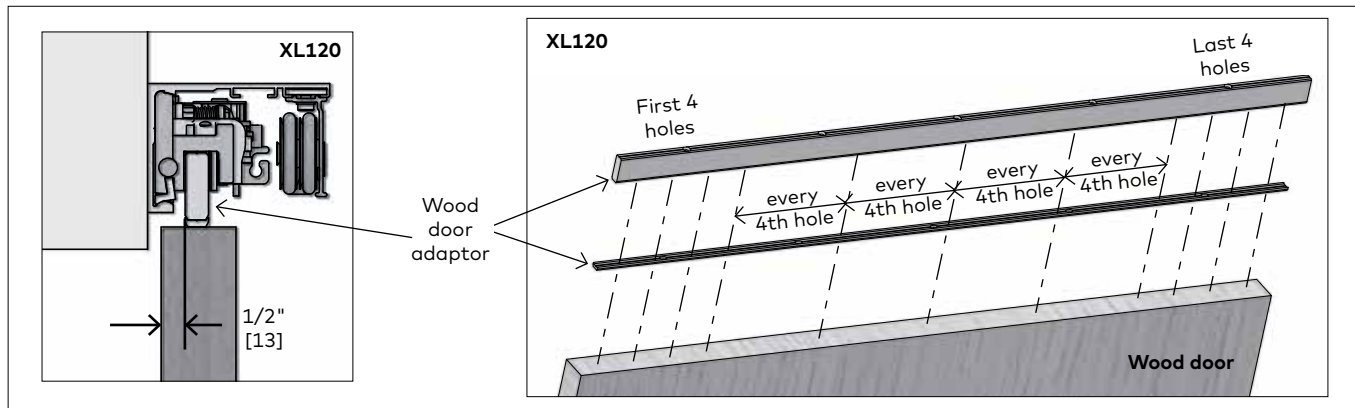

NOTE: Top of door must be reinforced to secure wood door adaptor.

NOTE: Seal top and bottom of door to minimize warping (use wood door manufacturer's recommendations.)

- 2.2.1 Prepare the door properly for the wood door adaptor.
- 2.2.2 Cut wood door adaptor to be equal width of door.

XL120:

- Secure the two wood door adaptor pieces to top of door with #10 x 3" wood screws.

NOTE: Be sure screws are always secured in the first four and last four holes of the adaptor, along with every fourth hole in between.

2.3 Securing track to mounting surface

- 2.3.1 Ensure the track is properly level and secure it to the ceiling per the appropriate measurements on the following page.

- **NOTE: SEE DIMENSION INSTRUCTIONS ON NEXT PAGE FOR REFERENCE.**

NOTE:

WALL REINFORCEMENT:

The wall reinforcement must be a minimum of 1/4" [6] x 3" [76] steel angle, 16 gauge metal stud, or 1-1/2" [38] thick wood blocking secured to the wall studs on a maximum 16" [406mm] centers for the length of the track. The wall reinforcement may be flush on the wall surface or on the interior of the wall. For masonry walls the track may be secured directly to the wall with lead anchors.



- 2.3.2 Use appropriate fasteners according to the following recommendations.

Track mounting screws must fully penetrate the steel angle, metal stud, or wood blocking, utilizing the predrilled holes in the MUTO track.



Consult with a structural engineer to determine if reinforcement is adequate for your specific application or to meet specific codes in your location.

2.4 Door/wall dimensions

Single door mount

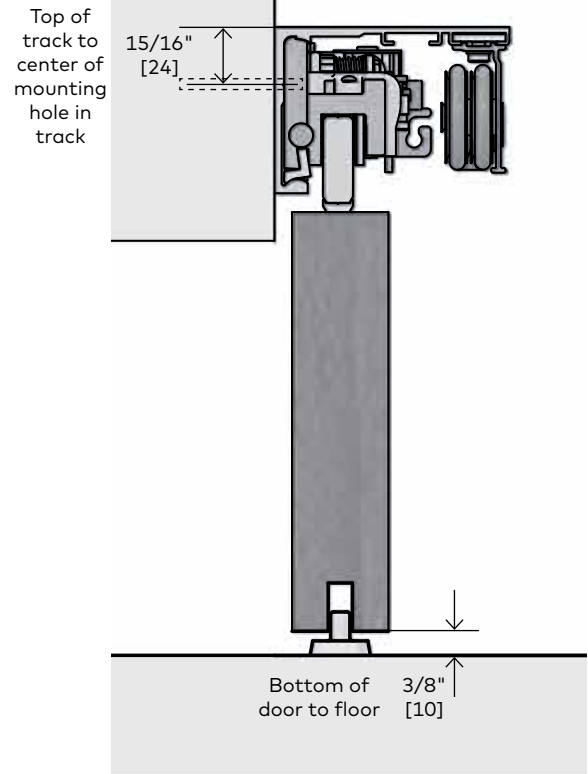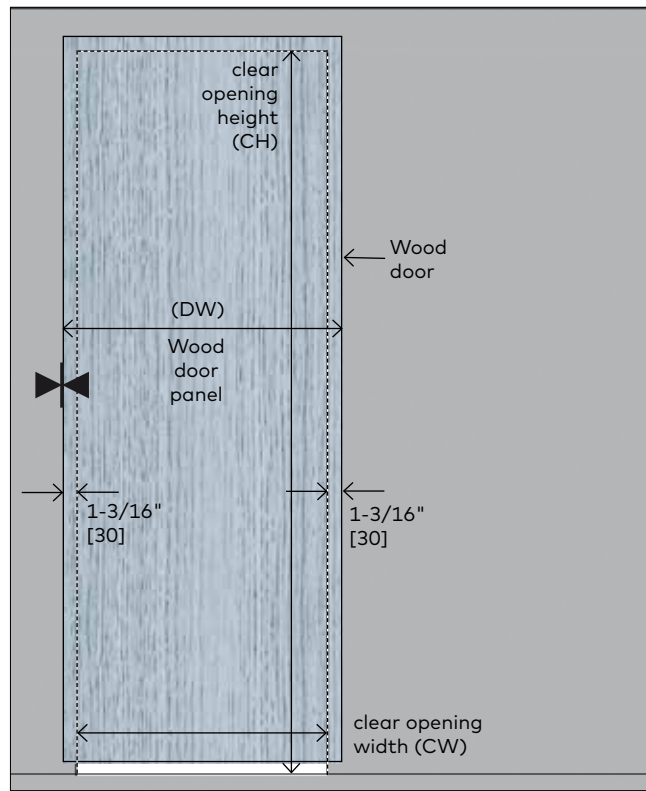


Double door mount

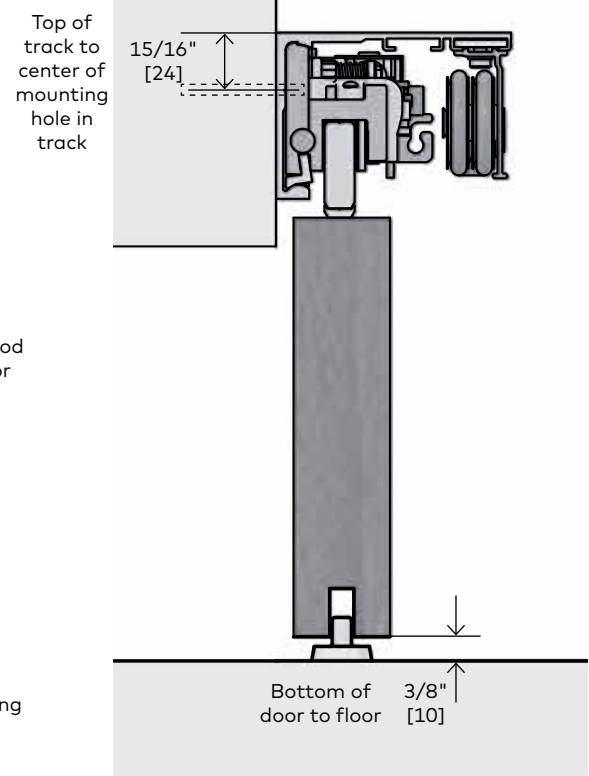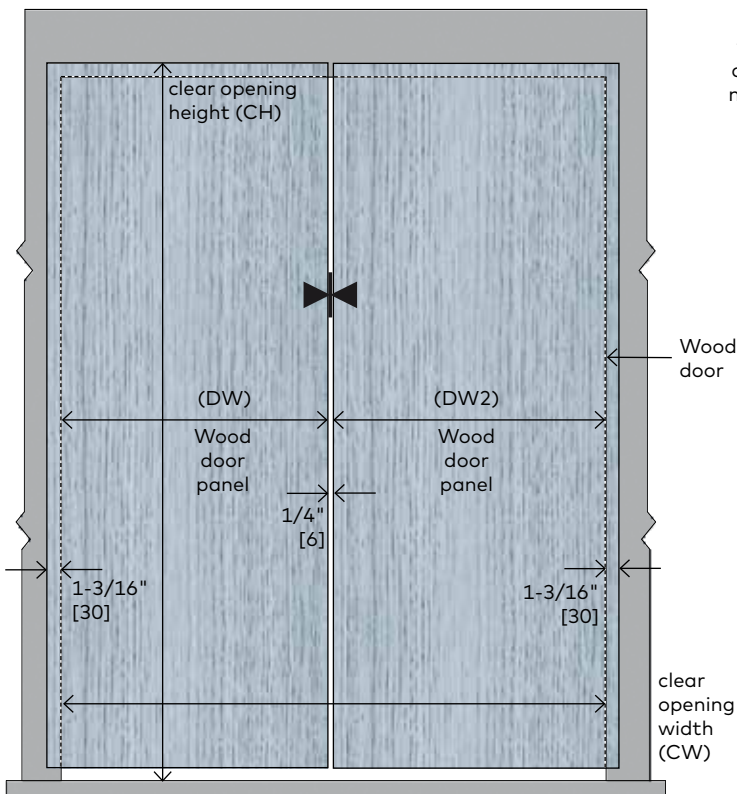

2.5 Installing roller carriers:

Fig. 2

DETERMINE THE LEADING (X) VERSUS TRAILING (Z) EDGE OF THE GLASS.
"LEADING IS SIDE CLOSEST TO LATCH CLOSED."




Roller location on wood door with DORMOTION unit		
XL120		
Single door	X	2-3/8" [60]
Single door	Z	3-1/8" [80]
Double door	X	2-3/8" [60]
Double door	Z	3-1/8" [80]

Legend


 Closing edge of door

Secure →

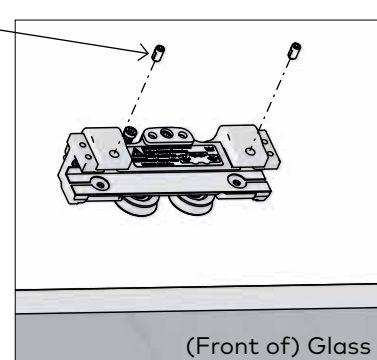

(Front of) Glass

Roller carrier →

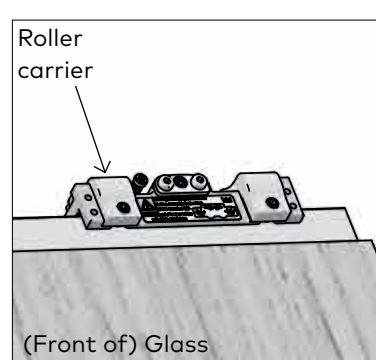

(Front of) Glass

Torque values	
XL120	10ft lbs [14Nm]

Hex key size	
XL120	4mm

NOTE: FULLY CLEAN SURFACE OF GLASS WITH AN ALCOHOL-BASED MILD GLASS AND SURFACE CLEANER. ENSURE NO DEBRIS IS ON THE GASKET.


NOTE: ENSURE ROLLER CARRIER WHEELS ARE FREE OF DEBRIS.

- 2.5.1 Slide roller carriers onto wood door adaptor.
- 2.5.2 Slide gasket and metal shim between adaptor and roller carrier.

- **NOTE: Orient gasket with rubber side facing the adaptor.**
- 2.5.3 Secure roller carriers to wood adaptor using appropriate-size hex key at 10 ft lbs [14 Nm].

2.6 Installing DORMOTION start/stop

Fig. 3

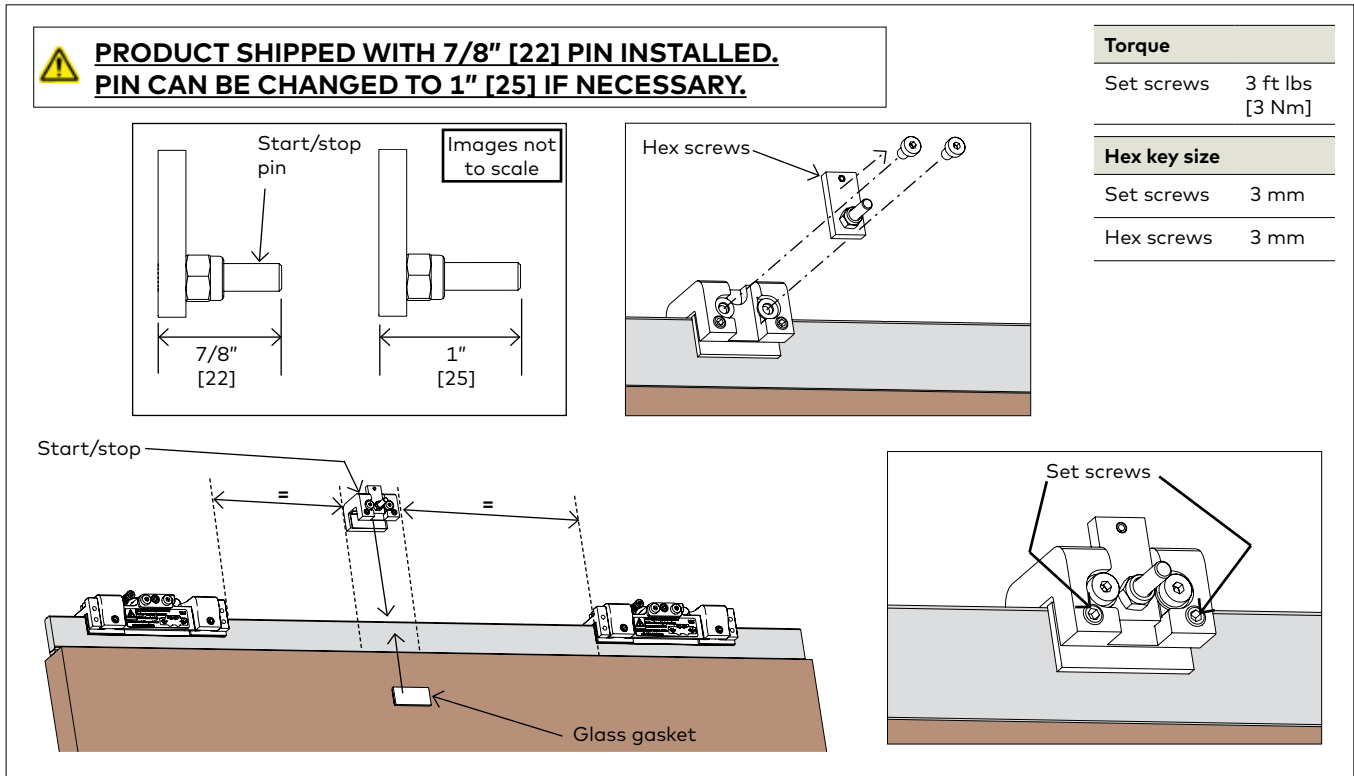

NOTE: Determine a pin length based upon how square and plumb the opening is.

- 2.6.1 If required, change pin in start/stop assembly.
- Remove hex screws.
 - Remove existing pin and plate.
 - Swap in appropriate pin and plate.
 - Replace hex screws.


- 2.5.2 Slide start/stop onto glass.
 2.5.3 Center equally between the carriers.
 2.5.4 Slide glass gasket between start/stop and glass.

NOTE: Orient with gasket facing glass.

- 2.5.5 Secure start/stop via set screws.

2.7 Disengaging the anti-jump

Fig. 4

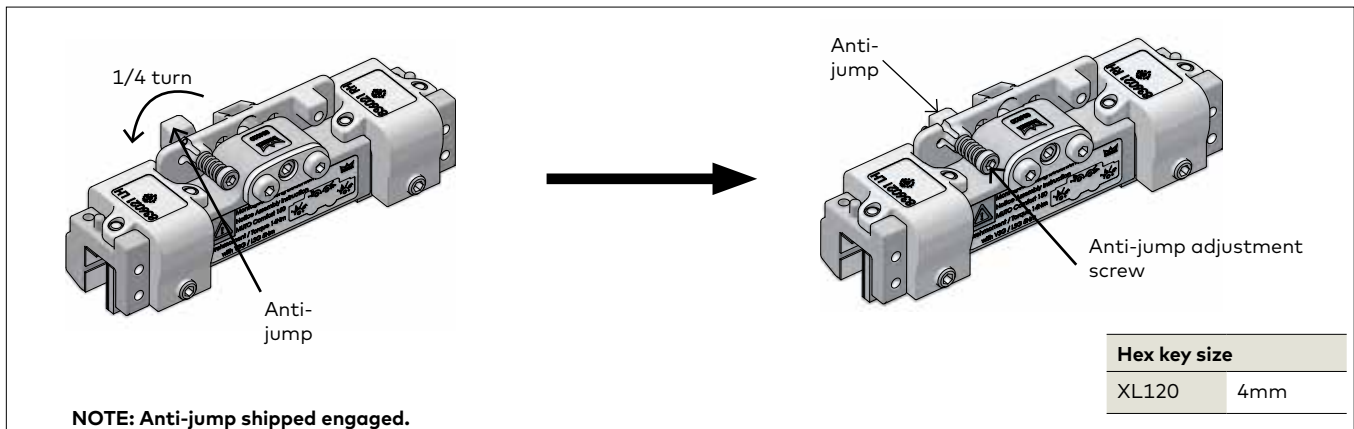


- 2.7.1 Disengage the anti-jump on roller carrier.

NOTE: Using the appropriate-size hex key, push anti-jump adjustment screw IN and turn COUNTER-CLOCKWISE 90° to disengage anti-jump.

2.8 Installing the end stops

Fig. 5

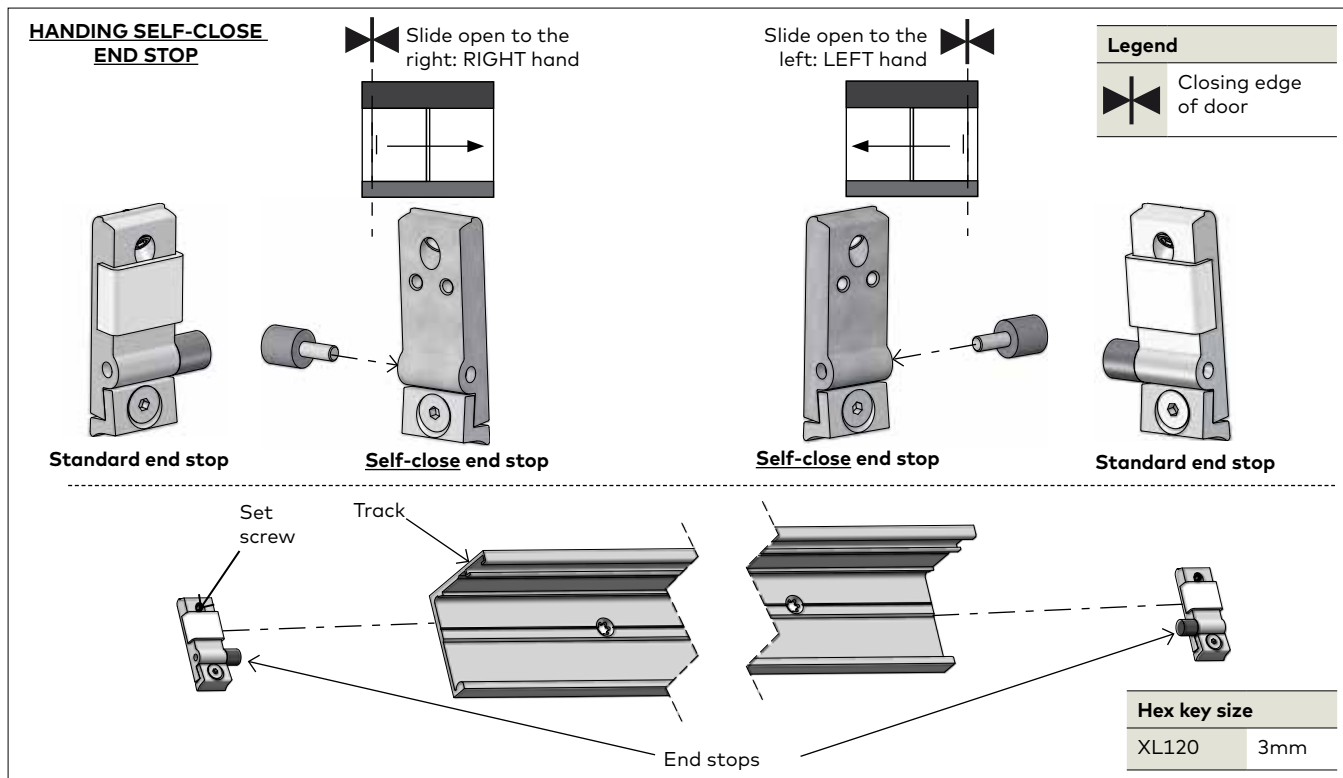

Handing the [opening side] end stop:

2.8.1 Determine closing edge of door.

- **SELF-CLOSE END STOP WILL BE USED ON OPENING SIDE OF DOOR.**

2.8.2 Hand self-close end stop by inserting bumper on appropriate side of end stop.

Install both end stops:

2.8.3 Slide self-close end stop into opening side of track.

2.8.4 Slide appropriate standard end stop into closing side of track.


NOTE: Loosen bottom section of end stop for easier install.

NOTE: Be sure set screw is flush with back of bumper.

NOTE: Adjustment can be set in the "Adjustment End Stop Location" section.

2.9 Install door/rollers in track

Fig. 6

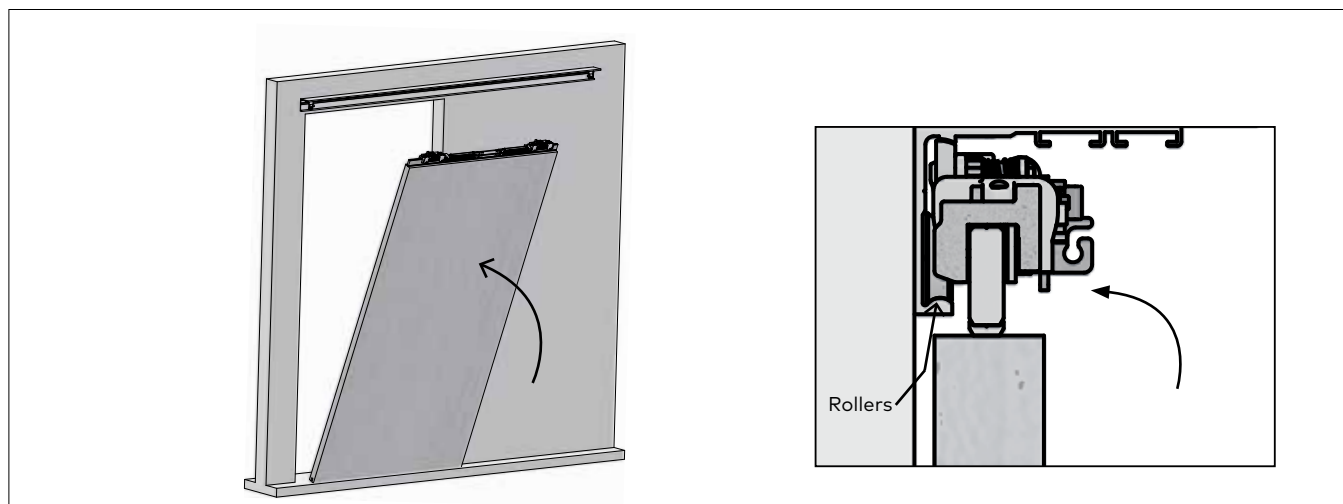


⚠ ENSURE ROLLERS AND TRACK ARE FREE OF DEBRIS.

2.9.1 Tip wood door and rollers upward and rest rollers on track.

2.10 Install floor guide

Fig. 7

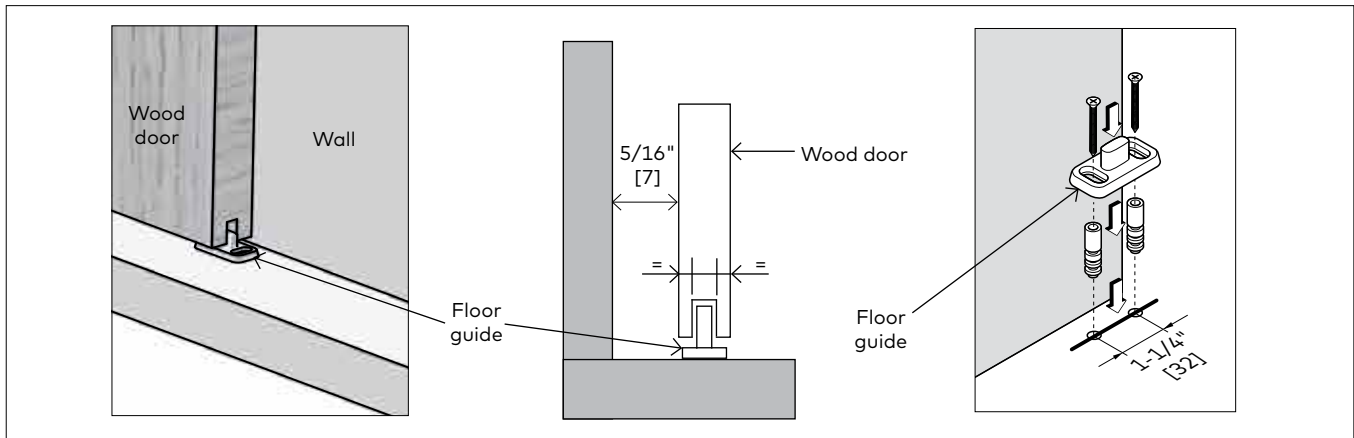

REMEMBER ANTI-JUMP IS DISENGAGED!

- 2.10.1 Temporarily slide floor guide into bottom groove of wood door.
- 2.10.2 Be sure the glass is plumb.
- 2.10.3 Mark appropriate floor guide measurements.

2.10.4 TEMPORARILY REMOVE WOOD DOOR AND ROLLERS FROM TRACK (TO ALLOW FOR DRILLING SPACE).


2.10.5 Pre-drill into mounting surface using a 5/16" drill bit.

2.10.6 Secure floor guide with included fasteners.

2.10.7 SET WOOD DOOR AND ROLLERS BACK ONTO TRACK.

2.11 Engaging anti-jump

Fig. 8

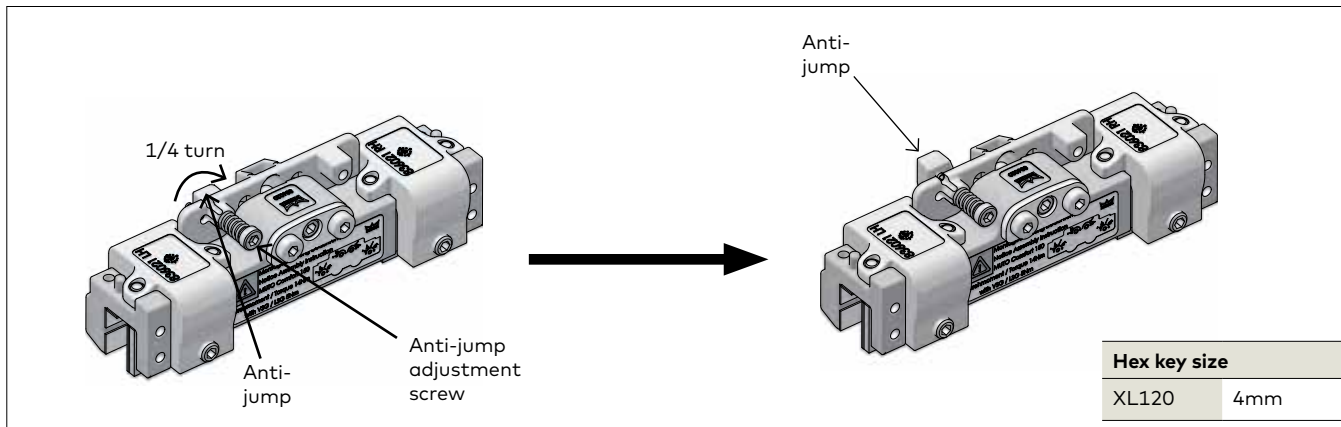


2.11.1 Engage anti-jump on roller carrier.

2.11.2 Using appropriate-size hex key, push anti-jump adjustment screw **IN** and turn **CLOCKWISE** 90° to **engage** anti-jump.

2.12 Adjustment door height

Fig. 9

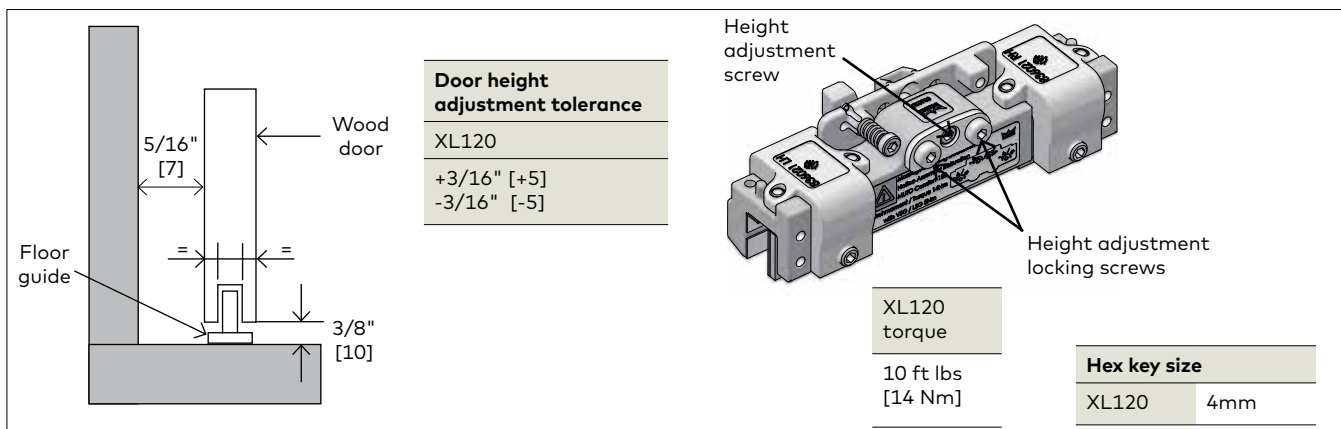

2.12.1 Set height of wood door.

2.12.2 Loosen height adjustment locking screws of carrier.


2.12.3 Using appropriate-size hex key, turn height adjustment screw **CLOCKWISE** or **COUNTER-CLOCKWISE** to raise or lower the door.

NOTE: Be sure door is level during this adjustment.

Fig. 12 RH DM unit installation


2.13 Adjustment end stop location: LEADING end stop

Fig. 10

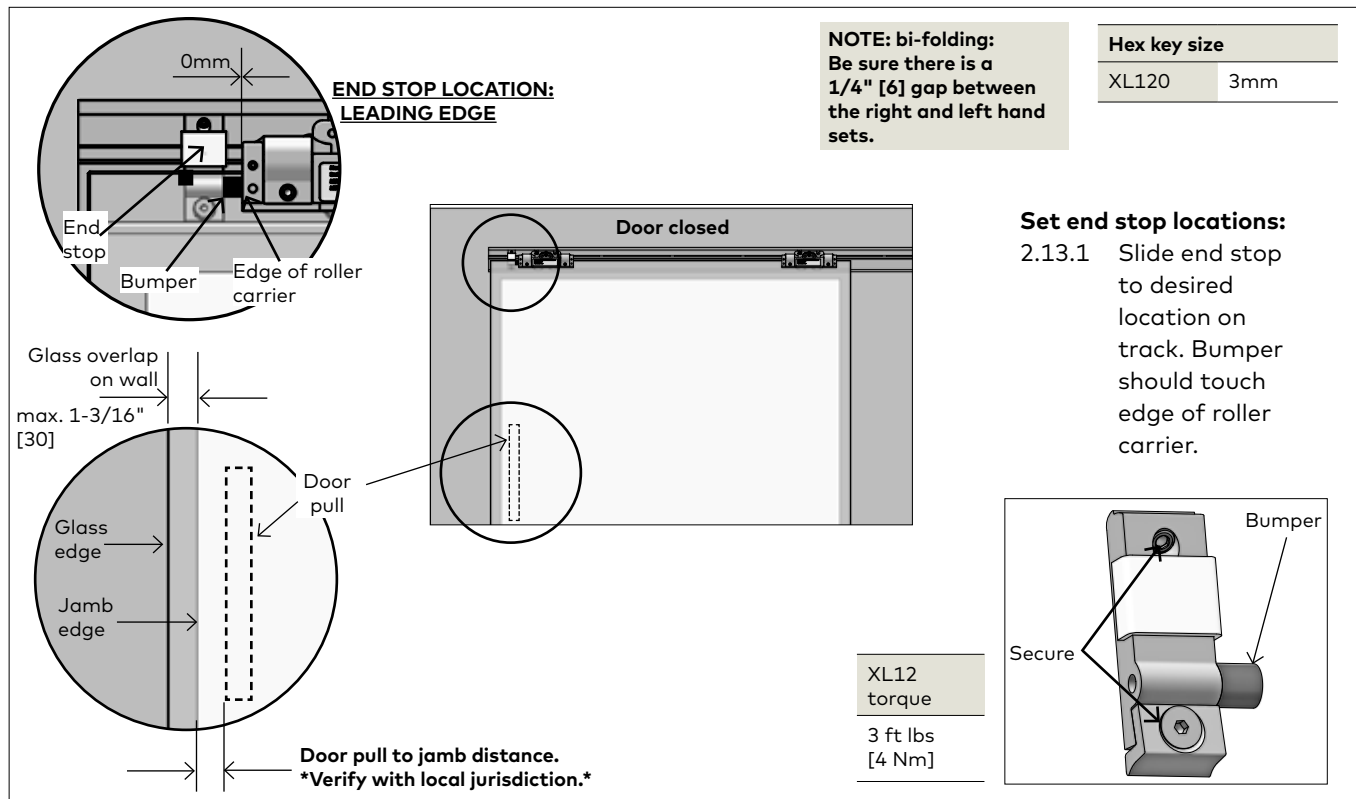

Adjustment end stop location: TRAILING end stop

Fig. 11

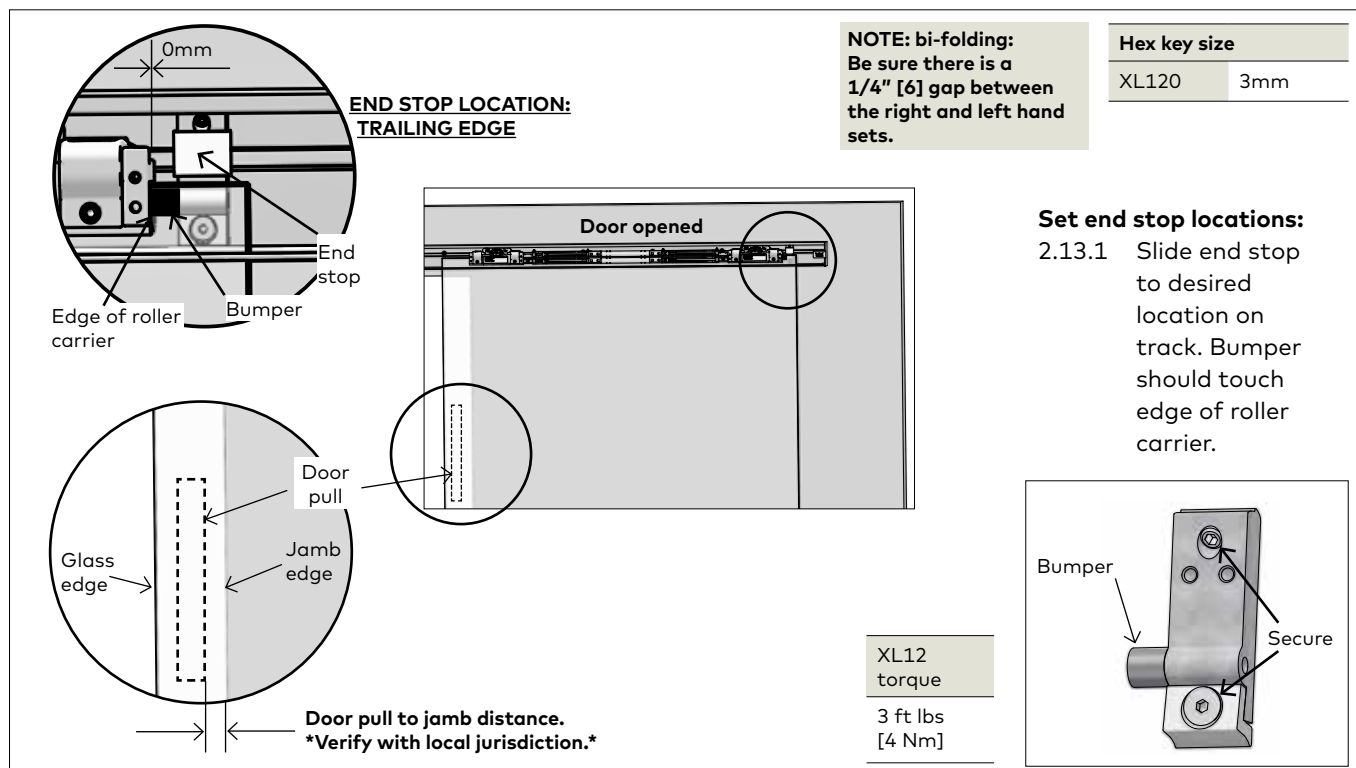

2.14 Install RH DORMOTION unit - door closed

Fig. 12

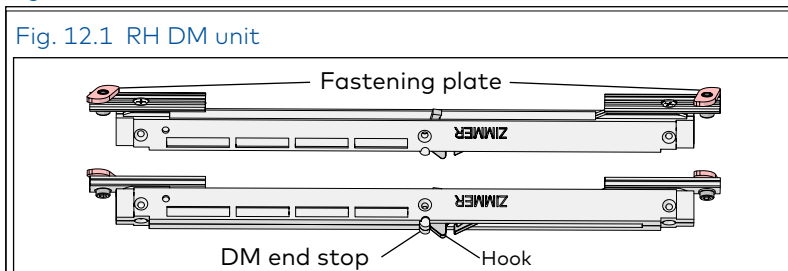


Fig. 12.2 RH DM unit fastening plates rotated




Fig. 12.3 RH DM unit inserted in track

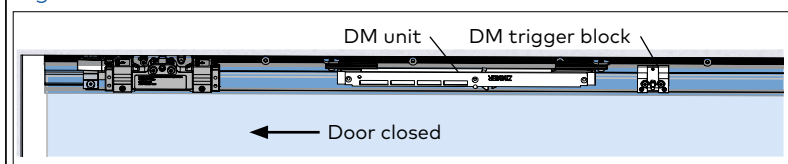


Fig. 12.4 DM unit hook positioned in trigger

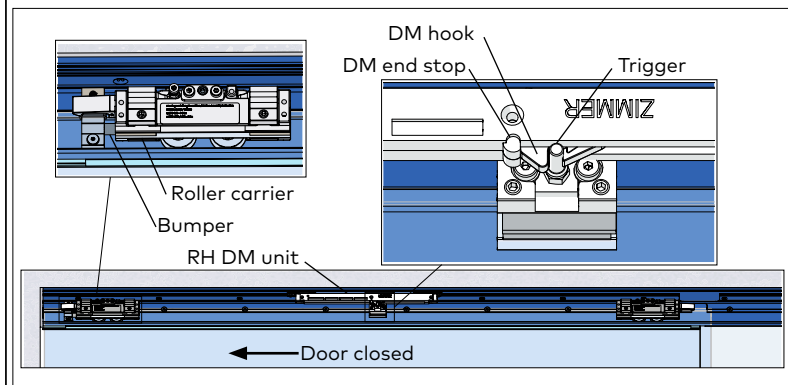


Fig. 12.5 DM unit end stop and hook separation adjustment


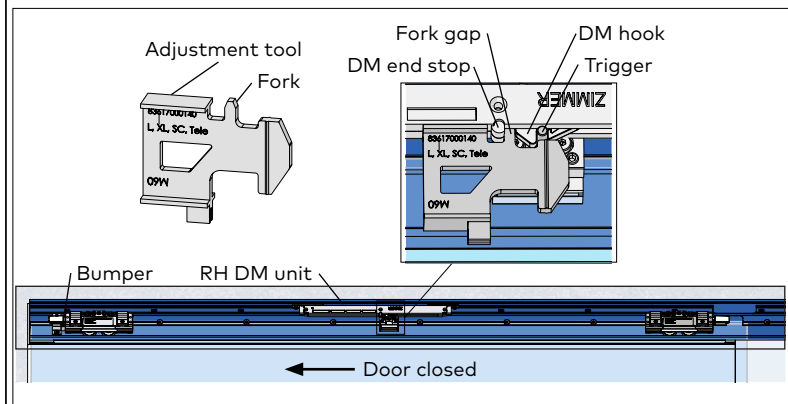


Fig. 12.6 RH DM unit fastening plates secured in track

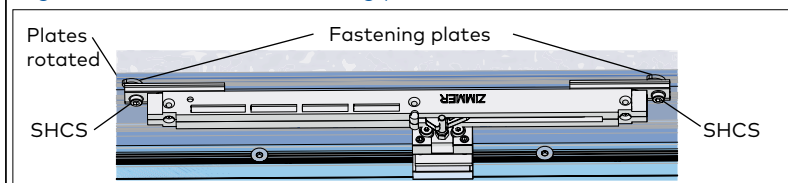


2.14.1 Rotate RH DM fastening plates.

- Using 4 mm hex key, loosen fastening plate hex screws.
- Rotate fastening plates until they are parallel to the DM unit (Fig. 12.2)
- Snug hex screws.

2.14.2 Move door to close position.

- For installation of RH DM unit, door must be in the closed position against bumper.

Fig. 12.7 RH DM unit aligned in track

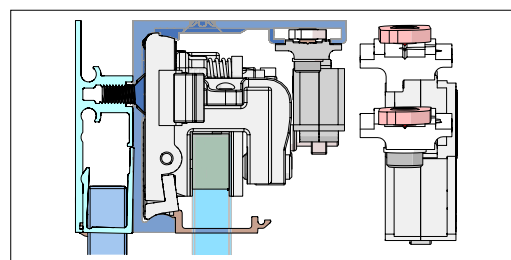

2.14.3 Align DM unit in track, engage DM hook in DM trigger.

- Align DM unit in track (Fig. 12.7).
- Slide DM unit over the DM trigger block until the DM hook engages the DM trigger (Fig. 12.4)

2.14.4 Use adjustment tool to set DM unit final position.

- Place adjustment tool flat against DM unit with fork between DM hook and DM end stop (Fig. 12.5).
- Slide DM unit over until hook and DM end stop are against the fork. This sets 5 mm gap (fork gap).
- **Trigger height:** Adjust so trigger sets on top of adjustment tool (Para. 2.16).


2.14.5 Secure the DM unit in position.

- NOTE: Insure door is fully closed against bumper before performing this step.
- Using 4 mm hex key, tighten DM unit fastening plate socket head cap screws . Fastening plates must engage the track (Fig. 12.6 and .8).

Torque


Socket head cap screws 3 ft lbs [4 Nm]

Fig. 12.8 RH DM unit installed in track

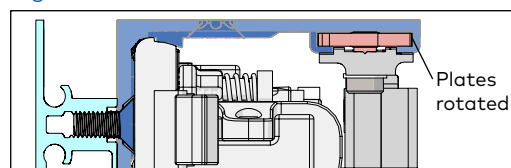

2.15 Install optional LH DORMOTION unit in opening cycle

Fig. 13

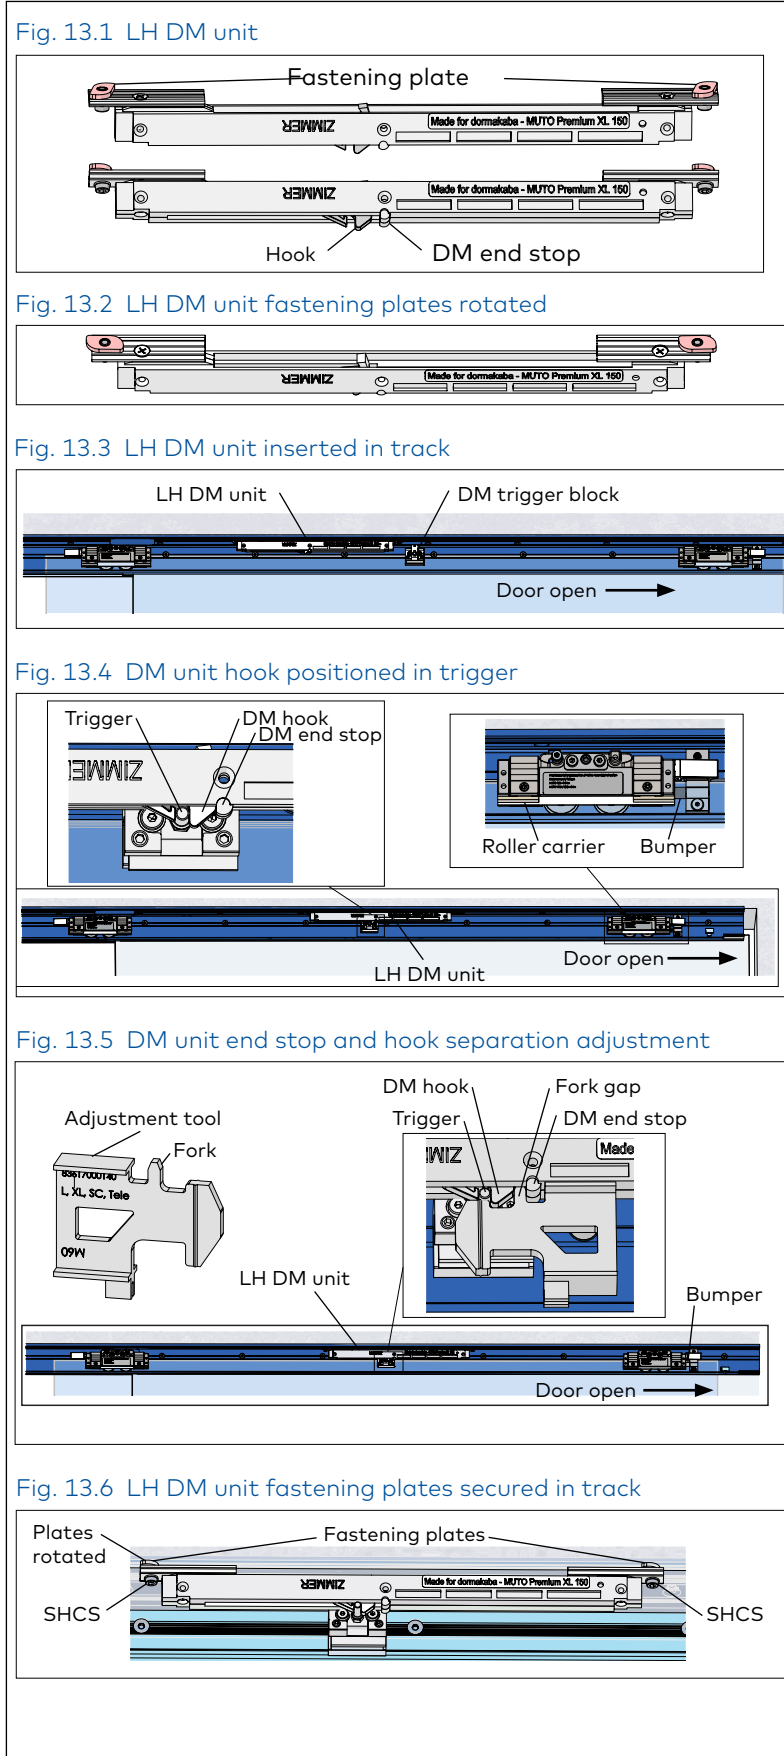


2.15.1 Rotate DM fastening plates.

- Using 4 mm hex key, loosen fastening plate hex screws.
- Rotate fastening plates until they are parallel to the DM unit (Fig. 13.2)
- Snug hex screws.

2.15.2 Move door to open position.

- For installation of LH DM unit, door must be in the open position against bumper.

Fig. 13.7 LH DM unit aligned in track

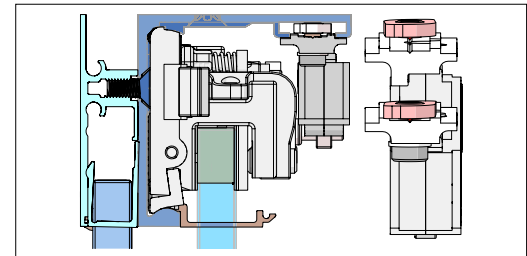

2.15.3 Align DM unit in track, engage DM hook in DM trigger.

- Align DM unit in track (Fig. 13.7).
- Slide DM unit over the DM trigger block until the DM hook engages the DM trigger (Fig. 13.4)

2.15.4 Set DM unit final position.

- Place adjustment tool flat against DM unit with fork between DM hook and DM end stop (Fig. 13.5).
- Slide DM unit over until hook and DM end stop are against the fork. This sets 5 mm gap (fork gap).
- **Trigger height:** Adjust so trigger sets on top of adjustment tool (Para. 2.16).


2.15.5 Secure the DM unit in position.

- NOTE: Insure door is fully open against bumper before performing this step.
- Using 4 mm hex key, tighten DM unit fastening plate socket head cap screws. Fastening plates must engage the track (Fig. 13.8).

Torque


Socket head cap screws 3 ft lbs [4 Nm]

Fig. 13.8 LH DM unit installed in track

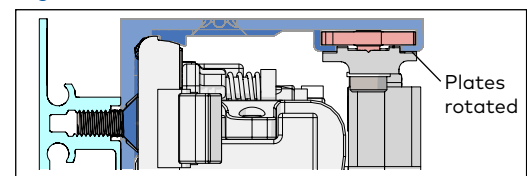


2.16 Adjust start/stop pin height (if necessary)

Fig. 14

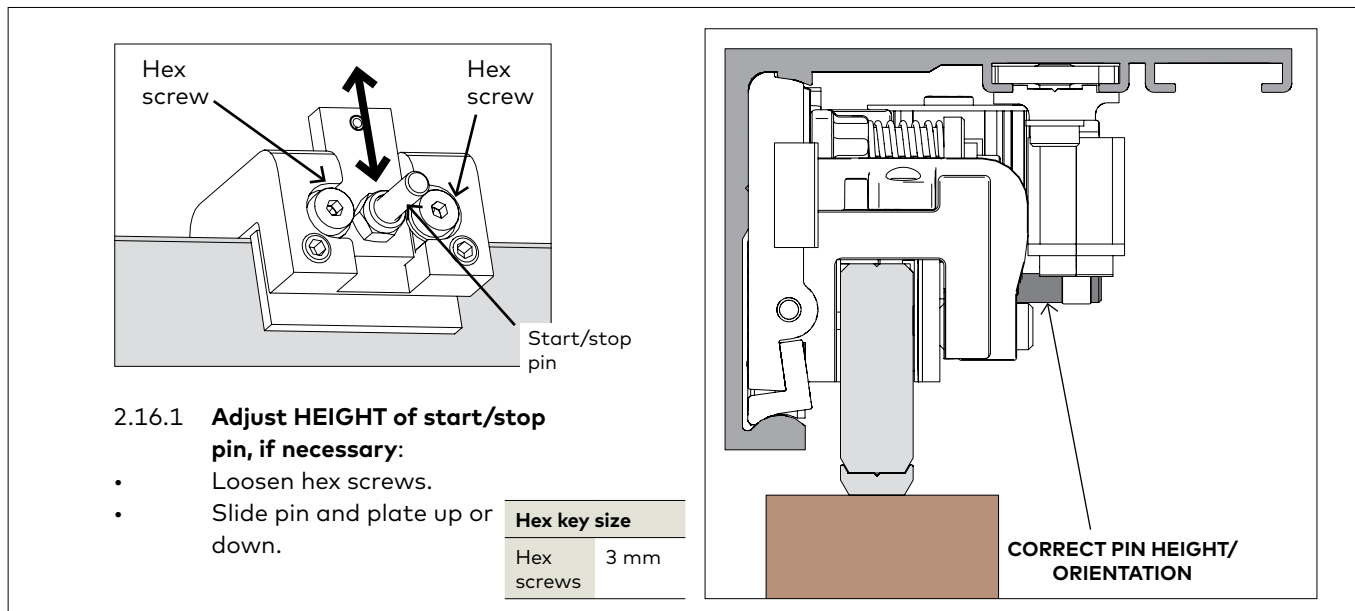

2.17 Install self-close hold open clamp

Fig. 15

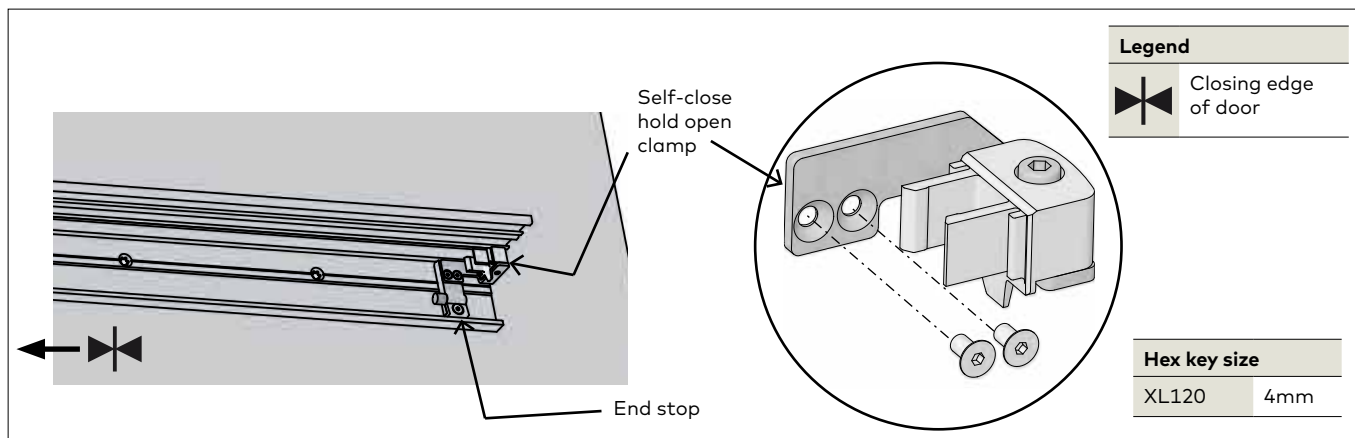


2.17.1 Secure self-close hold open clamp to the end stop furthest from latch [closing side].

- Use two screws and tighten to 2.5 ft lbs (3Nm).

2.18 Install self-close hold open ball

Fig. 16

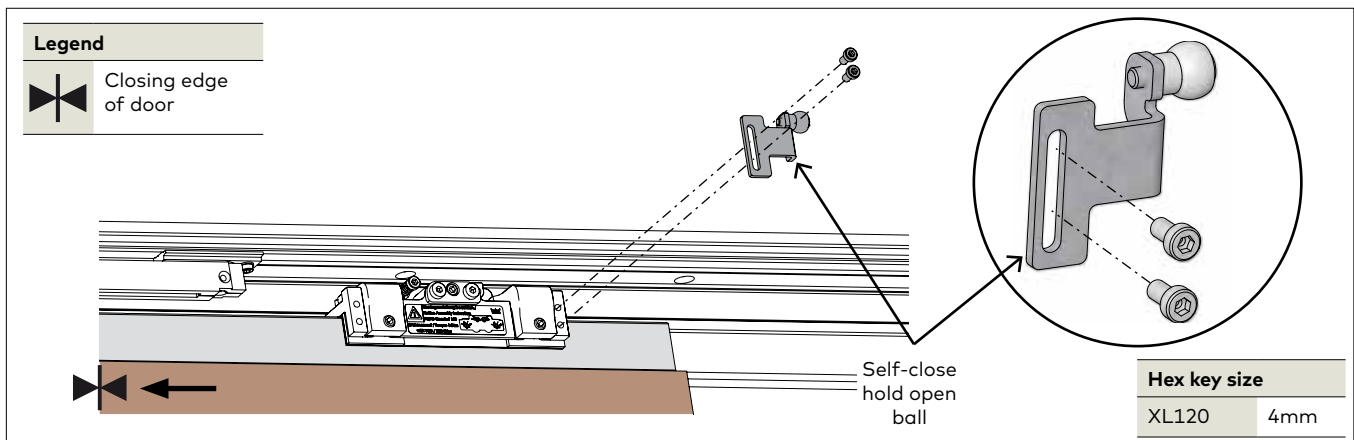


2.18.1 Secure self-close hold open ball to carrier furthest from latch [closing side].

- Use two screws and tighten at 2.5 ft lbs [3Nm].

2.19 Install self-close cable connector

Fig. 17

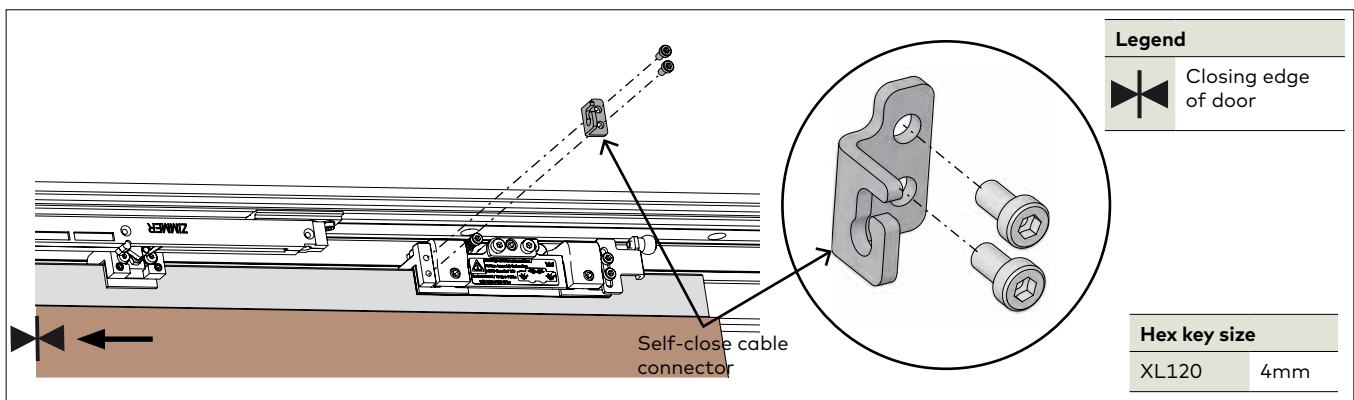


2.19.1 Secure self-close cable connector to opposite end of carrier, furthest from latch [closing side].

- Use two screws and tighten at 2.5 ft lbs (3Nm).

2.20 Install self-close cable unit

Fig. 18

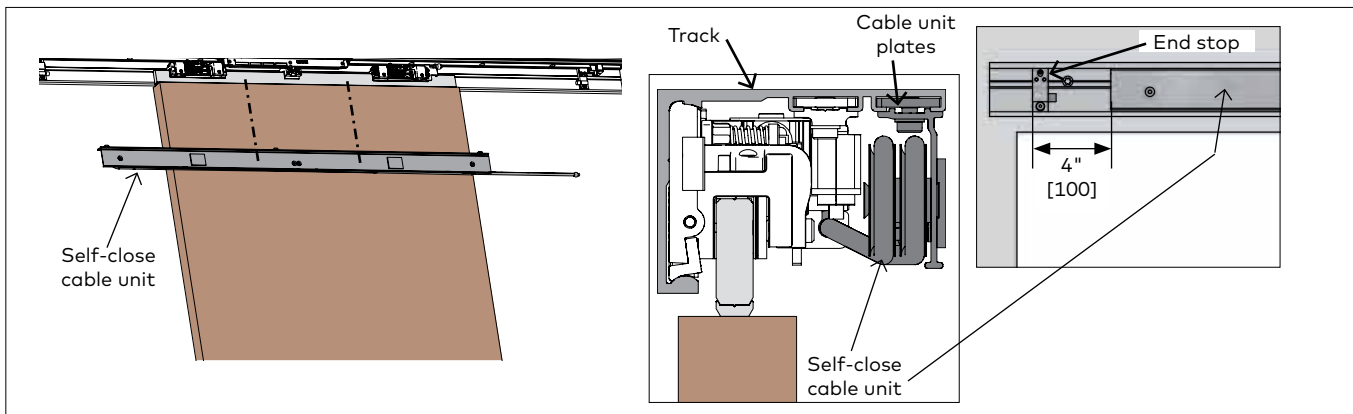


2.20.1 Secure self-close cable unit into first groove of MUTO track.

2.20.2 Rotate plates inside track channel to engage.

- Use three screws/plates and tighten at 3 ft lbs (4 Nm).

2.21 Prepare self-close cable unit

Fig. 19

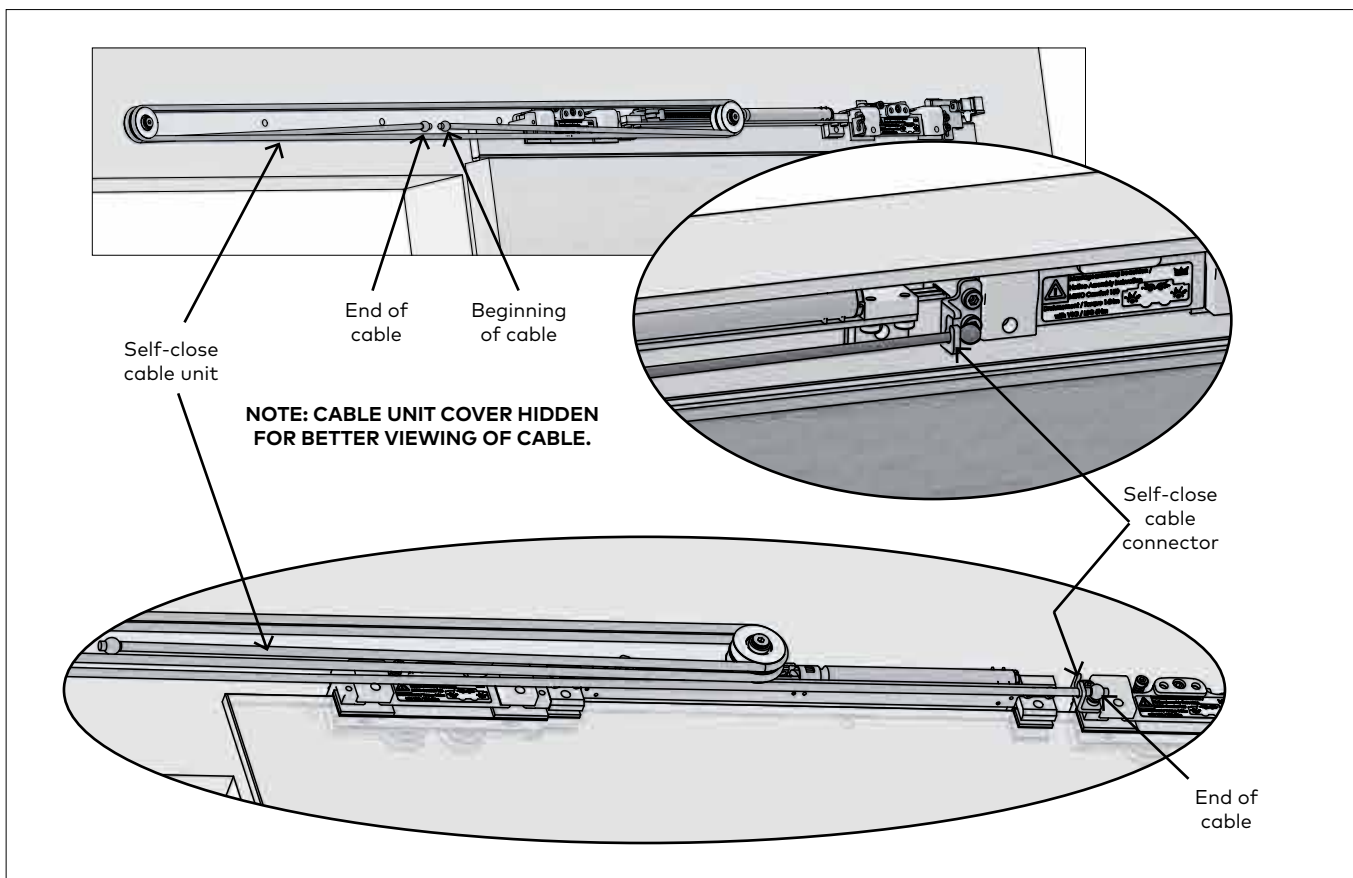


2.21.1 Pull "end of cable" over to connect with cable connector.

2.21.2 Continue to pull cable through connector to either increase or decrease self-closing tension.

2.22 Adjust tension in self-close cable unit

Fig. 20

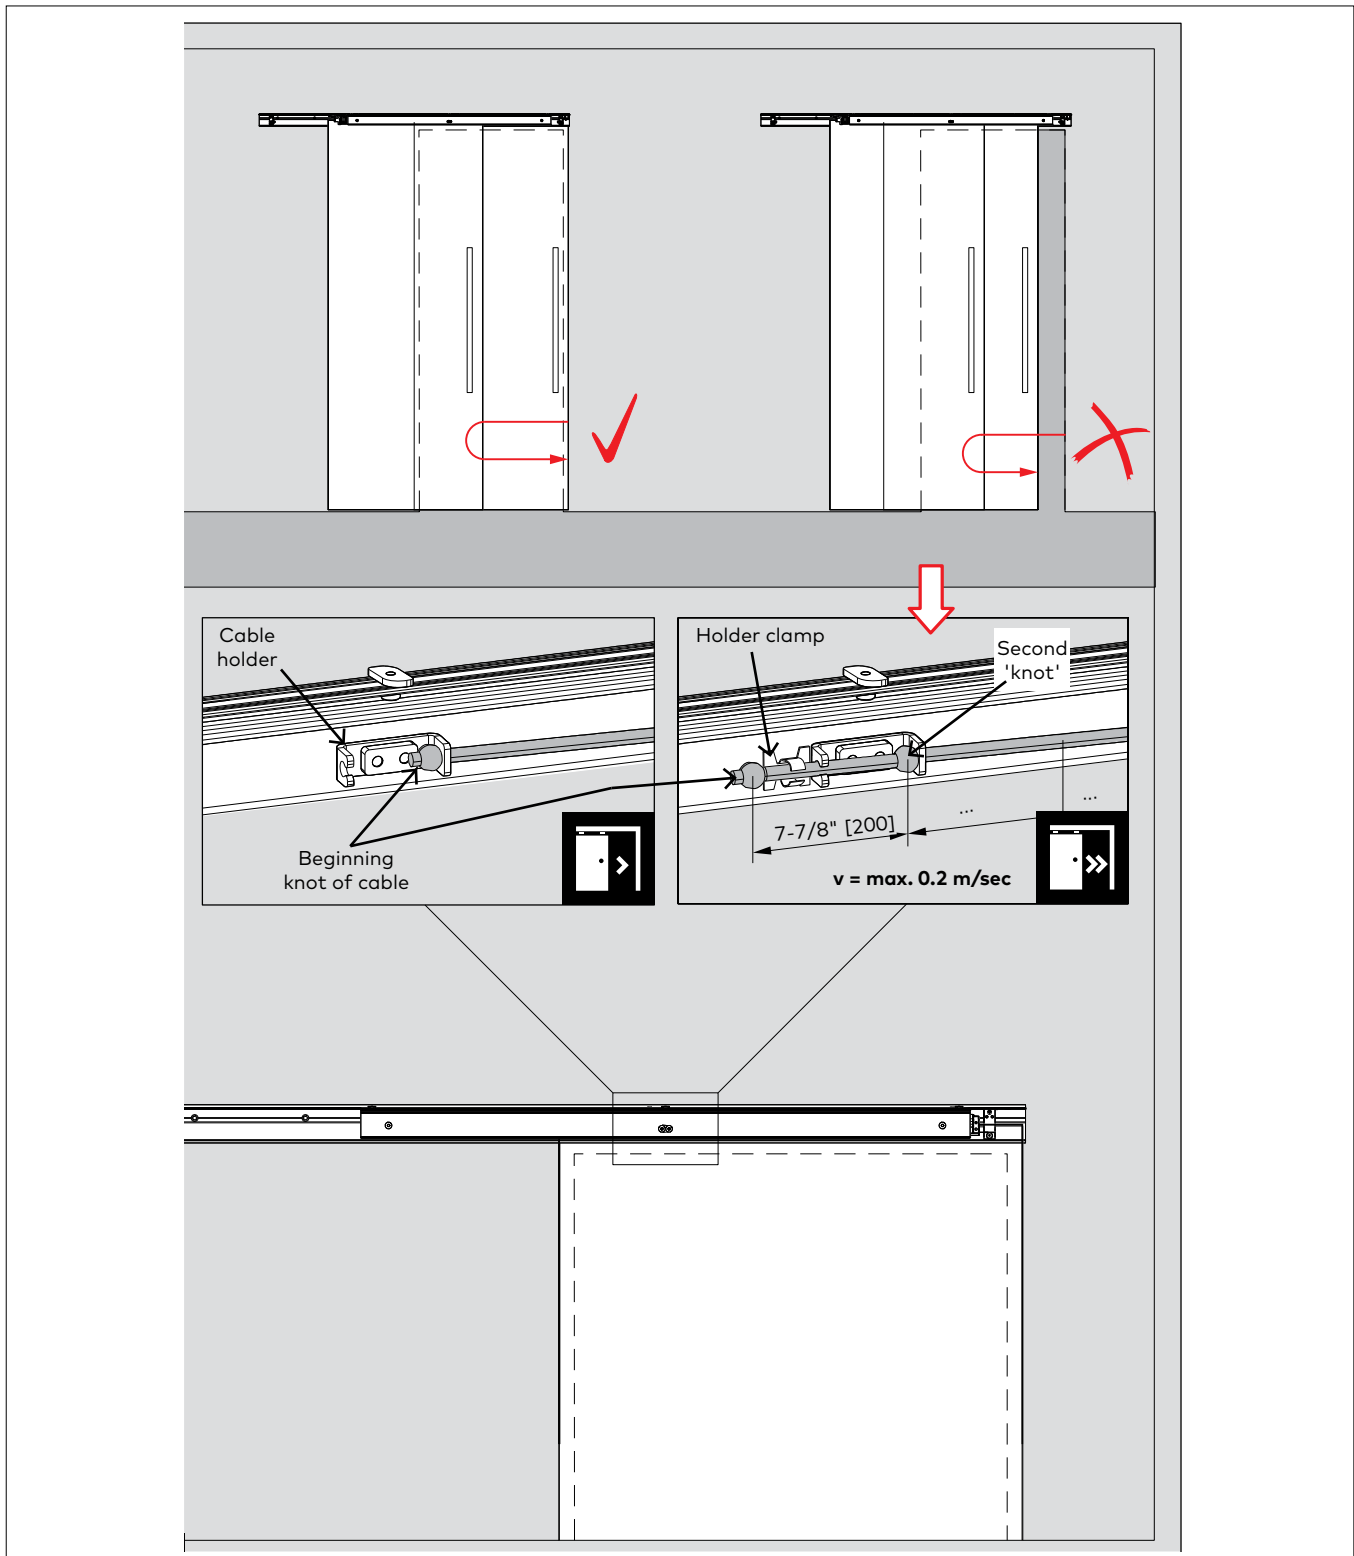

2.22.1 To adjust tension in cable unit cord if necessary, pull 'beginning knot of cable' through cable holder.


2.22.2 Secure another 'knot' and pull cable through holder as show in image above.

2.22.3 Secure beginning 'knot' in holder clamp.

NOTE: Be sure there is a 7-7/8" [200] gap between each new 'knot' in the cord.

2.23 Cover clips

Fig. 21

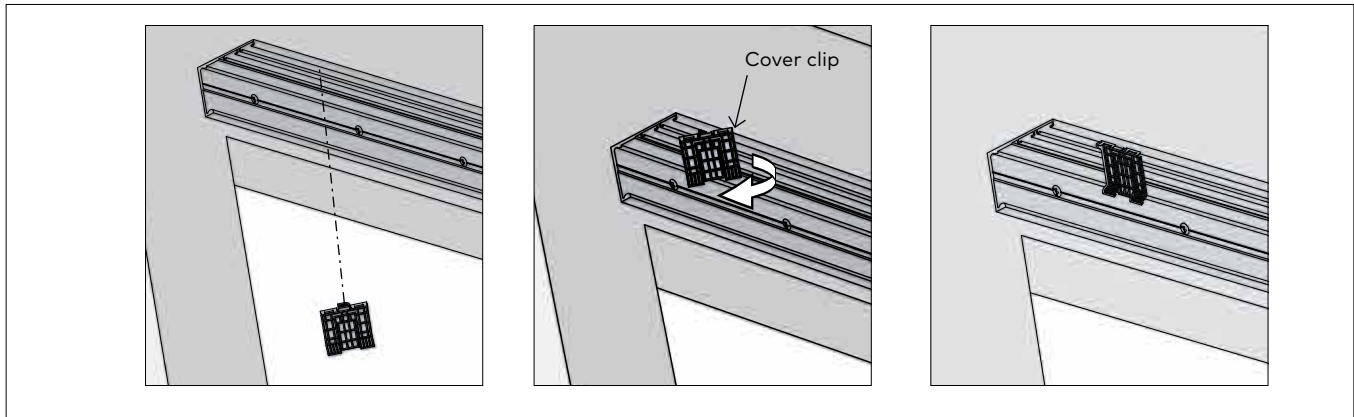


2.23.1 Insert cover clips into track. (One clip per foot)

2.23.2 Insert perpendicular to track, and turn **CLOCKWISE** to snap into place.

2.24 Install brush profile

Fig. 22

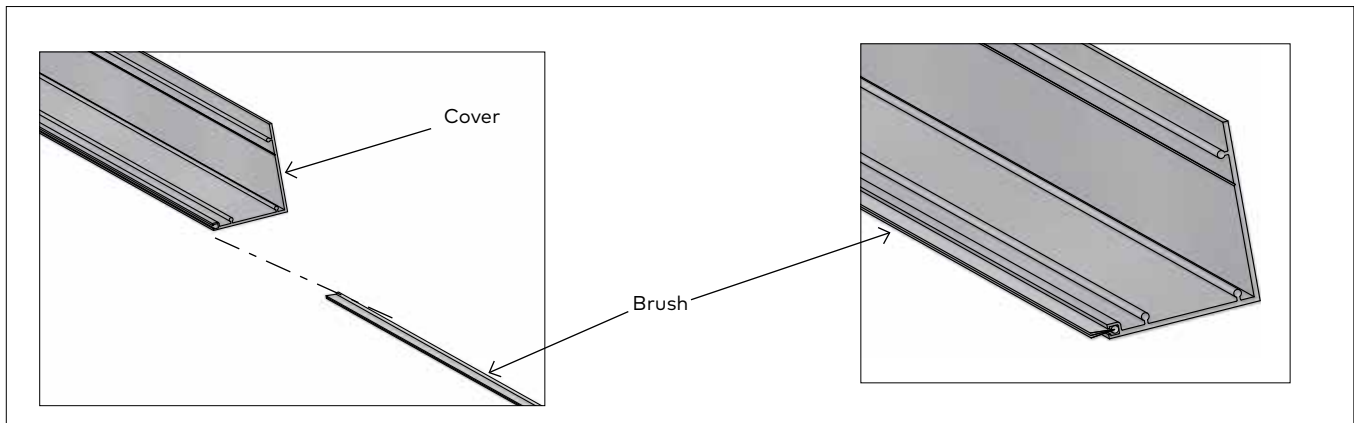


2.24.1 Measure and cut brush to appropriate length.

2.24.2 Slide brush into cover.

2.25 Install view protection clips

Fig. 23

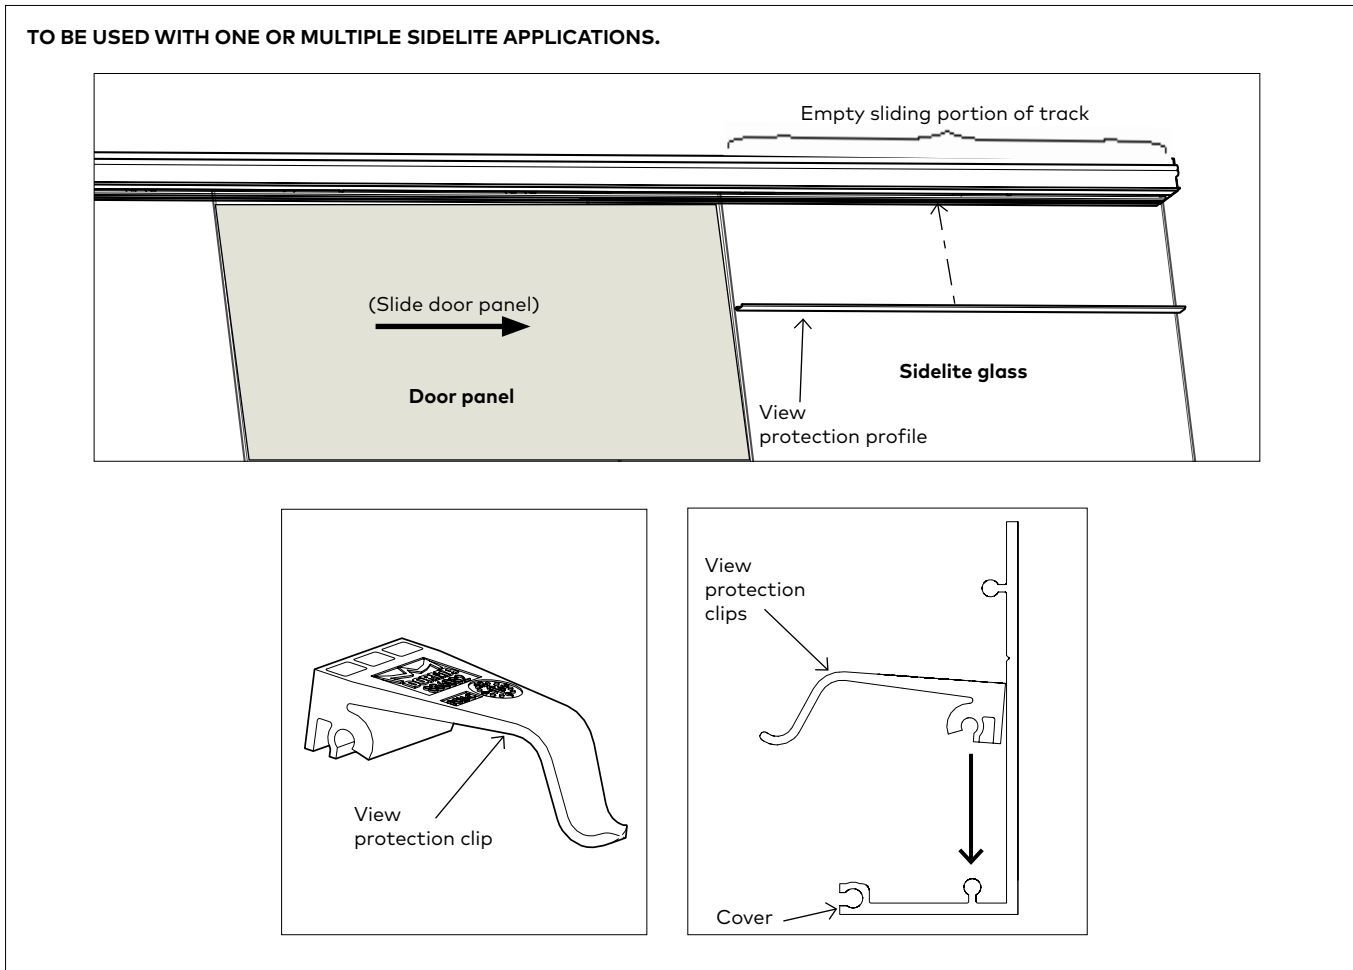


- 2.25.1 Slide door open until it meets the end stop.
- 2.25.2 Measure and cut view protection profile to fit into empty sliding portion of track - 3/16" [5].
- 2.25.3 Snap view protection clips onto inside of cover as shown.

- 2.25.4 Use minimum 1 clip per foot of profile.

Exception: If profile is minimum of 1 foot in length, use 2 clips.

2.26 Install cover and view protection profile

Fig. 24

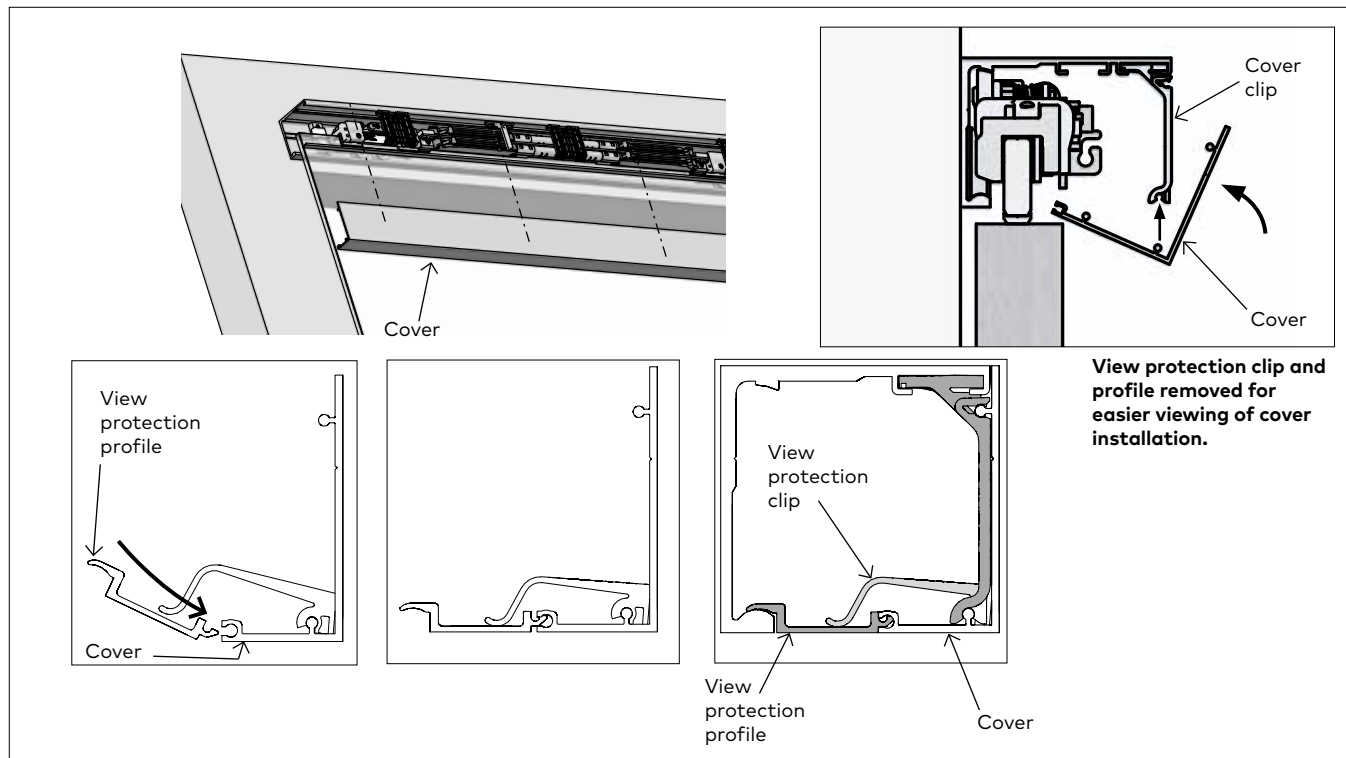


2.26.1 Secure cover to clips and snap into place.
NOTE: Roll cover from the bottom upwards. Ensure the bottom of the cover is supported by the groove in the cover clip.

2.26.2 Tip view protection profile up into track and snap down into cover and onto track as shown.

2.27 Install end caps

Fig. 25

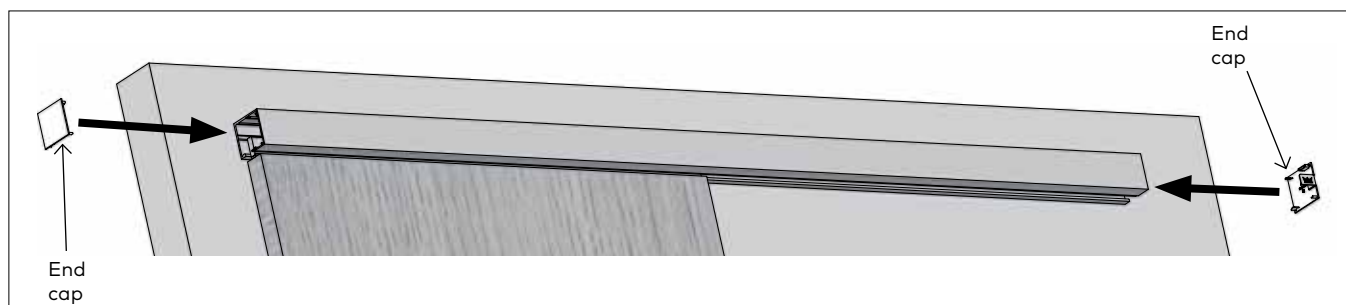

2.27.1 Snap end caps onto track.



Scan for product details and downloads.

Call 800-523-8483 or visit
glasstechserv.us@dormakaba.com
for assistance or warranty information

dormakaba USA, Inc.
1 Dorma Drive, Drawer AC
Reamstown, PA 17567