
8907 AF PKT 90° POCKET DOOR APPLICATION (CLOSER ON WALL)



(REFERENCE UNIT CARTON FOR ACCESSORIES AND OPTIONS SUPPLIED)

Determine hand of door.

Prepare door and frame according to template.




CAUTION: SEX NUTS ARE REQUIRED FOR ATTACHMENT OF COMPONENTS TO UNREINFORCED DOORS AND TO WOOD OR PLASTIC FACED COMPOSITE TYPE FIRE DOORS, UNLESS AN ALTERNATIVE METHOD IS IDENTIFIED IN THE INDIVIDUAL DOOR MANUFACTURER'S LISTINGS.

Attach closer to wall with sweep and latch valves toward edge of frame face.

according to pocket depth chart and tighten screw.

Attach arm shoe to door. Adjust connecting arm rod length

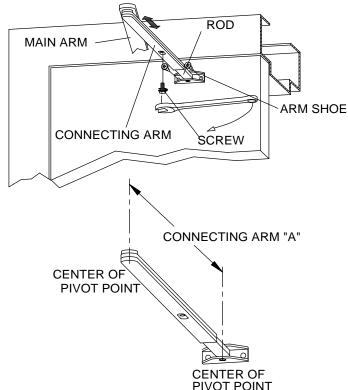

POCKET DEPTH CHART

-[CONNECTING ARM "A"				
	POCKET DEPTH	90° PVT	3/4" OFFSET BUTT HINGE	TOTAL DOOR HINGE	MARKAR FM-300	ARCFM 83 HINGE
	2-1/2	12 (305)	11-3/8 (289)	12-1/16 (306)	10-7/8 (276)	11-1/4 (286)
	3	(305)	11-3/8 (289)	12-1/8 (308)	11 (279)	11-3/8 (289)
	3-1/2	(305)	11-3/8 (289)	12-1/4 (311)	11-1/8 (283)	11-3/8 (289)
k	3-5/8	(305)	11-3/8 (289)	12-1/4 (311)	11-1/8 (283)	11-3/8 (289)
	4	12 (305)	11-3/8 (289)	12-1/2 (318)	11-3/8 (289)	11-1/2 (292)


SWEEP
(LEFT HAND DOOR)

EDGE OF FRAME FACE

SWEEP

LATCH
(RIGHT HAND DOOR)

Place main arm on pinion at 45° off centerline of body, angled toward closed door and secure tightly with pinion screw.

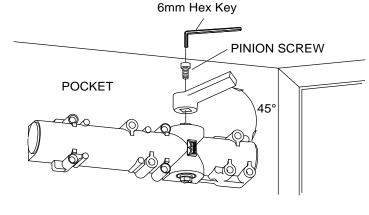

Adjust sweep, latch and backcheck valves. Closing time from 90° to 15° (sweep range) is generally adjusted to take a minimum of 3 seconds. Closing time from 15° to fully closed (latch range) should take a minimum of 1.5 seconds. Backcheck intensity should be adjusted to ensure that the door is under control during the opening cycle protecting the door and objects behind the door. Closing the backcheck positioning valve (clockwise turns) advances the backcheck range approximately 15° toward the door closed position. All valve adjustments are made with a 3/32" hex key.

CONTINUED NEXT PAGE.....

INSPK NO. 08280150 Rev.09/09


www.dorma-usa.com 1-800-523-8483

INS NO. 08280151 PAGE 1 of 2 Rev. 09/09

STEP 5 CONTINUED.....

CAUTION: DO NOT REMOVE VALVES.


BACKCHECK RANGE **SWEEP** DECREASE **RANGE** INCREASE SWEEP & LATCH LATCH **RANGE** POSITIONING VALVE LATCH (SPEED) BACKCHECK (INTENSITY) SWEEP (SPEED)

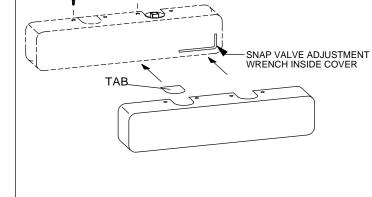

Place tab in cover slot opposite main arm. Place cover over closer and fasten securely with

screws provided.

6



08280151 PAGE 2 Of 2 Rev. 09/09 INS NO.