

Muto Premium XL150

Muto Comfort L80

Ceiling mount less Dormotion with Sidelites (Glass)

## Installation instructions

936010 – 05-2018

| EN |

dormakaba 

# Table of contents

<b>1</b>	<b>Technical specifications</b>	<b>3</b>
1.1	Overview	3
	1.1.1 General information	3
	1.1.2 Intended use	3
	1.1.3 Glass requirements and fittings	3
	1.1.4 Requirements for glass panel	3
	1.1.5 Safety instructions	3
	1.1.6 Symbols used - Safety/Installation	3
	1.1.7 Maintenance, care, repair	3
	1.1.8 Disposal	3
1.2	Specifications - technical data	4
1.3	Tempered laminate glass (TLG) and adhesive specifications	4
<b>2</b>	<b>Installation instructions</b>	<b>5</b>
2.1	Overall	5
2.2	Door/wall dimensions	6
2.3	Installing the end stops	7
2.4	Securing gasket to track	7
2.5	Securing track and sidelite section profile to mounting surface	8
2.6	Installing U-channel for sidelite	8
2.7	Installing sidelite glass	9
2.8	Installing sidelite glass filler panel	9
2.9	Installing sidelite glass gasket	10
2.10	Installing hook set	10
2.11A	Installing the roller carriers: on monolithic glass ONLY	11
2.11B	Installing roller carriers: on tempered laminate glass ONLY	12
2.12	Disengaging the anti-jump	13
2.13	Install glass/rollers in track	13
2.14	Install floor guide	14
2.15	Install floor guide: continued	14
2.16	Engaging anti-jump	15
2.17	Adjustment door height	15
2.18	Adjustment end stop location: LEADING end stop	16
	Adjustment end stop location: TRAILING end stop	16
2.19	Cover clips	17
2.20	Cover spacers	17
2.21	Install brush profile	18
2.22	Install view protection clips	18
2.23	Install cover and view protection profile	19
2.24	Install end caps	19

# 1 Technical specifications

## 1.1 Overview

These instructions are for installation of MUTO PREMIUM and COMFORT sliding door system XL150/ L80 with Sidelites for the following mounting and style versions:

### 1. Ceiling mount

#### 1.1.1 General information

- dormakaba requires use of tempered monolithic or tempered laminated glass.
- dormakaba glass hardware is not suitable for application in rooms where chemicals (e.g. chlorine) are used as indoor swimming pools, saunas or salt-water pools.
- Never move sliding panels faster than walking speed and always stop the door manually before it reaches end position.
- Do not slide doors with excessive force. Install limiting stop to prevent door from opening too far.

#### 1.1.2 Intended use

- For sliding door in dry indoor areas only
- For manual slowly opening and closing only

#### 1.1.3 Glass requirements and fittings

- The substructure/wall must be able to bear permanent loads and be level (max. tolerance: 1/16" [2] per 39" [1m]).
- Fasteners must be sufficiently dimensioned for the substructure/wall and weight of the door.
- When adjusting glass components, always stick to the required clearance for the respective hardware. Adjust clearance so glass does not come in contact with any hard surfaces such as glass, metal or concrete.
- Do not use excessive force when installing the glass (avoid over tightening screws).

#### 1.1.4 Requirements for glass panel

- dormakaba requires use of fully tempered glass, which complies with ASTM C 1036 and ASTM C 1048. Secondary heat soaking processes are recommended but not required. This applies to both tempered monolithic and tempered laminated glass.
- Clamping area must be flat and uncoated (no self-cleaning coating!)
- Never use glass with conchoidal fractures and/or damaged edges.

#### 1.1.5 Safety instructions

- Installation requires two people.

- Only properly qualified and specially trained staff are authorized to mount dormakaba glass hardware.
- Due to crushing hazards and possible injury caused by breakage of glass during mounting, corresponding protective clothing (especially gloves and protective goggles) is required.
- Never clamp metal fitting hardware directly to glass surface.

#### 1.1.6 Symbols used - Safety/Installation



##### CAUTION

Mounting components must meet the requirements of substructure/wall and door weight. Please read the technical information for fittings.



##### WARNING

Risk of breaking glass. When installing the door, support the door panel with a block of wood or similar object.



##### TIPS AND RECOMMENDATIONS

Information note



##### CLOSING EDGE

#### 1.1.7 Maintenance, care, repair

- Immediately replace damaged parts.
- Always use original dormakaba parts.
- Clean clamping area with alcohol-based standard commercial cleaning agent before mounting the glass hardware.
- Use a damp clothe for occasional cleaning, especially the track.
- Always use silicone - and oil-free cleaners (e.g. acetone).
- Check glass hardware at regular intervals for proper positioning and smooth operation and correct adjustment.
- High traffic door systems require inspection by properly qualified staff (specialized companies or installation firms.)

#### 1.1.8 Disposal

Disposal in accordance with local, state and national regulations.

## 1.2 Specifications - technical data

		Single Door		Double Door	
		XL150	L80	XL150	L80
<b>Ceiling mount</b>	Door leaf weight lbs [kg] *	≤330lbs [≤150]	≤176lbs [≤80]	2 x ≤330lbs [2 x ≤150]	2 x ≤176lbs [2 x ≤80]

\* Including weight of auxiliary hardware.

## 1.3 Tempered laminate glass (TLG) and adhesive specifications

Required parts for laminate glass with MUTO System (not included)	Part Number	Quantity	Usage recommendation
3M™ Scotch-Weld™ Urethane Adhesive, DP 605 NS	934.800	1 tube	1 tube per 4 roller carriers
3M™ Scotch-Weld™ EPX™ Plus II Applicator with 1:1 Plunger <sup>2</sup>	934.801	1 applicator	1:1 plunger with 934.800 adhesive
3M™ Scotch-Weld™ EPX™ Plus II Mixing Square Nozzle, 5.3mm <sup>3</sup>	934.805	Pk of 4	4 nozzles per 1 tube of adhesive
MUTO TLG gasket set	807.640	1 set	
Handling time frame	Function	Time	
	Working life ( <i>time between application and clamping of carrier</i> )	5 minutes @ 75°F	
	Handling strength	20 minutes @ 73°F or more	
	Full cure time ( <i>normal door usage not recommended until full cure time as been met</i> )	48 hours @ 73°F or more	

**NOTE: Door glass should not be installed until the full cure time as been reached (see chart above).**

**Important safety-related information for the mounting and use of dormakaba glass hardware.**

1.1 Clean clamping area with alcohol-based standard commercial cleaning agent before mounting the glass hardware.

1.2 Never clamp metal glass fitting hardware directly to glass surface.

1.3 Never use clamping product on surfaces with self-cleaning coatings.

<sup>2</sup> Scotch-Weld™ EPX™ Plus II Applicator with 1:1 Plunger is a trademark of 3M.



<sup>3</sup> Scotch-Weld™ EPX™ Plus II Mixing Square Nozzle is a trademark of 3M.







## 2.2 Door/wall dimentions

### Single sidelite mount

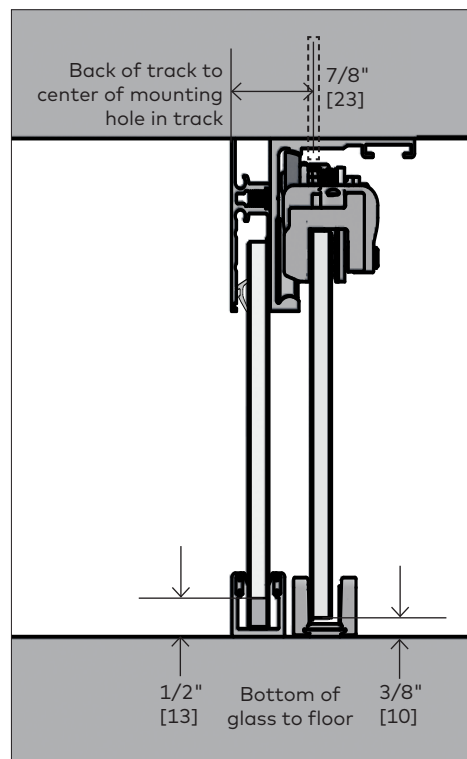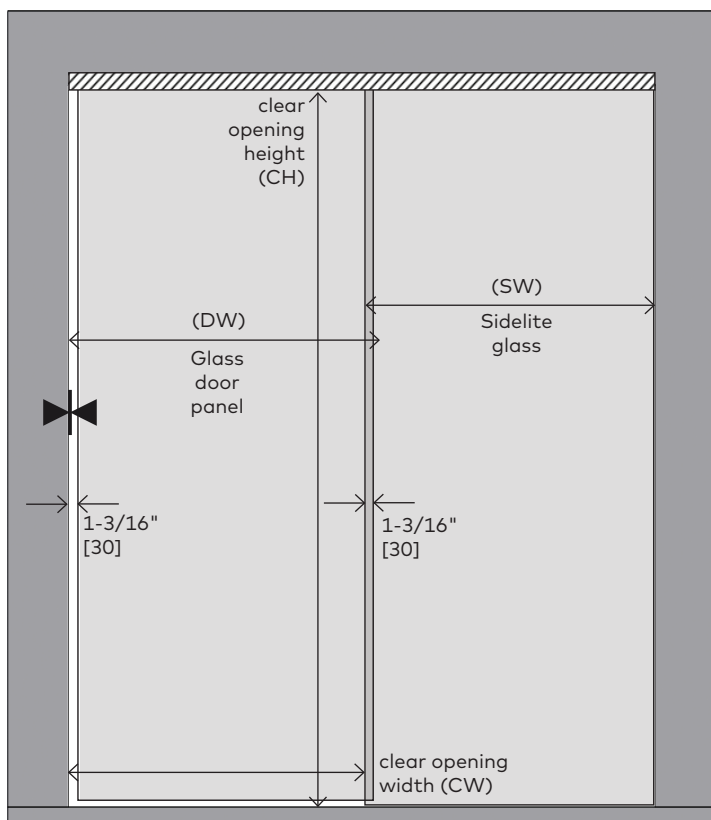

### Multiple sidelite mount

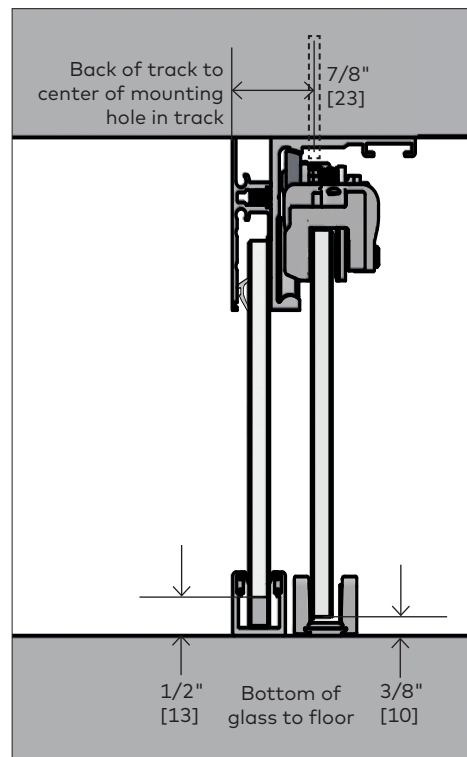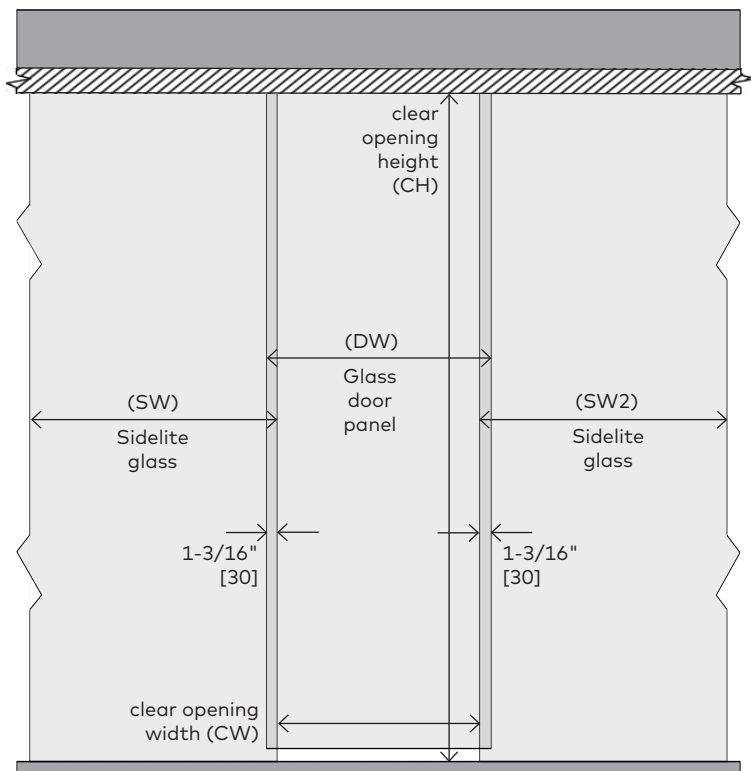

**NOTE:**

**Overhead Reinforcement:**


The overhead reinforcement must be a minimum of ¼" [6] x 3" [76] steel angle, 16 gauge metal stud, or two pieces of 1 1/2" [38] thick wood blocking (double stacked), secured to studs or joists on a maximum 16" [406] centers for the length of the track. The overhead reinforcement may be flush on the overhead surface or on the interior of this surface.

Track mounting screws must fully penetrate the steel angle, metal stud, or at a minimum of 2" [51] into wood blocking, utilizing the predrilled holes in the MUTO track.

Consult with a structural engineer to determine if reinforcement is adequate for your specific application or to meet specific codes in your location.

## 2.3 Installing the end stops

Fig 1

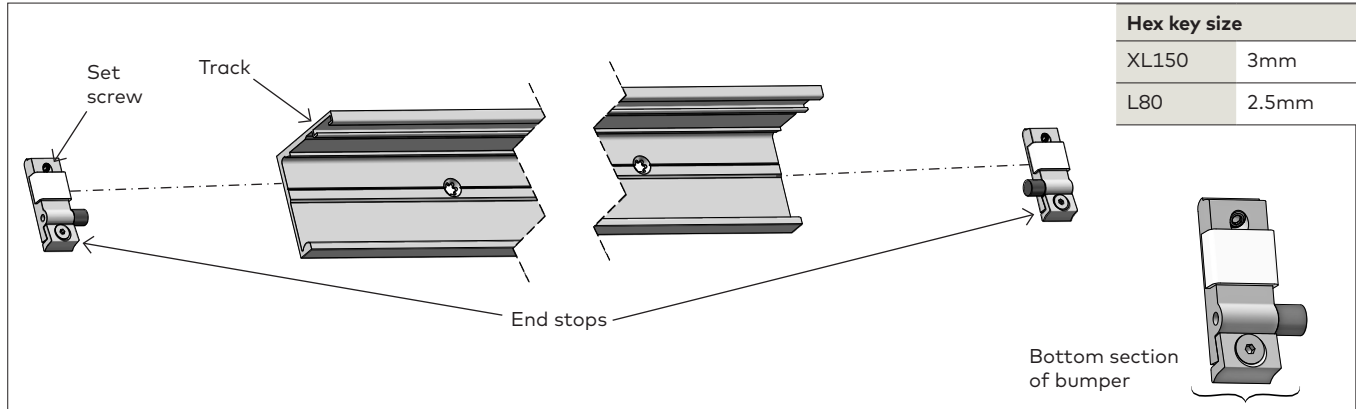

2.3.1 Slide bumper stops into each end of the track.


**NOTE: Loosen bottom section of end stop for easier install.**

**NOTE: FOR XL150 end stops, be sure set screw is flush with back of bumper.**

**NOTE: Exact location/adjustments will be determined in the Adjustment End Stop Location step.**

## 2.4 Securing gasket to track

Fig 2

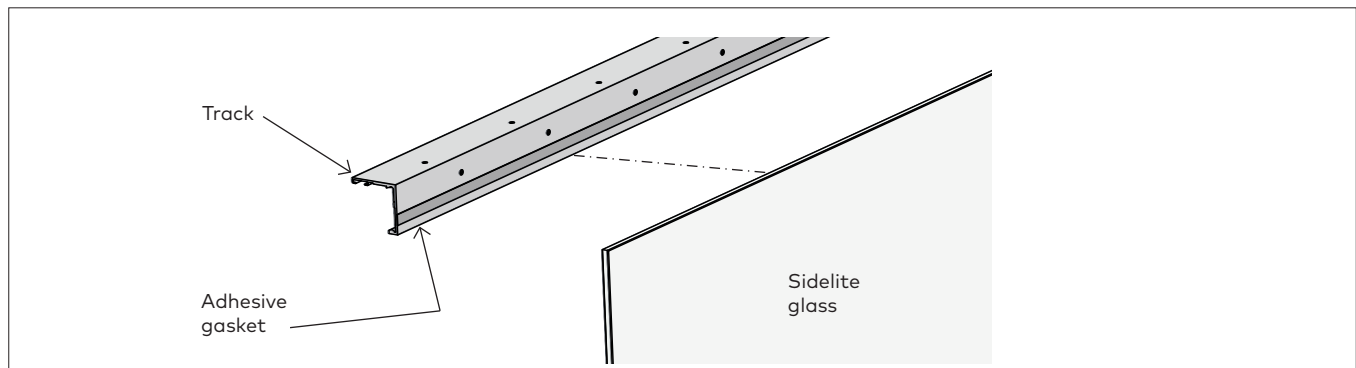

2.4.1 Ensure the track is cut to proper length.


**NOTE: SEE DIMENSION INSTRUCTIONS ON PAGE 6.**

2.4.2 Cut adhesive gasket equal to sidelite glass width.

2.4.3 Adhere gasket along bottom edge of back of track.

## 2.5 Securing track and sidelite section profile to mounting surface

Fig 3

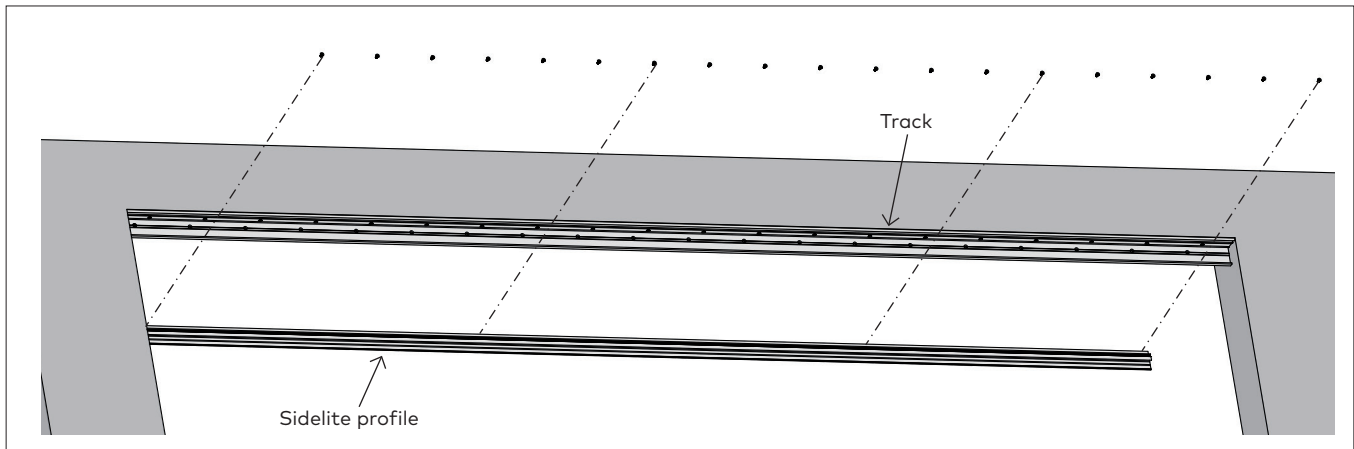

2.5.1 Secure track to mounting surface.

2.5.2 Align predrilled holes in sidelite profile with track profile.


**NOTE: Holes will be predrilled every 7-7/8" [200].**

2.5.3 Secure with proper fasteners.

**NOTE: Be sure fasteners are flush with track to avoid rollers catching protruding fasteners.**

## 2.6 Installing U-channel for sidelite

Fig 4

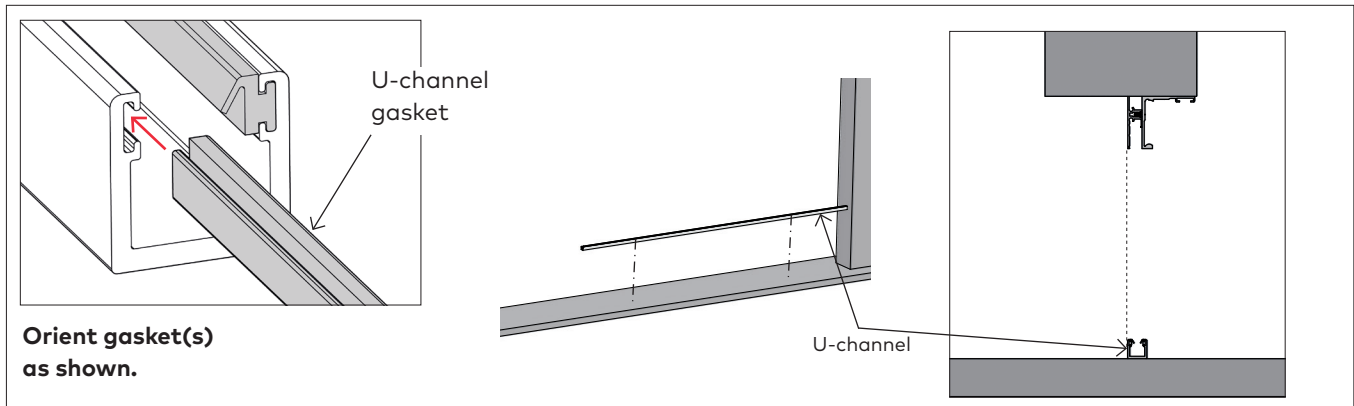

2.6.1 Install gaskets as shown. Trim to correct length.


2.6.2 Secure u-channel to floor using appropriate fasteners.

**NOTE: Ensure u-channel is plumb and the back of the u-channel profile aligns with back of sidelite profile.**

**NOTE: Gaskets are pre-installed.**

## 2.7 Installing sidelite glass

Fig 5

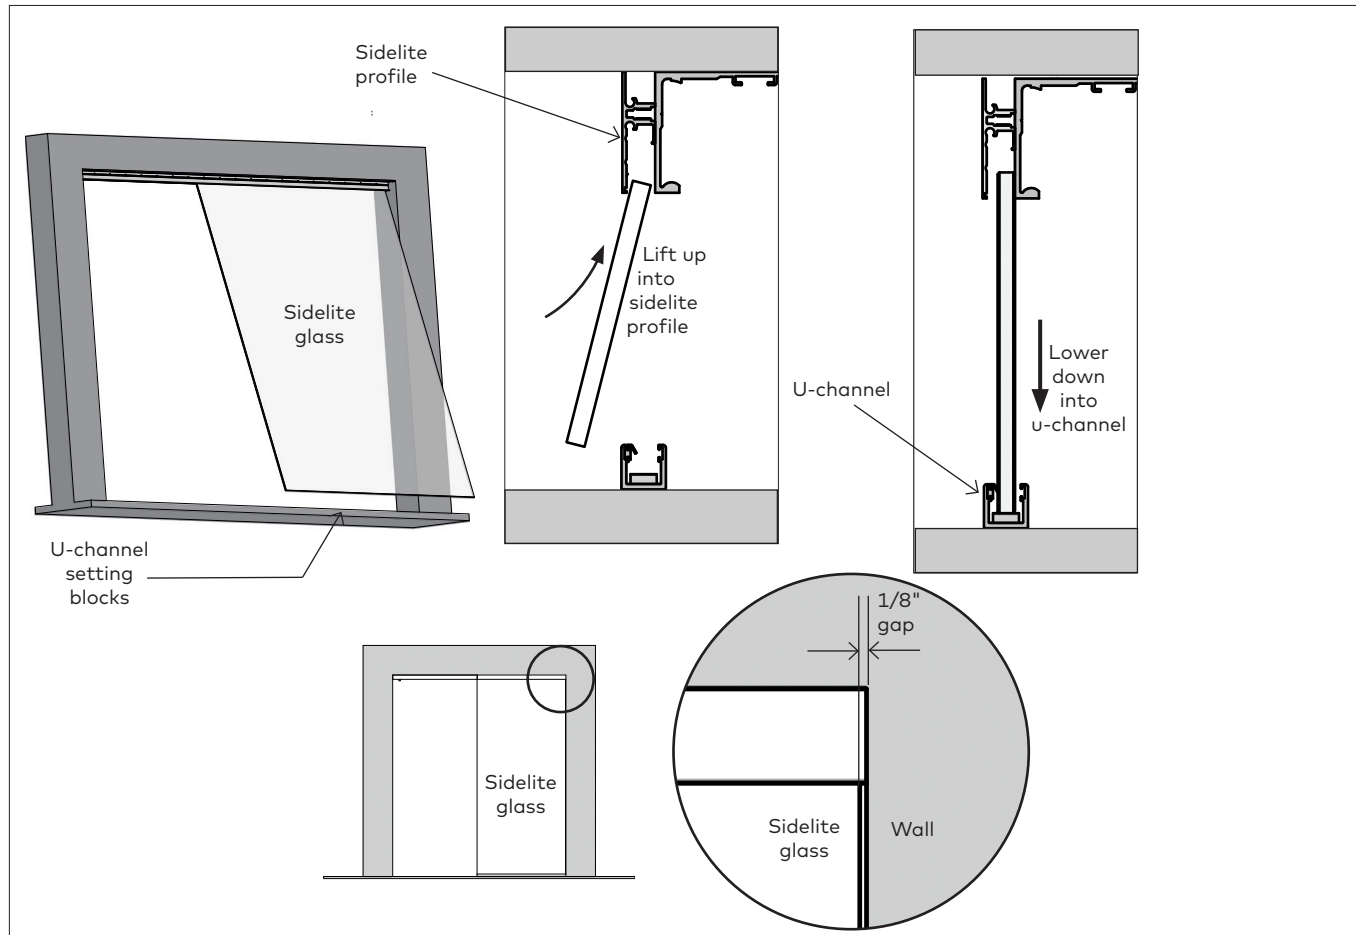


- 2.7.1 Place setting blocks into u-channel.
- 2.7.2 Spray inside of u-channel with glass cleaner.
- 2.7.3 Lift glass up and into sidelite profile.
- 2.7.4 Lower glass into u-channel.

- 2.7.5 Ensure there is 1/8" [3] gap between wall and edge of sidelite glass.
- 2.7.6 If using tempered laminated glass, gently press glass panel against u-channel gasket and dispense silicone along full length of non-gasket side of U-channel.

## 2.8 Installing sidelite glass filler panel


Fig 6

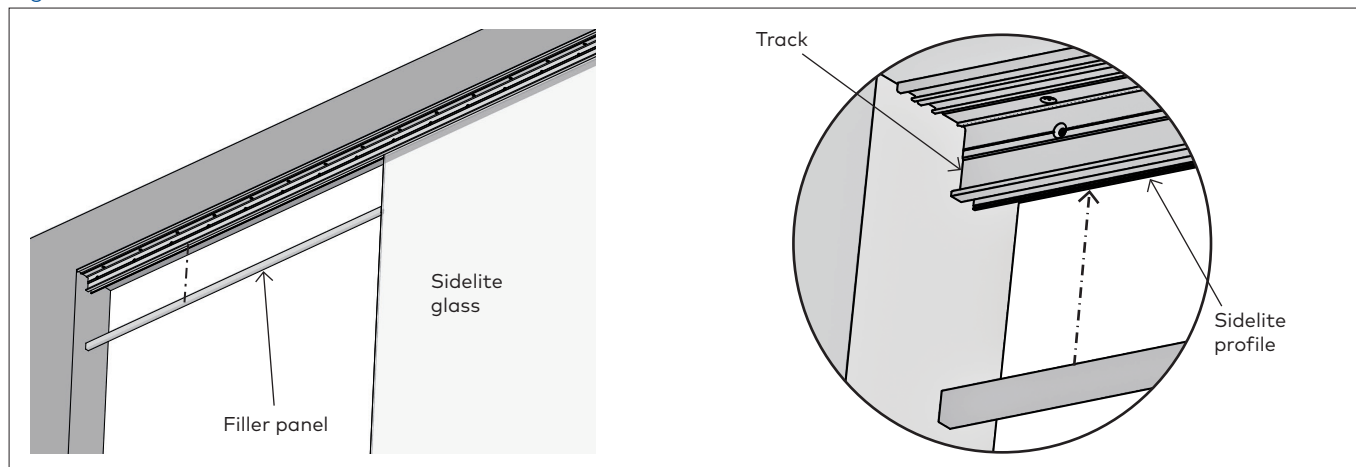

- 2.8.1 Fit filler panel in to gap of door panel section in sidelite profile.

## 2.9 Installing sidelite glass gasket

Fig 7

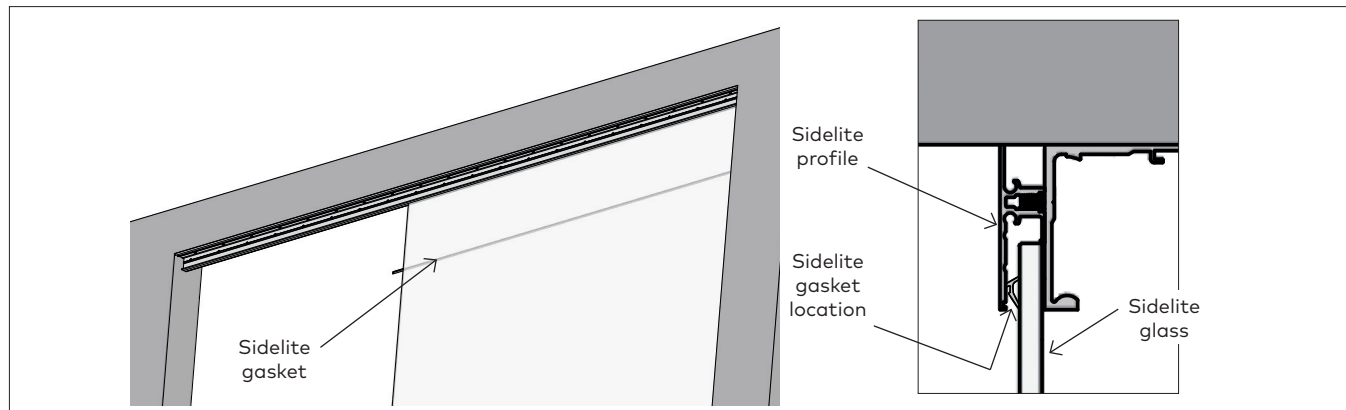


2.9.1 Cut gasket to length per chart above.

2.9.2 Press gasket in between sidelite glass and sidelite profile.

## 2.10 Installing hook set

Fig 8

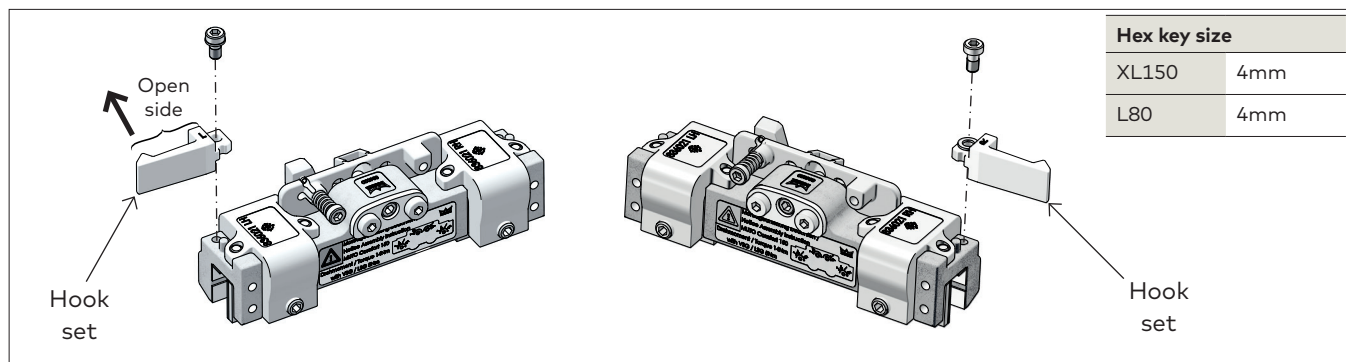


2.10.1 With rollers facing away from the installer, determine which roller will be leading and which will be trailing.

2.10.2 Secure hook onto roller with open side facing away from the installer.

2.10.3 Secure hook using appropriate-size hex key.

## 2.11A Installing the roller carriers: on monolithic glass ONLY

Fig 9

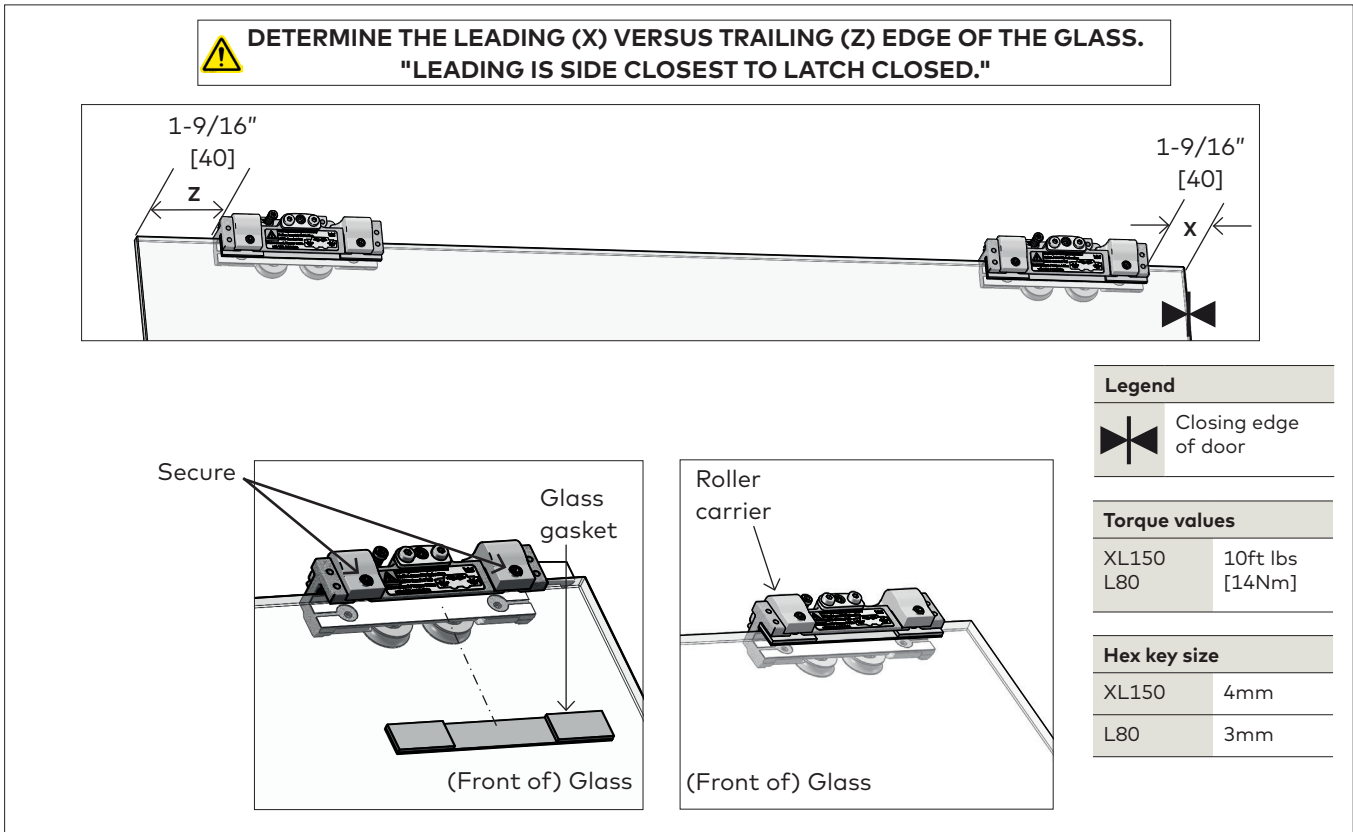

**⚠ NOTE: FULLY CLEAN SURFACE OF GLASS WITH AN ALCOHOL-BASED MILD GLASS AND SURFACE CLEANER.**

**⚠ ENSURE GASKET IS FREE OF DEBRIS.**

**⚠ ENSURE ROLLER CARRIER WHEELS ARE FREE OF DEBRIS.**

2.11A.1 Slide roller carriers onto glass.


2.11A.2 Slide glass gasket and metal shim between glass and roller carrier.

**NOTE: Orient gasket with rubber side facing the glass.**

2.11A.3 Secure roller carriers to glass using appropriate-size hex key at 10 ft lbs [14 Nm].

## 2.11B Installing roller carriers: on tempered laminate glass ONLY

Fig 10

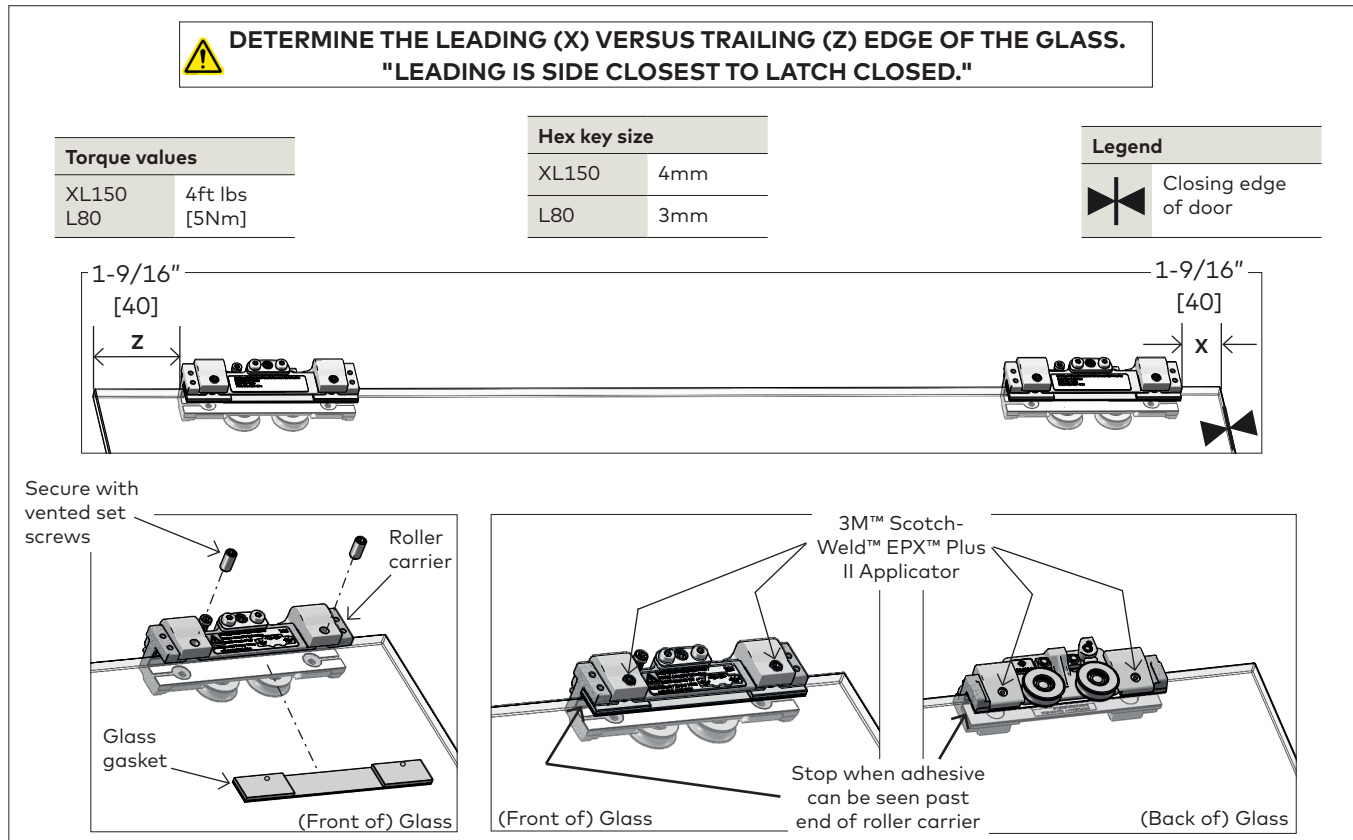

**⚠ NOTE: THE RECOMMENDED ADHESIVE'S SET-UP TIME IS 20 MINUTES FOR THE DUO-PAK CARTRIDGES.**

**⚠ NOTE: USE 1:1 RATIO PLUNGER WITH THE 3M™ Scotch-Weld™ Urethane Adhesive.**

**⚠ NOTE: FULLY CLEAN SURFACE OF GLASS WITH AN ALCOHOL-BASED MILD GLASS AND SURFACE CLEANER. ENSURE NO DEBRIS IS ON THE GASKET.**

**⚠ ENSURE ROLLER CARRIER WHEELS ARE FREE OF DEBRIS.**

2.11B.1 Slide carriers onto glass.

2.11B.2 Replace existing gasket with TLG gasket.

2.11B.3 Slide laminated glass gasket and metal shim between glass and roller carrier.

**NOTE: Orient gasket with rubber side facing the glass.**

2.11B.4 Replace existing set screws with vented set screws.

2.11B.5 Tighten vented set screws at 4 ft lbs [5Nm].

**NOTE: Onto scrap material, first dispense approximately 12" of 3M™ Scotch-Weld™ Urethane Adhesive prior to application to prevent mixing errors and ensure optimal hardening.**

2.11B.6 Dispense adhesive into vented set screws on both sides of carrier.



Stop application when adhesive can be seen past edge of roller carrier.



**DO NOT WIPE** any excess adhesive from glass surface. Allow adhesive to dry and scrape off glass surface with a beveled-edge chisel or putty knife.


**NOTE: Keep glass flat during curing process.**

**NOTE: See chart in Specifications section for appropriate curing time.**



## 2.12 Disengaging the anti-jump

Fig 11

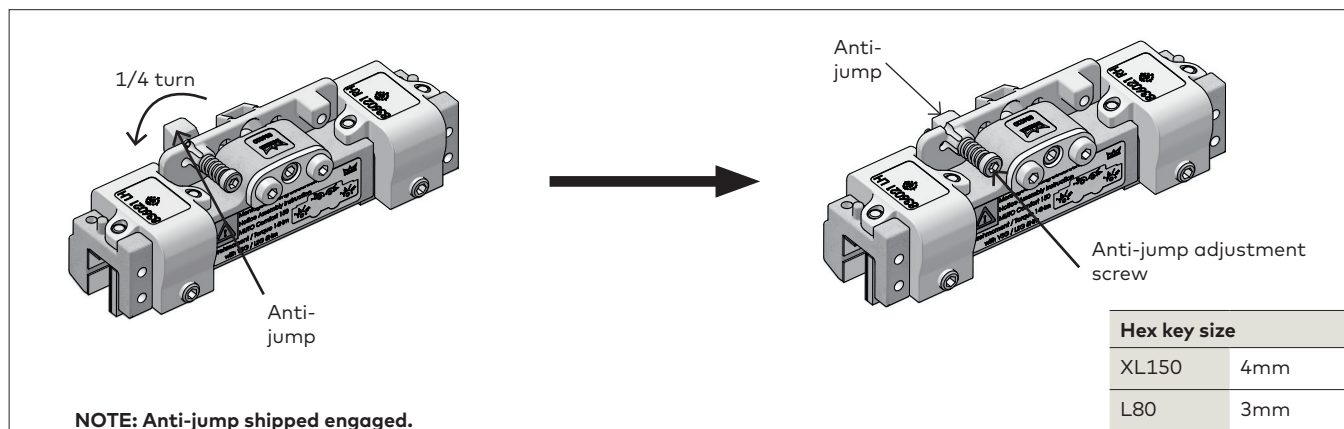


2.12.1 Disengage the anti-jump on roller carrier.

**NOTE:** Using the appropriate-size hex key, push anti-jump adjustment screw **IN** and turn **COUNTER-CLOCKWISE 90°** to **disengage** anti-jump.

## 2.13 Install glass/rollers in track

Fig 12

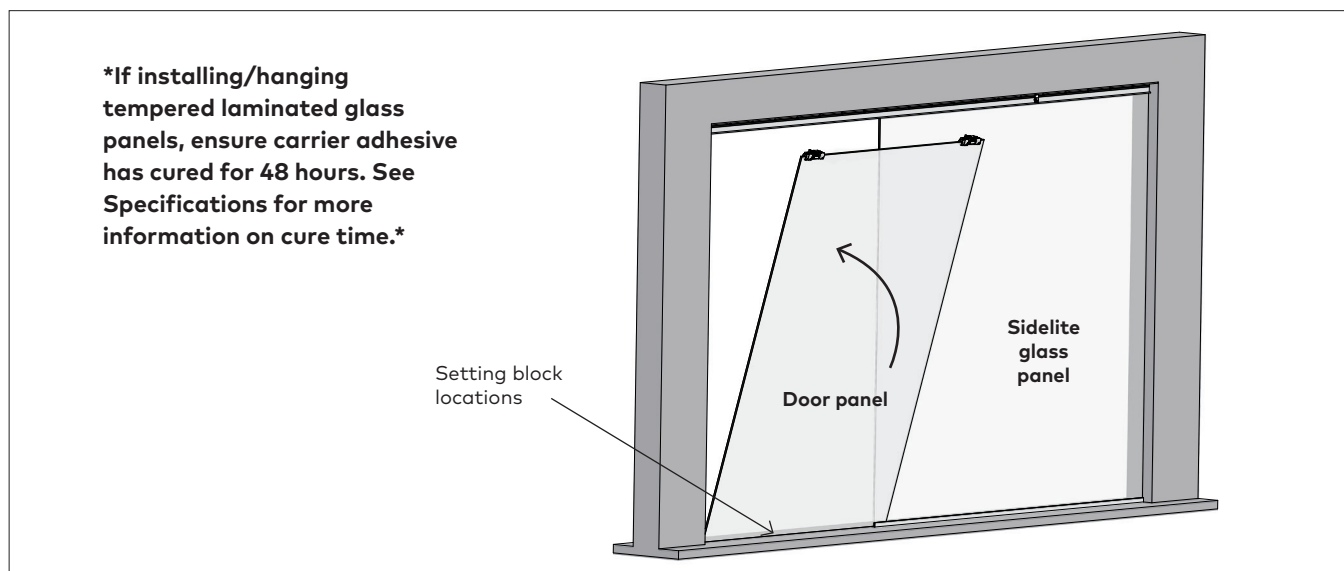


**⚠ ENSURE ROLLERS AND TRACK ARE FREE OF DEBRIS.**

2.13.1 Place glass on setting blocks on floor for stability.

2.13.2 Tip glass and rollers upward and rest rollers on track.

## 2.14 Install floor guide

Fig 13

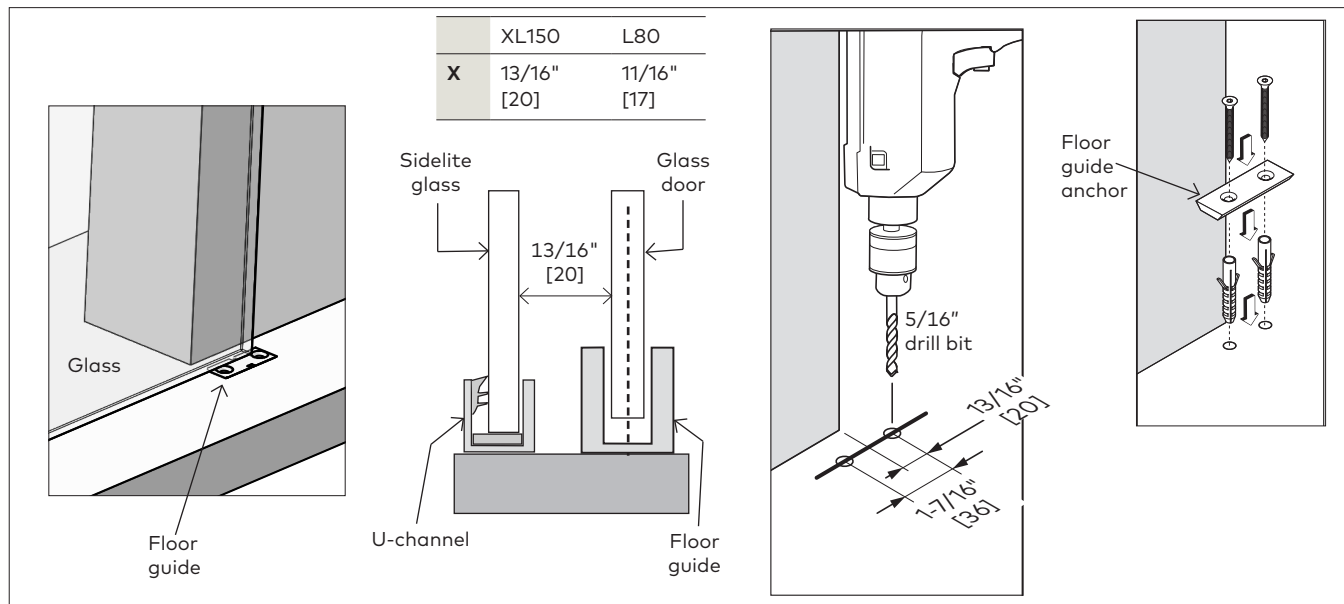

### ANTI-JUMP IS DISENGAGED!


- 2.14.1 Align centerline of glass with centerline of floor guide.
- 2.14.2 Be sure the glass is plumb.
- 2.14.3 Mark appropriate floor guide measurements.

### 2.14.4 TEMPORARILY REMOVE GLASS AND ROLLERS FROM TRACK.

- 2.14.5 Pre-drill into mounting surface using a 5/16" drill bit.
- 2.14.6 Secure floor guide anchor with included fasteners.

## 2.15 Install floor guide: continued

Fig 14

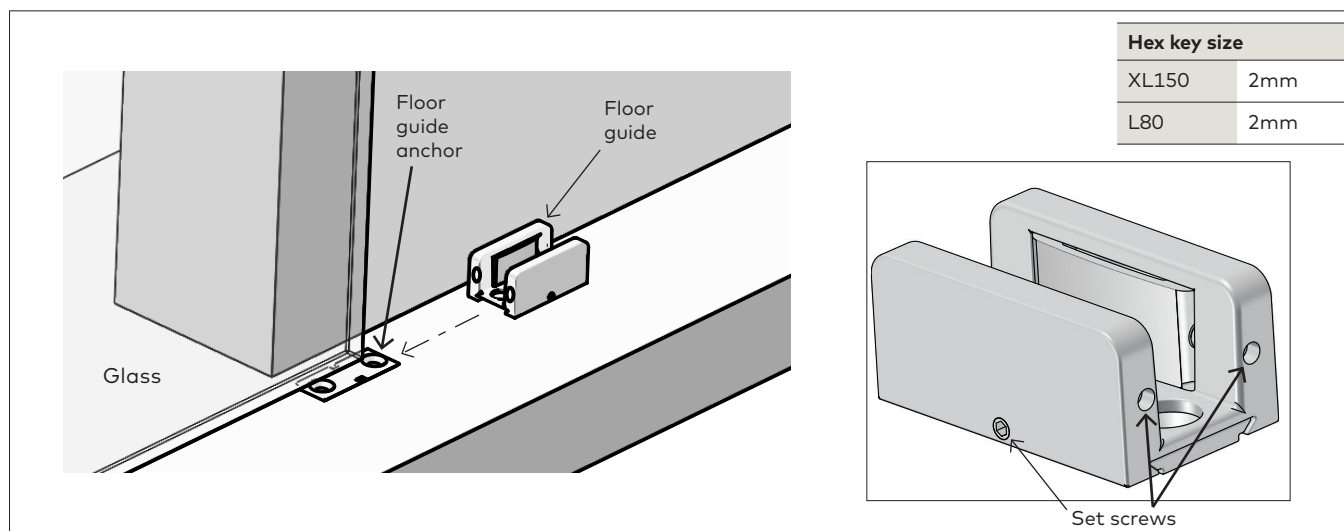

- 2.15.1 **SET GLASS AND ROLLERS ONTO TRACK.**
- 2.15.2 Slide floor guide over floor guide anchor and tighten with set screws.


- 2.15.3 Remove setting blocks.

**NOTE: Be sure glass is centered in floor guide.**

- 2.15.4 Adjust using set screws.

## 2.16 Engaging anti-jump

Fig 15

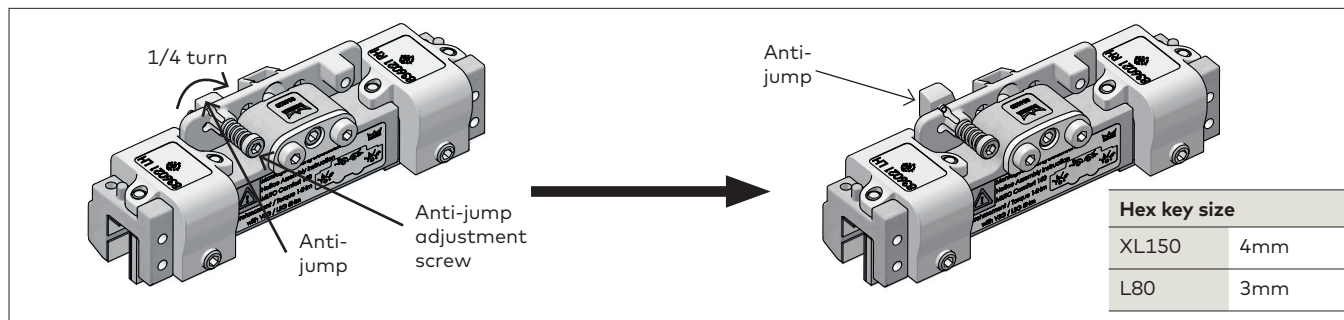


2.16.1 Engage anti-jump on roller carrier.

2.16.2 Using appropriate-size hex key, push anti-jump adjustment screw IN and turn **CLOCKWISE** 90° to **engage** anti-jump.

## 2.17 Adjustment door height

Fig 16

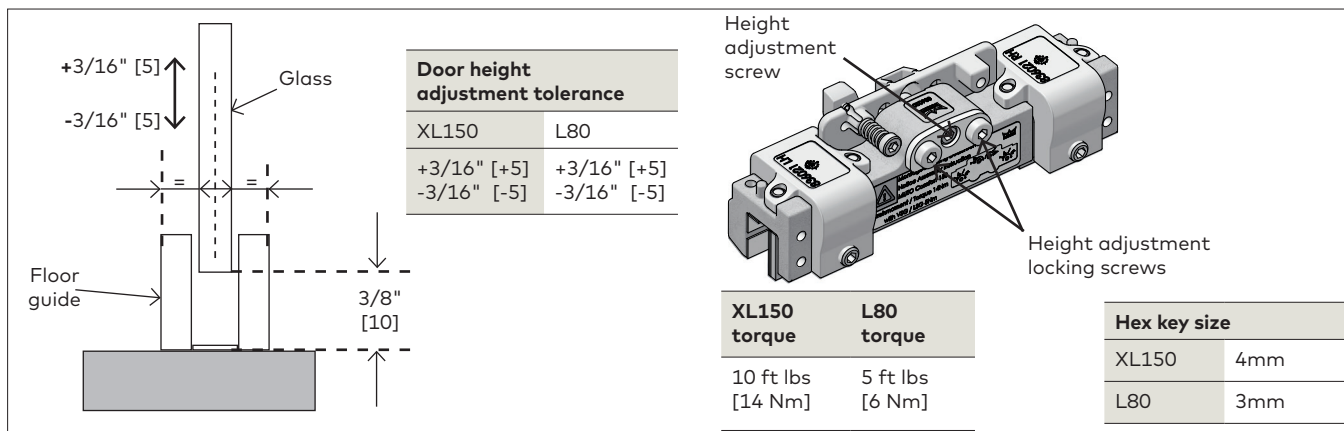

2.17.1 Set height of glass door.


2.17.2 Loosen height adjustment locking screws of carrier.

2.17.3 Using appropriate-size hex key, turn height adjustment screw **CLOCKWISE** or **COUNTER-CLOCKWISE** to raise or lower glass.

**NOTE: Be sure glass is level during this adjustment.**

## 2.18 Adjustment end stop location: LEADING end stop

Fig 17

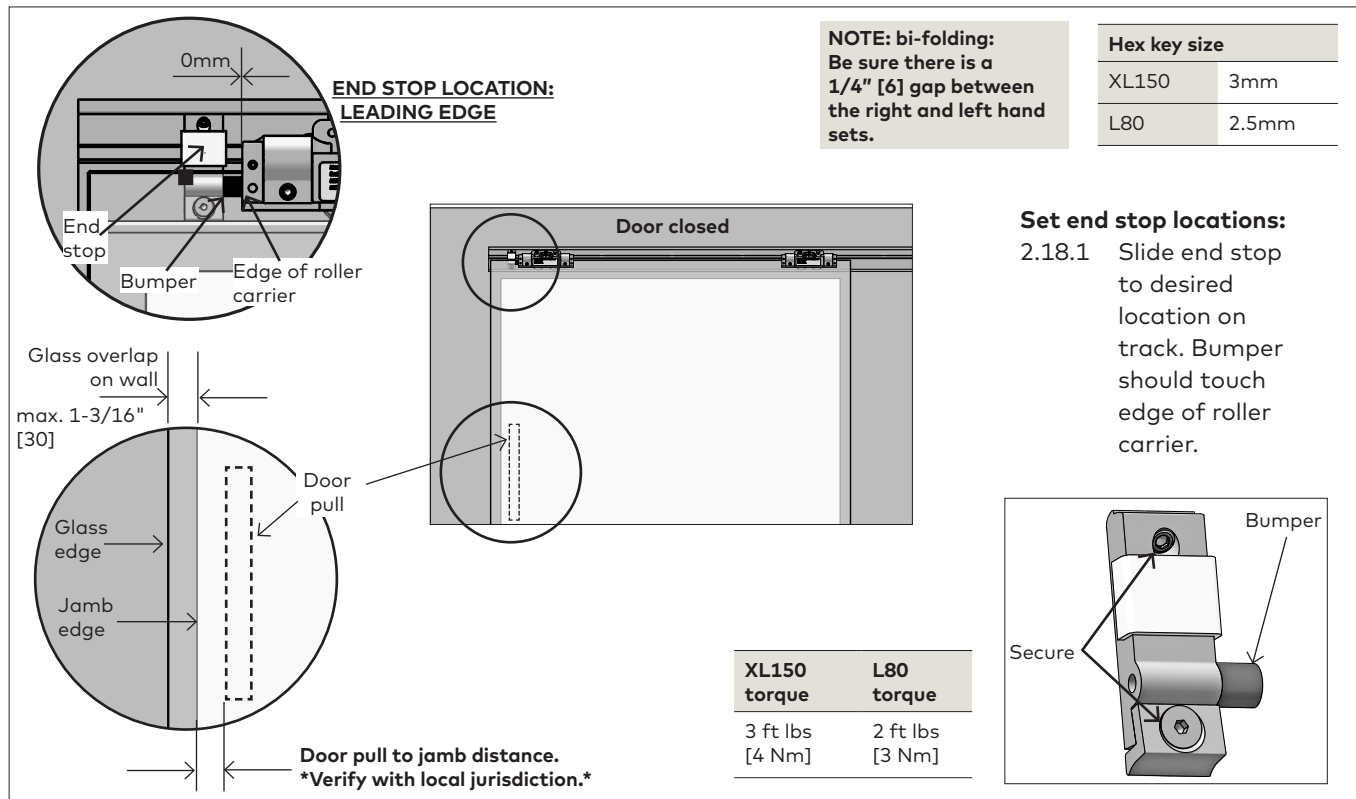

**NOTE: bi-folding:**  
Be sure there is a 1/4" [6] gap between the right and left hand sets.

Hex key size	
XL150	3mm
L80	2.5mm

**Set end stop locations:**  
2.18.1 Slide end stop to desired location on track. Bumper should touch edge of roller carrier.

XL150 torque	L80 torque
3 ft lbs [4 Nm]	2 ft lbs [3 Nm]


Secure

Bumper

Door pull to jamb distance.  
\*Verify with local jurisdiction.\*

## Adjustment end stop location: TRAILING end stop

Fig 18

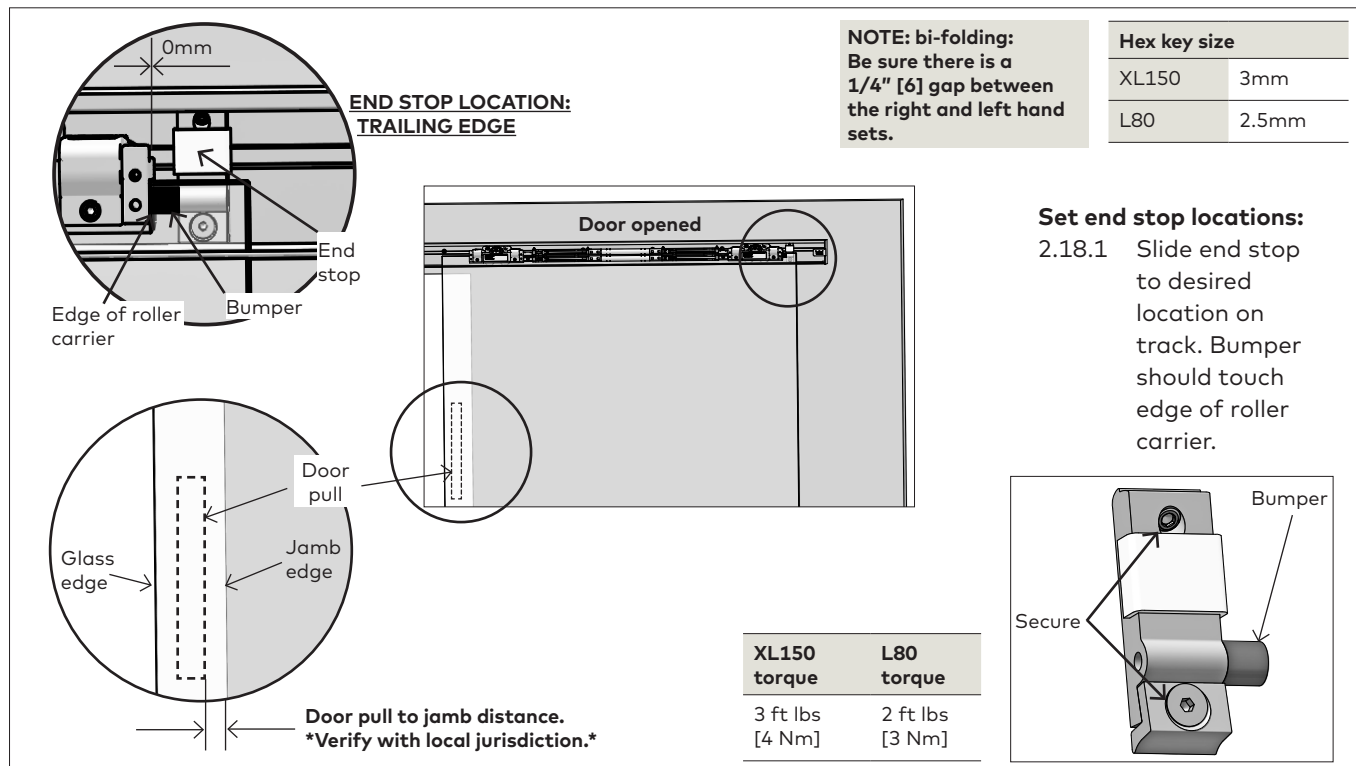

**NOTE: bi-folding:**  
Be sure there is a 1/4" [6] gap between the right and left hand sets.

Hex key size	
XL150	3mm
L80	2.5mm

**Set end stop locations:**  
2.18.1 Slide end stop to desired location on track. Bumper should touch edge of roller carrier.

XL150 torque	L80 torque
3 ft lbs [4 Nm]	2 ft lbs [3 Nm]


Secure

Bumper

Door pull to jamb distance.  
\*Verify with local jurisdiction.\*

## 2.19 Cover clips

Fig 19

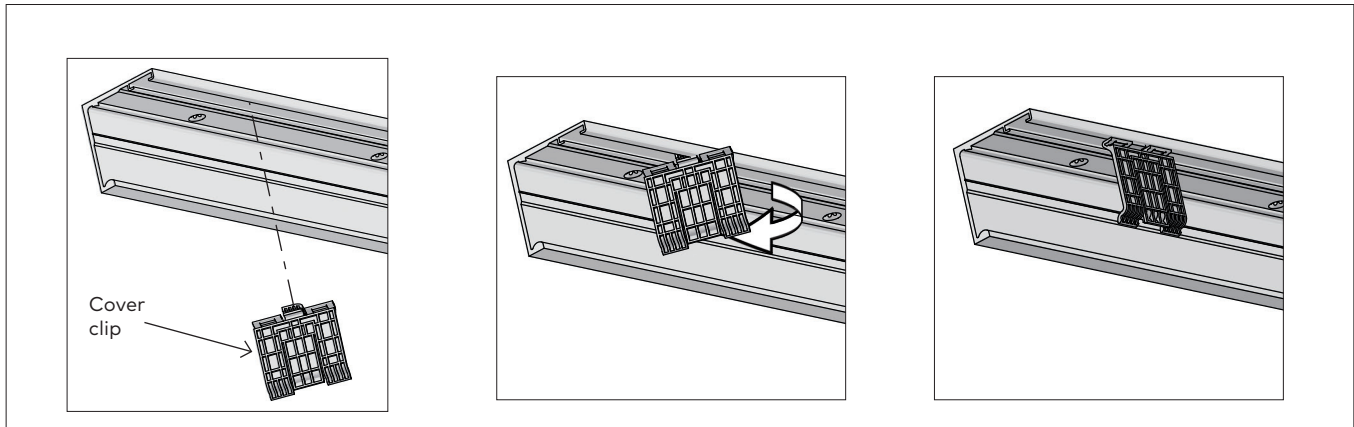


2.19.1 Insert cover clips into track. (One clip per foot)

2.19.2 Insert perpendicular to track, and turn **CLOCKWISE** to snap into place.

## 2.20 Cover spacers

Fig 20

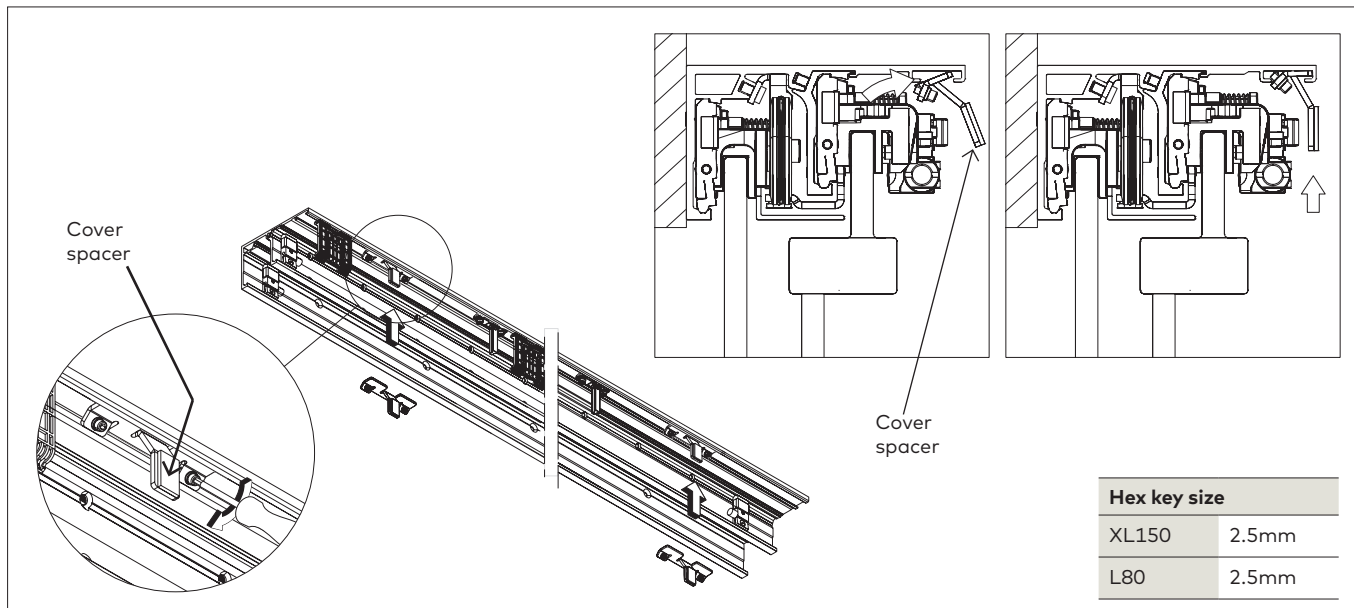


2.20.1 Tip cover spacers into outer most edge of track.

2.20.2 Place one at each end of track as shown.

2.20.3 Tighten at at 1 ft lb [1Nm] or hand tighten.

## 2.21 Install brush profile

Fig 21

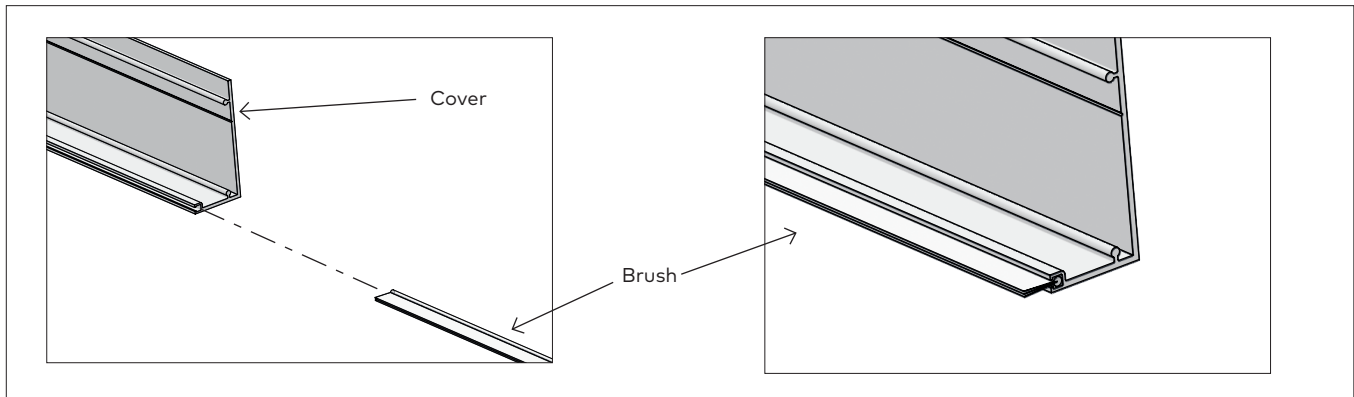


2.21.1 Measure and cut brush to appropriate length.

2.21.2 Slide brush into cover.

## 2.22 Install view protection clips

Fig 22

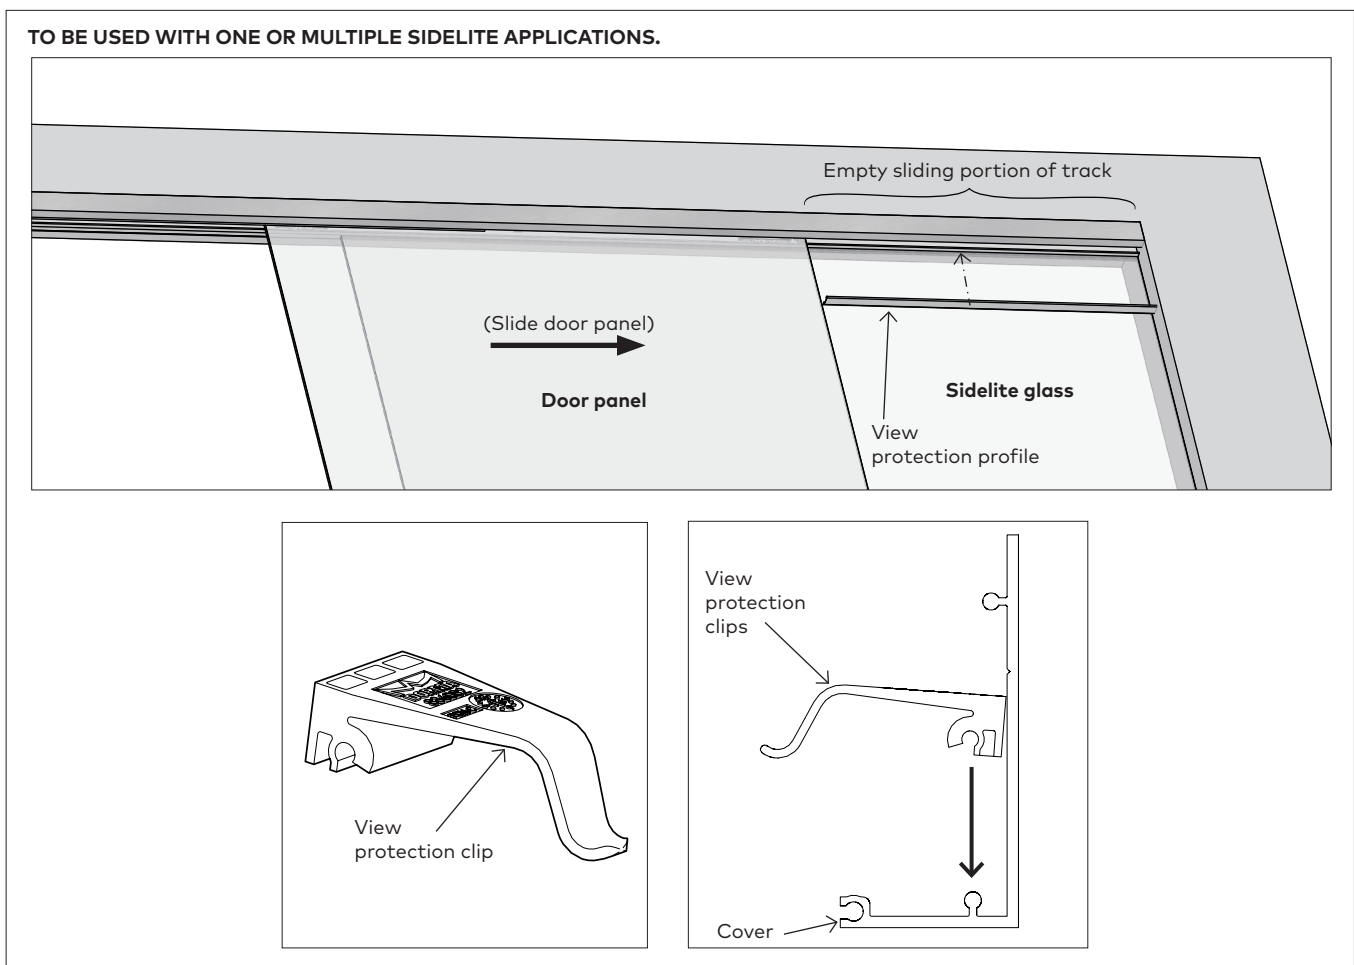

2.22.1 Slide door open until it meets the end stop.

2.22.2 Measure and cut view protection profile to fit into empty sliding portion of track - 3/16" [5].


2.22.3 Snap view protection clips onto inside of cover as shown.

2.22.4 Use minimum 1 clip per foot of profile.

**Exception: If profile is minimum of 1 foot in length, use 2 clips.**

## 2.23 Install cover and view protection profile

Fig 23

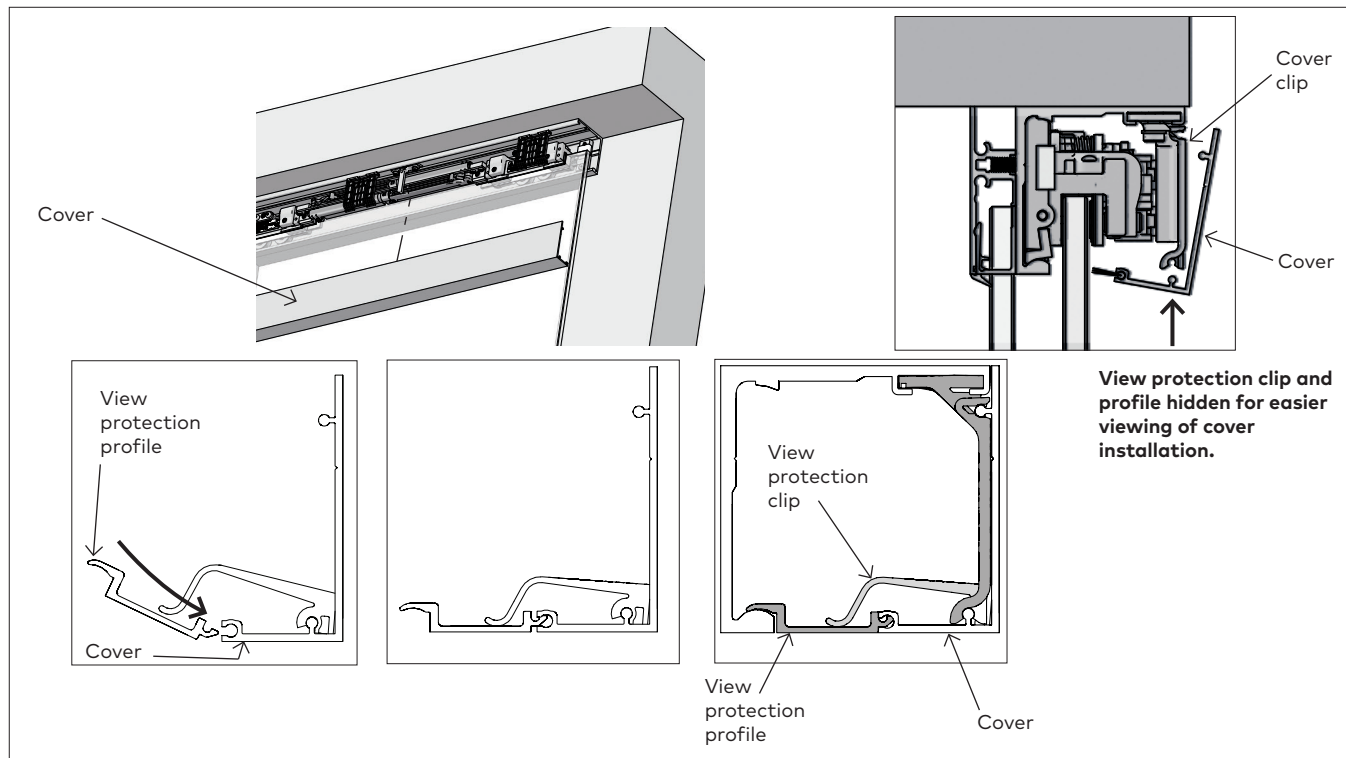

2.23.1 Secure cover to clips and snap into place.

**NOTE: Roll cover from the bottom upwards. Ensure the bottom of the cover is supported by the groove in the cover clip.**

2.23.2 Tip view protection profile up into track and snap down into cover and onto track as shown.

## 2.24 Install end caps

Fig 24



2.24.1 Snap sidelite profile end caps into sidelite profile.

2.24.2 Snap end caps into cover.

