

Crane 2000-M and 3000-M

Manual revolving doors

Owner's Manual

RL6000-006 – 07-2022

| EN |

 **Crane**
dormakaba Group

dormakaba 

Table of contents

Table of contents	2
1 General information	3
2 To our customers	4
3 What you should know	4
3.1 Distributor information	4
4 Safety	5
4.1 Intended use	5
4.2 Danger points of the revolving door	5
5 Manual revolving door assemblies	6
5.1 Manual revolving door assembly examples	6
5.2 3 1/8" canopy with bearing for in-ground speed control	7
5.3 6" canopy with overhead speed control	7
6 Bookfold	8
7 Manual speed control	9
8 Maintenance	10
8.1 Door and floor maintenance	10
8.2 Weathersweeps	10
8.3 Overhead speed control oil	11
8.4 In-ground speed control oil	12
8.5 Cleaning surfaces	13

1 General information

1.1 Owner's Manual

This Owner's manual applies to Crane 2000-M and 3000-M manual revolving doors with either an:

- Overhead speed control.
- In-ground speed control.

Reference Chapter 7 for manual speed control overview.

1.2 Manual storage.

This document must be kept in a secure place, and accessible for reference as required.

1.3 dormakaba.us website.

Manuals are available for review, download, and printing on dormakaba.us website.

1.4 Dimensions

Unless otherwise specified, all dimensions are given in inches (").

1.5 Symbols used in this manual.



WARNING

This symbol warns of hazards which could result in personal injury or threat to health.

CAUTION

Warns of a potentially unsafe procedure or situation.

Fig.1.1 4 wing door with overhead speed control

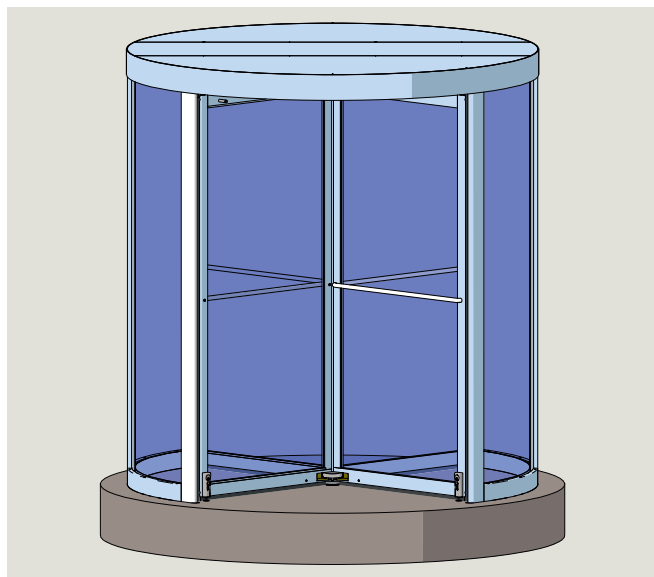


Fig.1.2 3 wing door with overhead speed control

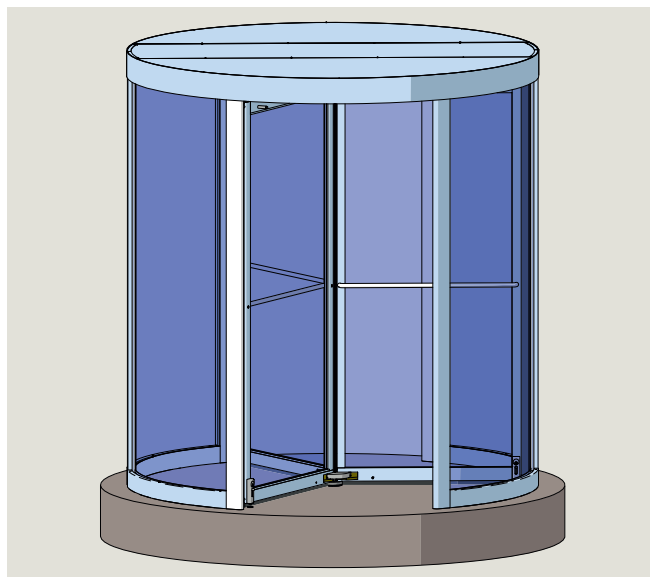


Fig.1.3 4 wing door with in-ground speed control


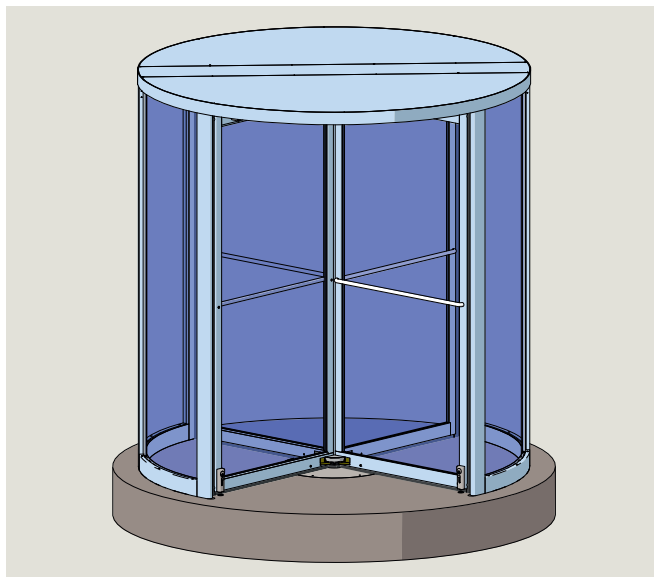


Fig.1.4 3 wing door with in-ground speed control

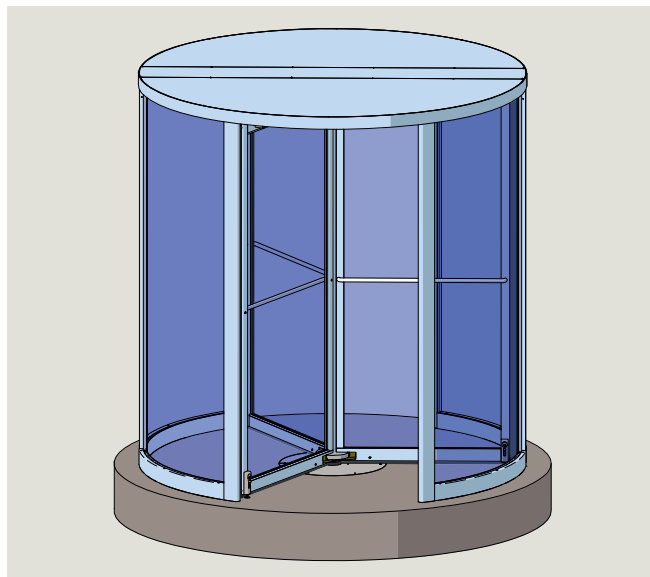

2 To our customers

We are pleased that a Crane 2000-M or 3000-M manual revolving door has been selected for this installation. Crane designed, tested and built the system to provide many years of service.

The purpose of this manual is to provide you information regarding your Crane 2000-M or 3000-M manual revolving door. This includes safety and maintenance information.

It is essential that you recognize the importance of maintaining your door.

It is your responsibility as owner and caretaker of the equipment, to inspect the operation of your door system to insure that it is safe for use by your customers and employees.

Call your local dormakaba distributor for repair. The distributor is trained to service the revolving door using the applicable dormakaba USA, Inc. Installation Manual.

2.1 Service availability.

dormakaba USA, Inc. has a nationwide network of authorized distributors for sales, installation and service of its products.

3 What you should know

3.1 Distributor information

3.1.1 dormakaba USA, Inc. distributor information.

Be sure that the dormakaba USA, Inc. distributor has provided the following information for each door installation:

1. Crane Owner's Manual RL6000-006.
2. Review of safety (Reference Chapter 4).
3. Review of door maintenance (Reference Chapter 8).
4. Discussion of problems that could result from door operation after a malfunction observed.
5. Number to call for service or questions about your revolving door if you are uncertain of any condition or situation.
6. Location of job number tag on door center shaft assembly (Reference Chapter 5, Para. 5.1).



WARNING

If there are any problems, discontinue door operation immediately and secure the door in a safe manner.

Call your local dormakaba USA, Inc. distributor for repair.

4 Safety

4.1 Intended use

4.1.1 Intended use.

- The 2000-M and 3000-M manual revolving doors are designed as 3 or 4 wing revolving doors for use as a doorway for people to pass through at entrances and in the interior of buildings.
- When a bookfold turnstile is used, the revolving door can be used for use as an emergency exit.



WARNING


In case of emergency, revolving door can be used as an exit, but it is not the primary path of egress. The side door(s) should be used!

- **The customer can only operate the revolving door after door commissioning by dormakaba service technicians.**

4.2 Danger points of the revolving door

When passing through the revolving door, people may be at risk for injury at the following locations:

Fig. 4.2.1 Revolving door danger points

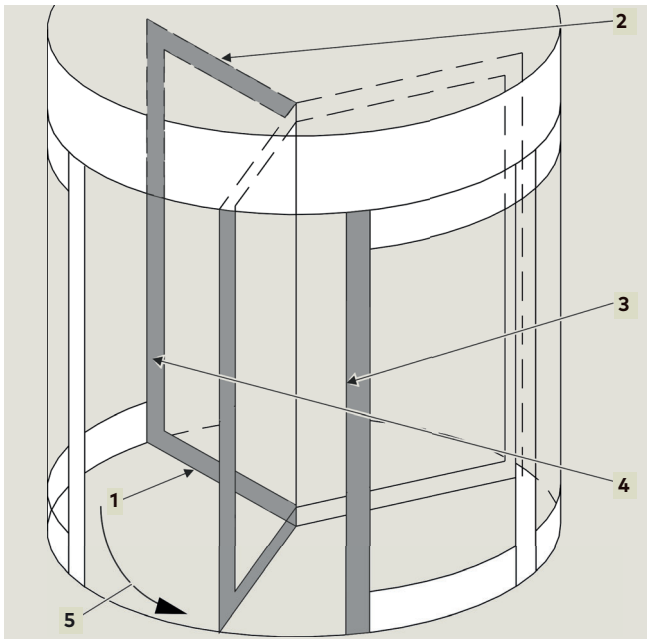

- | | |
|----------------------------------|--|
| 1 Secondary closing edge floor | 4 Main closing edge inner wall |
| 2 Secondary closing edge ceiling | 5 Wings rotating in a counterclockwise direction |
| 3 Opposing closing edge | |



WARNING

Danger of misuse!

Misuse of the revolving door can cause dangerous situations.

- Children should never be allowed to enter the revolving door without adult supervision/accompaniment.
- Children should never be allowed to play in front of the entrance and exit of the revolving door or inside of the revolving door itself.
- Do not install the revolving door over soft flooring (e.g., carpet).
- Never mount or hang objects on the revolving door.
- Never stop or block the revolving door with an object.
- Customer - Do not operate the revolving door until "record of delivery" has been received.
- Do not walk through the revolving door with bulky objects.
- Do not walk against the wing rotation direction of the revolving door.
- Do not operate the revolving door if there is insufficient lighting.
- Do not operate the revolving door if it is damaged (e.g., broken glass).
- Never use replacement parts that are not approved by dormakaba.
- People cannot be allowed to stay in the revolving door for longer than it takes to pass through the door.

5 Manual revolving door assemblies

5.1 Manual revolving door assembly examples

- 1 Center shaft assembly
- 2 Wing assembly
- 3 Center post
- 4 Quarter post/end wall
- 5 Base assembly
- 6 Canopy assembly
- 7 Enclosure glass
- 8 Pivot bearing
- 10 Hanger assembly
- 12 Nameplate/job number tag

Fig. 5.1.1 Four wing manual revolving door

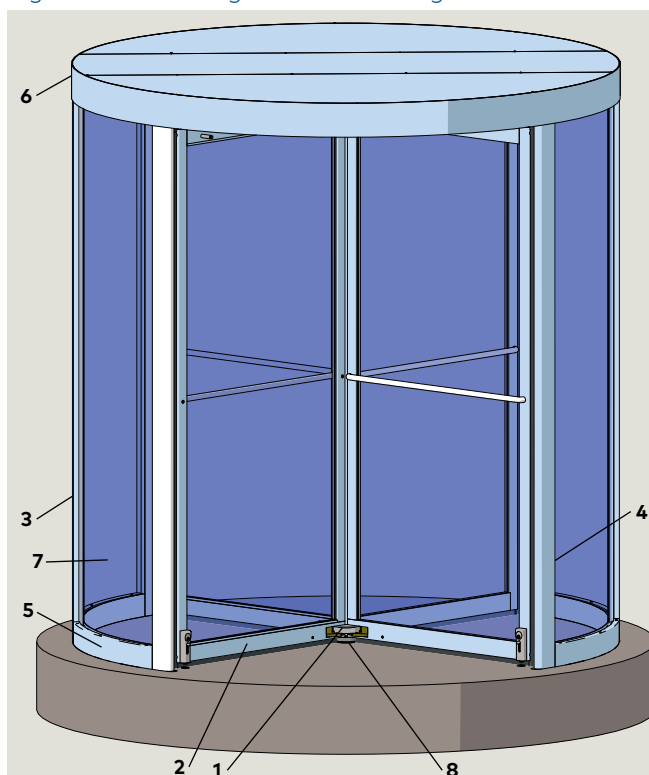


Fig. 5.1.3 Center shaft assembly, in-ground speed control

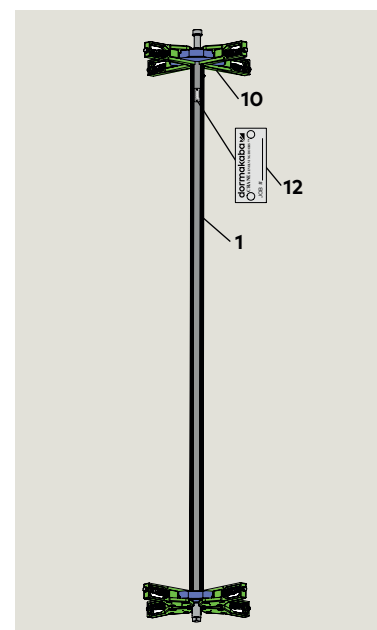


Fig. 5.1.2 Door wing

- 1 Front stile
- 2 Center stile
- 3 Top rail
- 4 Bottom rail
- 5 Vertical sweep with felt
- 6 Top sweep with felt
- 7 Bottom sweep
- 8 Glass
- 9 Push bar


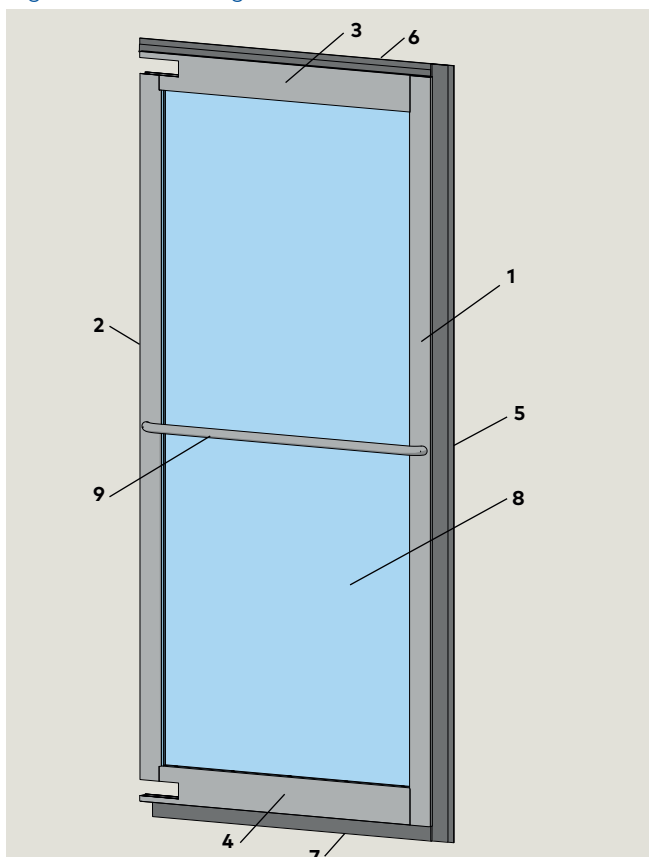



Fig. 5.1.4 Job number tag

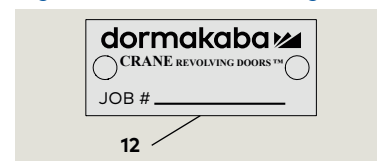

- 12 Nameplate/job number tag


5.2 3 1/8" canopy with bearing for in-ground speed control

Fig. 5.2.1 3 1/8" canopy assembly, top view

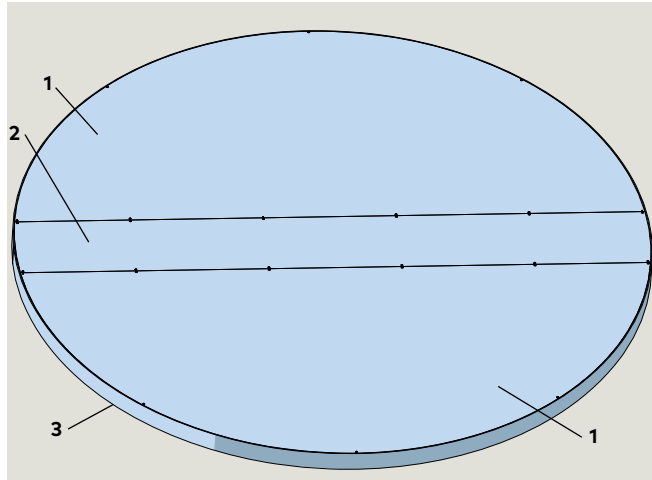


- 1 Outer cover
- 2 Inner cover
- 3 Fascia

Fig. 5.2.2 3 1/8" canopy, covers removed

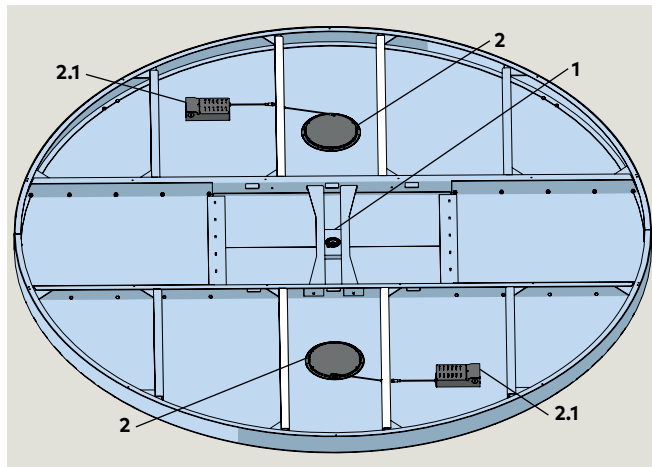

- 1 Bearing assembly
- 2 LED light (option)
- 2.1 LED light driver (option)


Fig. 5.2.3 3 1/8" canopy assembly, bottom view

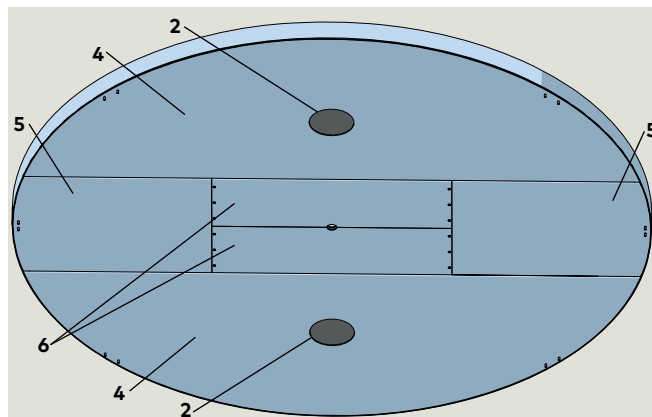

- 2 LED light (option)
- 4 Outer soffit
- 5 Outer center soffit
- 6 Inner center soffit
- 7 Fascia


5.3 6" canopy with overhead speed control

Fig. 5.3.1 6" canopy assembly, top view

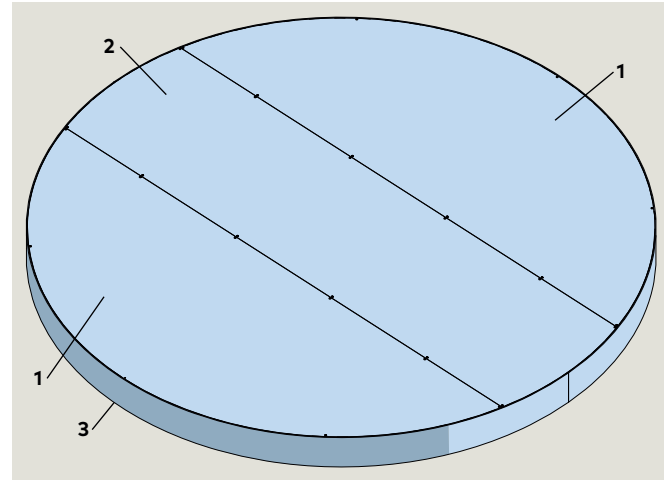


- 1 Outer cover
- 2 Inner cover
- 3 Fascia

Fig. 5.3.2 6" canopy, covers removed

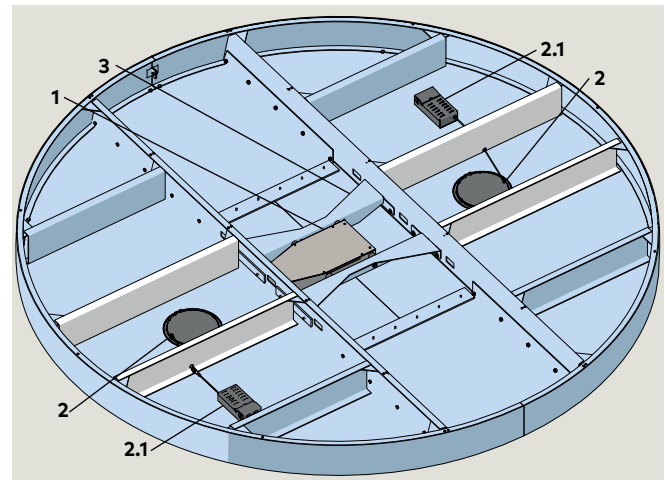

- 1 Overhead speed control
- 2 Light (option)
- 2.1 LED light driver (option)
- 3 Speed control brace

Fig. 5.3.3 6" canopy assembly, bottom view

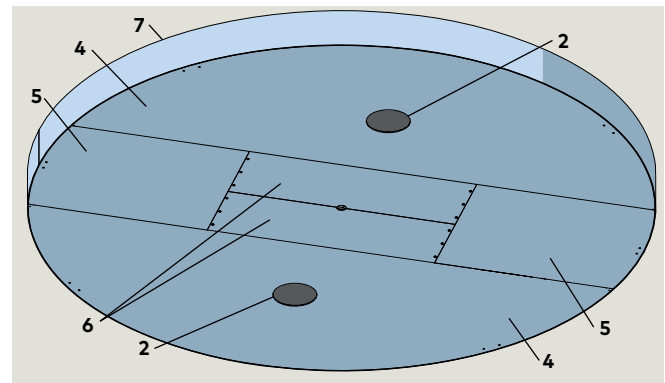

- 2 LED light (option)
- 4 Outer soffit
- 5 Outer center soffit
- 6 Inner center soffit
- 7 Fascia

6 Bookfold

6.1 Bookfold mechanism.

The Crane bookfold mechanism is constructed from a high grade chilled bronze casting.


- This hardware complies with all state and federal requirements for providing emergency egress.
- The pressure required to engage the bookfold mechanism is adjustable to meet ANSI/BHMA A156.27, Power and Manual Operated Revolving Pedestrian Doors.



WARNING

In case of emergency, revolving door can be used as an exit, but it is not the primary path of egress. The side door(s) should be used!

Fig. 6.1 Bookfold mechanism

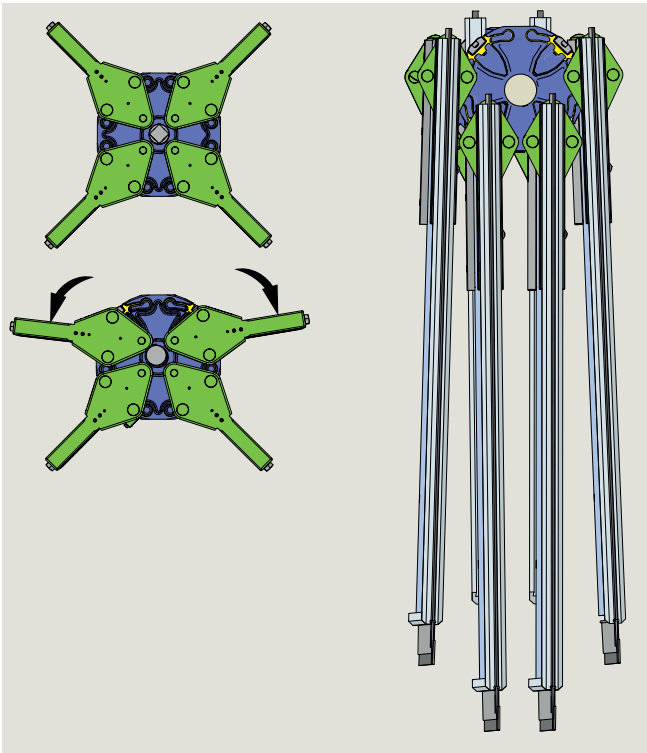

7 Manual speed control

7.1 Speed control.

All Crane manual revolving doors use the same 100:1 gear ratio manual speed control; a steel cast, precision machined, sealed unit mounted either in the canopy (overhead speed control) or in a cement case (in-ground speed control).

- A centrifugal force brake slowly engages as the door reaches the maximum allowable RPM set by ANSI/BHMA A156.27, Standard for Power and Manual Operated Revolving Pedestrian Doors.

7.2 Speed control oil fill.

- Overhead speed control: Reference Para. 8.3
- In-ground speed control: Reference Para. 8.4.

Fig. 7.1 In-ground manual speed control



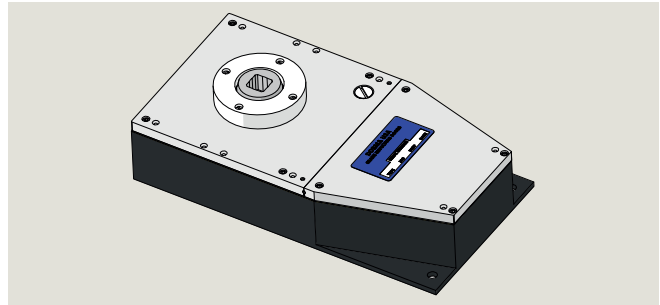


Fig. 7.2 Overhead speed control with floor pivot bearing

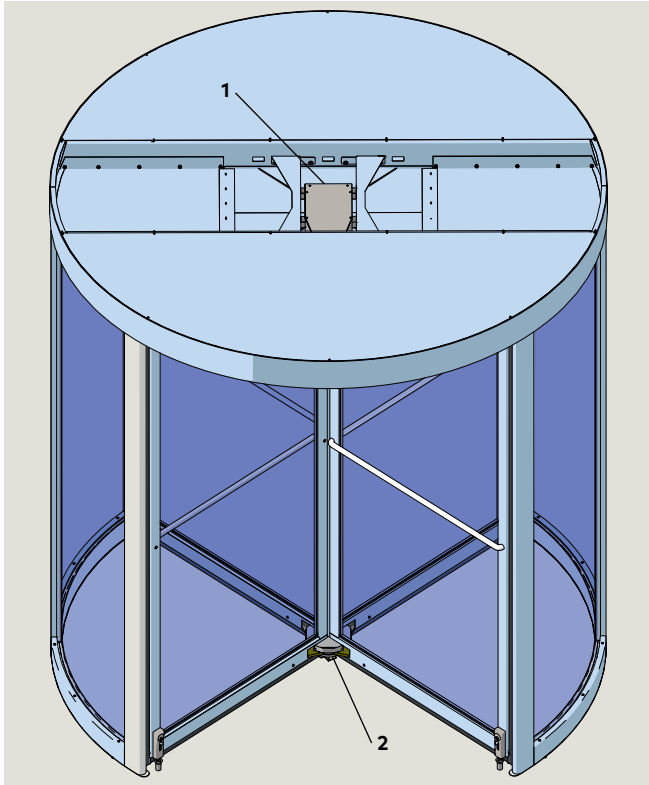

- 1 Overhead speed control
 2 Floor pivot bearing


Fig. 7.3 In-ground speed control with canopy bearing

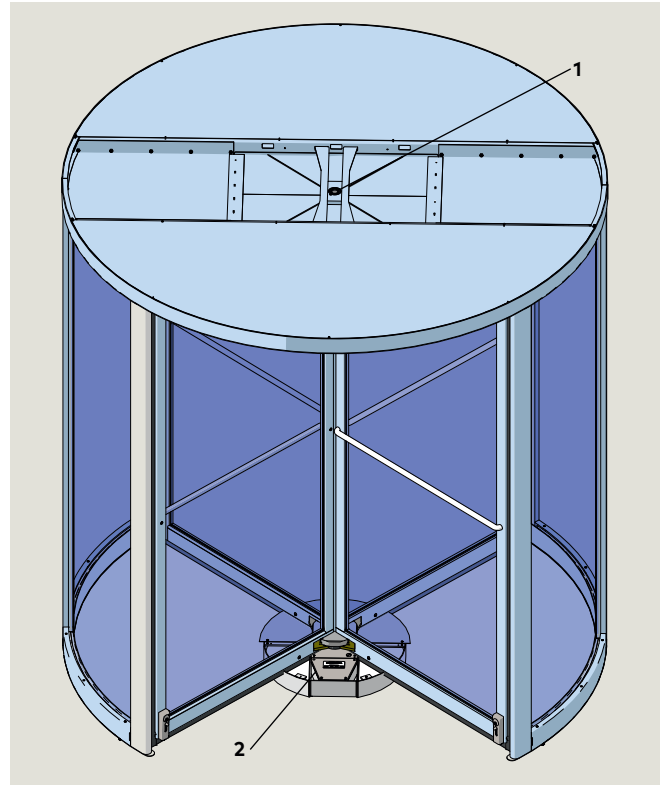

- 1 Canopy mounted bearing
 2 In-ground speed control

- 1 Cover plate
 2 Round cement box
 3 Drive shaft
 4 Speed control assembly
 5 Non-shrink grout


Fig. 7.4 In-ground speed control assembly

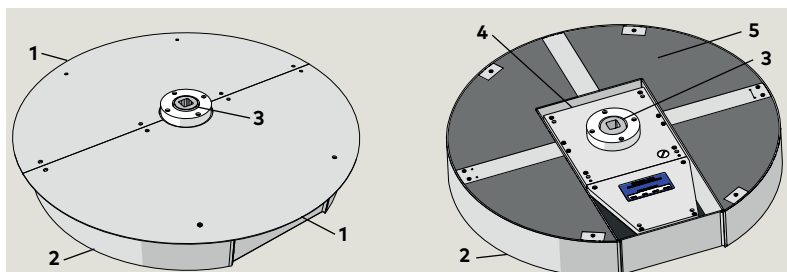

8 Maintenance

8.1 Door and floor maintenance


Fig. 8.1.1 4 wing revolving door

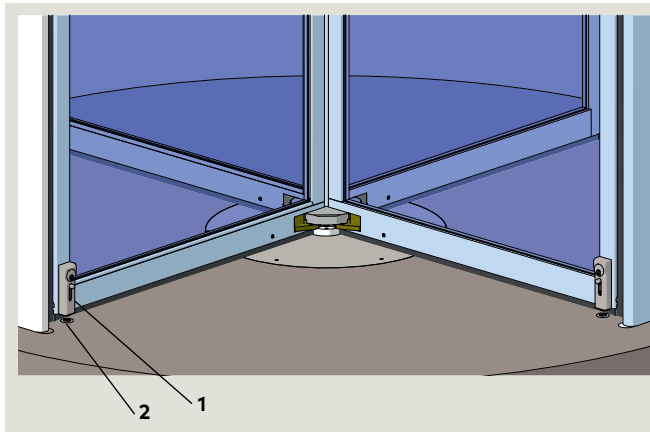

- 1 Mechanical wing lock
- 2 Floor strike


8.2 Weathersweeps

Fig. 8.2.1 T-style weathersweep

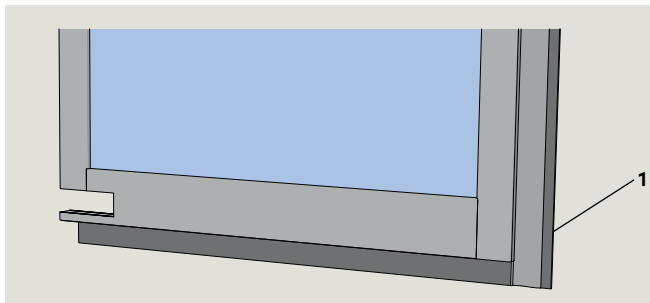

- 1 T-style weathersweep

Fig. 8.2.2 Horsehair weathersweep

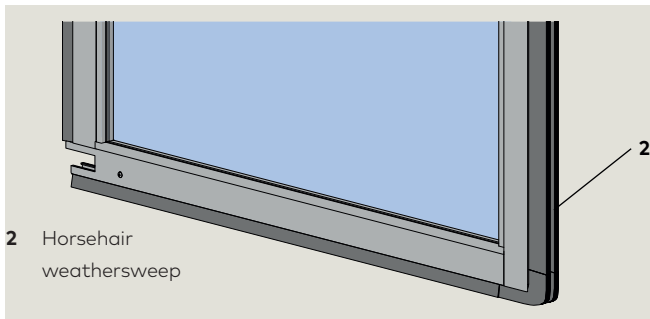

- 2 Horsehair weathersweep

8.1.1 Floor maintenance.

- 1. Keep floor surface clean and free of dirt and debris.

8.1.2 Mechanical wing lock and floor strikes.

- 1. Keep wing locks and floor strikes free of dirt and debris.

8.1.3 Door glass maintenance.

- 1. Keep all glass surfaces clean.
- 2. Clean glass surfaces with commercially available glass cleaners.

8.2.1 Weathersweep maintenance.

NOTICE

Reducing or trimming the size of the bottom sweep makes the sweep more rigid and voids all warranties.

- 1. Inspect condition of sweeps.
 - Recondition horsehair sweeps if possible using conditioner.
- 2. Replace weathersweeps as required.
 - Contact dormakaba distributor for replacement weathersweeps.

8.3 Overhead speed control oil

CAUTION

Manual speed control maintenance must be done by dormakaba service personnel.

NOTICE

Oil is added to overhead speed control during door installation.

8.3.1 Overhead speed control oil fill during door installation.

Procedure:

A 22 oz. bottle of multigrade synthetic oil is supplied.

- Overhead speed control cover is removed.
- Entire contents of bottle is poured into speed control case.
- Speed control cover is reinstalled.


8.3.2 Addition of oil to overhead speed control after door installation.

CAUTION

Manual speed control maintenance must be done by dormakaba service personnel.


1. Remove inner canopy cover.
2. Remove eight 6-32 x 1/2" long countersunk flat head screws securing speed control cover to speed control.
3. Remove speed control cover.
4. Add required amount of oil to speed control.
 - **Multigrade synthetic oil must be used.**
5. Replace cover and secure with eight 6-32 x 1/2" long screws in step 2.
 - **Insure gasket (4) is in place on top of speed control.**

Fig. 8.3.1 Canopy-mounted speed control

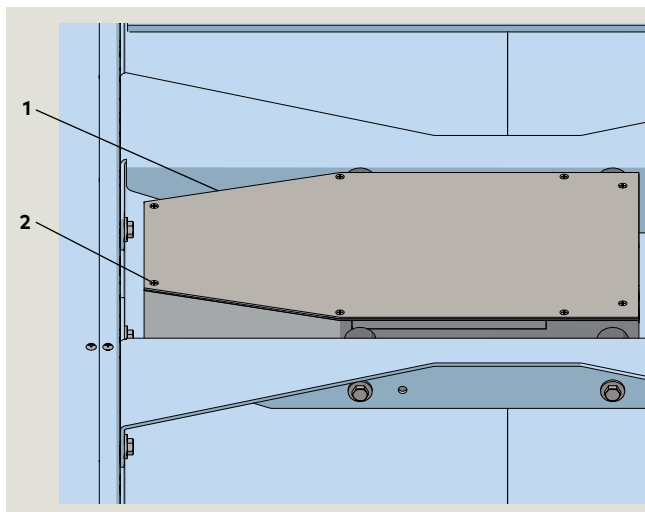

- 1 Overhead speed control cover 2 6-32 x 1/2" countersunk flat head screw

Fig. 8.3.2 Speed control cover removed

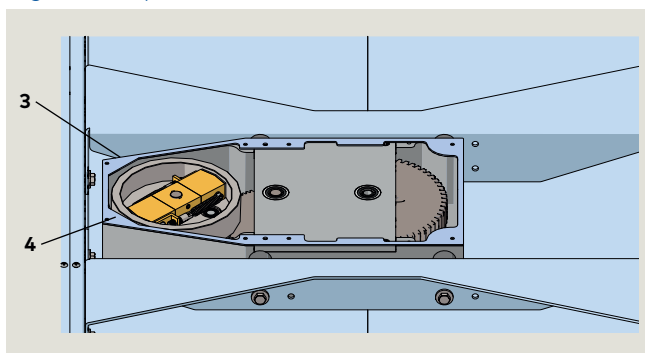

- 3 Overhead speed control 4 Cover gasket

8.4 In-ground speed control oil

CAUTION

Manual speed control maintenance must be done by dormakaba service personnel.

NOTICE

Oil is added to in-ground speed control during door installation.

8.4.1 in-ground speed control oil fill during door installation.

Procedure:

A 22 oz. bottle of multigrade synthetic oil is supplied.

- In-ground speed control cover plates are not installed.
- Oil fill hole .500-13 x 3/4" long undercut slotted flat head machine screw is removed.
- Entire contents of bottle poured into speed control oil fill hole.
- .500-13 x 3/4" long undercut slotted flat head machine screw is reinstalled.


8.4.2 Addition of oil to in-ground speed control after door installation.

CAUTION

Manual speed control maintenance must be done by dormakaba service personnel.


1. Remove four 10-24 x 1/2" long special Phillips flat head screws securing speed control cover plate to access speed control cover oil fill hole.
2. Remove speed control cover plate.
3. Remove oil fill hole .500-13 x 3/4" long undercut slotted flat head machine screw.
4. Add required amount of oil to speed control.
 - **Multigrade synthetic oil must be used.**
5. Reinstall screw removed in step 3.
6. Replace speed control cover plate and secure with 10-24 x 1/2" long screws removed in step 1.

Fig. 8.4.1 In ground speed control cover plates

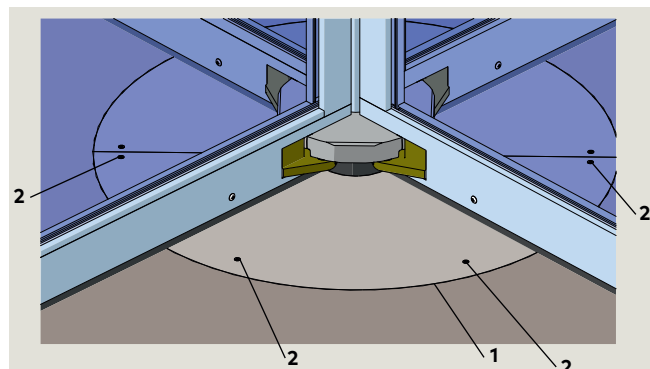


- 1 In-ground speed control cover
2 10-24 x 1/2" long special Phillips flat head SS screw

Fig. 8.4.2 Speed control cover plate removed

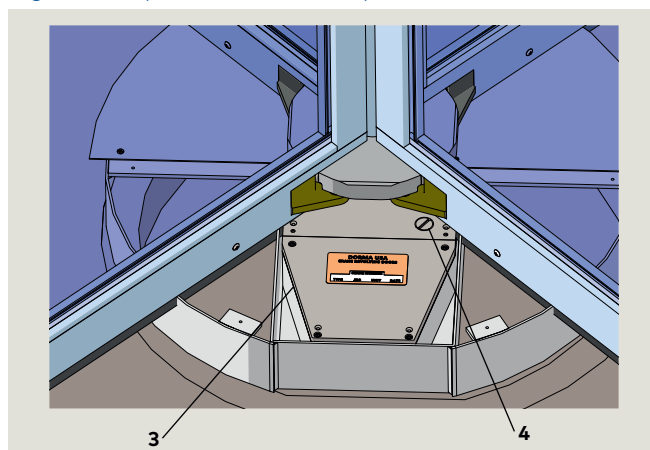

- 3 In-ground speed control
4 Oil fill hole

Fig. 8.4.3 Speed control oil fill hole screw removed

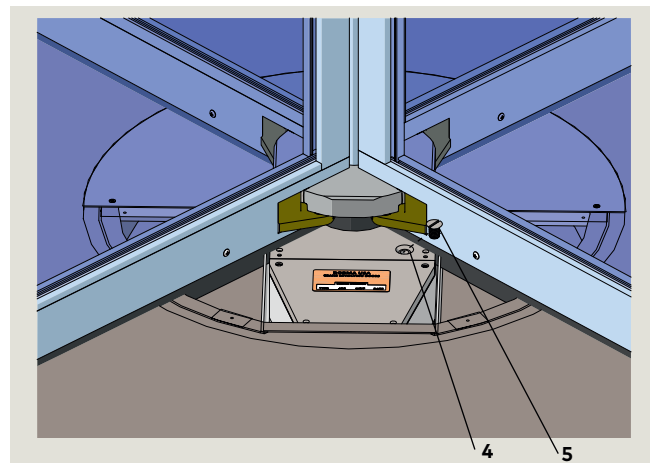

- 4 Oil fill hole
5 .500-13 x 3/4" undercut slotted flat head machine screw

8.5 Cleaning surfaces

8.5.1 Aluminum

1. Dust and grime can be removed by regular cleaning.
 - Use a mild, non-abrasive soap or cleaning solution and water.
 - After cleaning, surfaces should be wiped dry with a clean absorbent material.
2. Tar and built-up dirt can be removed with solvent cleaners such as turpentine if followed by a soap and water cleaning and fresh water rinse.

NOTICE

Avoid acid or alkali cleaners; they may attack the anodized finish.

- After cleaning, surfaces should be wiped dry with a clean absorbent material.

8.5.2 #4 stainless steel

1. For routine cleaning, use soap, ammonia, or detergent and water.
 - Always working in the direction of the grain, rub with a sponge or rag.
 - Rinse with water, wipe dry.
2. Stubborn dirt or grime can be removed with a quality commercial stainless steel cleaner.

8.5.3 Mirror finish stainless steel

NOTICE

Mirror finishes require very special care. Abrasive cleaners and cloths should never be used.

1. Use only mild soap and water or glass cleaner.
 - After cleaning, surfaces should be wiped dry with a clean absorbent material.

8.5.4 Bronze

NOTICE

To insure proper maintenance, consult a professional bronze finisher and establish a regular metal cleaning program.

1. Bronze finishes are protected during shipping and installation by a shop coat of lacquer.

NOTICE

Lacquer can be damaged by ammonia in window cleaners, or by acids from masonry cleaners. Protect doors from these cleaners.

NOTICE

Doors must be inspected and worked after installation by a qualified bronze finisher.

8.5.5 Painted finishes

1. Any mild non-abrasive soap or mild solvent can be used for cleaning.

NOTICE

Strong solvents may dissolve paint. Test any solvent first.

2. Wax can be used to protect the finish.

