

ED100LE

Low Energy Swing Door Operator

Installation Instructions

DL4616-001 – 06-2023

| EN |

dormakaba 

Table of contents

Table of contents	2	10	Pull arm installation	31
1 General information	3	10.1	Pull arm installation	31
1.1 General information	3	10.2	Pull arm assemblies	31
2 Product overview	4	10.3	Pull arm hardware	31
2.1 ED100LE maximum door weights and door installation	4	10.4	Install hardware into track	32
2.2 Single door configuration examples	4	10.5	Assemble slide shoe	32
2.3 Double door configuration examples	5	10.6	Assemble drive arm and CPD lever	33
2.4 ED100LE low energy operator	6	10.7	Fasten drive arm to ED100LE operator	34
2.5 ED100LE fine cover kits	7	10.8	Install track assembly	35
2.6 Fine cover kit hardware	9	11 ED100LE Operator spring tension	36	
2.7 Push arm kits	10	11.1	Set ED100LE operator spring tension	36
2.8 Deep pull arm kit	10	12 ANSI/BHMA standards	37	
2.9 Arm screw kits	10	12.1	ANSI/BHMA A156.19 Low Energy Power Operated Swinging Doors	37
2.10 Optional key switch panels	10	13 Install door signage, low energy door	38	
2.11 Push arm door stop - option	11	13.1	Install door signage	38
2.12 ED100LE axle extensions	11	14 Cover, end caps and spindle caps	38	
2.13 Double door ED100LE operator connection cables	12	14.1	Cover end cap and spindle installation	38
3 Technical data	12	15 Maintenance	39	
3.1 ED100LE operator technical data	12	15.1	Safety label, low energy swing doors	39
3.2 ED100LE operating specifications	13	15.2	Arm fasteners – torque requirements	40
4 E100LE terminal board interfaces	14	16 Companion door installation	41	
4.1 ED100LE terminal board interfaces	14	16.1	ED100LE Companion installation templates	41
5 ED100LE door signage	15	16.2	8616 closer and adaptor	43
5.1 Low energy operator	15	16.2.1	Companion door 8616 Door closer data	43
5.2 Door signage, low energy swing door per ANSI / BHMA A156.19	15	16.3	Select installation template	44
5.3 Safety label, low energy swing doors	16	16.4	Assemble ED100LE and closer backplates	44
6 Recommended tools and torque chart	17	17 Companion door, push arm installation	45	
6.1 Recommended tools	17	17.1	Mount backplate, push arm application	45
6.2 Standard tightening torque	17	17.2	Install 8816 closer on backplate – push arm mounting	46
6.3 Drill bits	17	17.3	Push arm installation	47
7 Installation templates	18	18 Companion door, pull arm installation	49	
7.1 ED100LE installation templates	18	18.1	Mount backplate, pull arm application	49
8 ED100LE operator installation	21	18.2	Install 8816 closer on backplate – pull arm mounting	50
8.1 Installation preparation	21	18.3	Pull arm installation	51
8.2 Remove mounting plate from ED100LE operator	22	19 8816 closer adjustments	54	
8.3 Customer 115 Vac connection to mounting plate terminal block	23	19.1	8816 door closer adjustments	54
8.4 Mounting plate attachment to jamb or wall	25	Appendix A - Fine cover professional cover kits	55	
8.5 Connect customer 115 Vac to mounting plate terminal block	26	A.1	Professional cover kit HK3401-05X installation instructions – single door	55
8.6 Route accessory wiring to mounting plate	26	A.2.1	Professional cover kit HK3401-07X installation instructions – pair	58
8.7 Remove protective film strips from ED100LE operator	27	Appendix B - Key switch wiring diagrams	60	
8.8 Install ED100LE operator onto mounting plate	27	B1.1	HX4604-21C Key Switch Panel with RJ45 connector	60
9 Push arm installation	28	B2.1	HX4604-11C Key Switch Panel	61
9.1 Push arm installation templates	28	Appendix C - Knowing act switch wiring diagrams	62	
9.2 Push arm installation	28	C1.1	Knowing act switches	62
		C1.2	Knowing act switch wiring diagram	62

1 General information

1.1 General information

1.1.1 Installation Instructions.

This manual provides installation instructions for the following ED100LE low energy door configurations. Reference Para. 2.2 and 2.3 for door illustrations.

Single doors.

1. RH and LH pull.
2. RH and LH push.
3. RH and LH pull as push.

Double doors.

1. Pull
2. Push
3. Pull as push.
4. Double egress.

Companion doors.

1. Push
2. Pull

NOTICE

ED100LE Setup and Troubleshooting.

Reference ED50LE-ED100LE Setup and Troubleshooting Manual DL4617-001.

1.1.2 dormakaba.us website.

Manuals are available for review, download, and printing on the dormakaba.us website.

1.1.3 Dimensions

Unless otherwise specified, all dimensions are given in both inches (") and [mm].

1.1.4 Building codes and standards.

ED100LE installation: observe applicable national and local building codes.

1.1.5 Symbols used in these instructions.



WARNING

This symbol warns of hazards which could result in personal injury or threat to health.

CAUTION

This symbol warns of a potentially unsafe procedure or situation.

NOTICE

Draws attention to important information presented in this document.



TIPS AND RECOMMENDATIONS

Clarifies instructions or other information presented in this document.

2 Product overview

2.1 ED100LE maximum door weights and door installation

2.1.1 ED100LE maximum door weights.

Table 2.1.1 ED100LE maximum door weights

Exterior applications – Prevailing conditions at opening must be considered		
Maximum door width	Pounds	kg
48" [1219]	220	[100]
Interior applications – Prevailing conditions at opening must be considered		
Maximum door width	Pounds	kg
48" [1219]	600	[272]

2.1.2 Interior building surface installation.

NOTICE

Installation on an interior building surface.

The ED100LE with fine cover must be installed on an interior building surface.

2.1.3 ED100LE exterior door Installation.

NOTICE

Exterior door use.

To insure proper suitability for exterior door use, the following topics must be addressed in the context of the door application setting.

- For site-specific use factors such as high wind conditions and/or building pressure consult the factory.
- Door width, height, weight, and usage patterns.
- Observable prevailing conditions at the opening under which the operator is expected to perform. In some instances, this may require increased force settings to counteract these conditions.
- Door mounted presence sensors. When attempting to overcome these forces, it is strongly suggested that door mounted presence sensors be employed to enhance pedestrian safety through the opening.

2.2 Single door configuration examples

Fig. 2.2.1 LH push

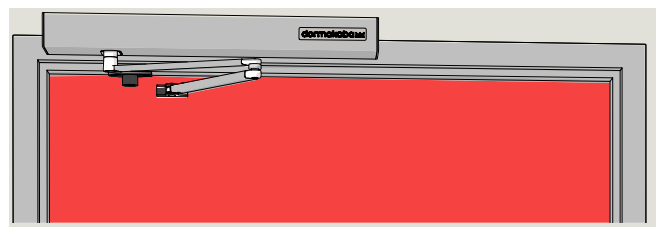


Fig. 2.2.2 LH pull


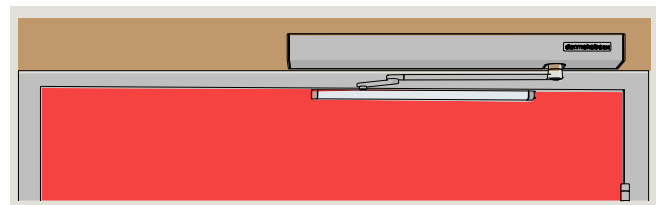


Fig. 2.2.3 LH pull as a push

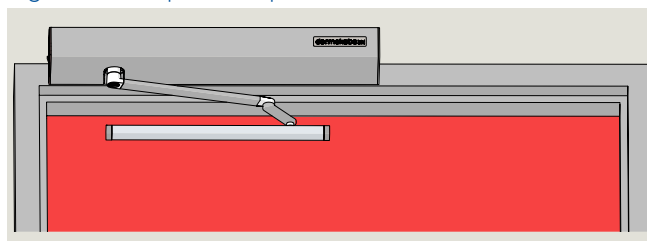

2.3 Double door configuration examples

Fig. 2.3.1 Push

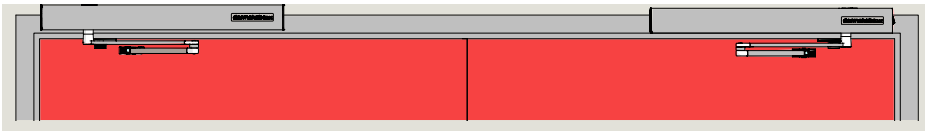


Fig. 2.3.2 Pull

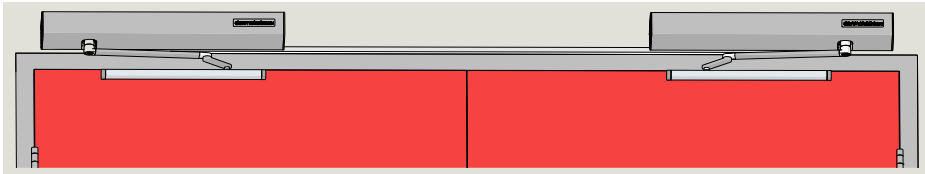


Fig. 2.3.3 Pull as push – track mount installation

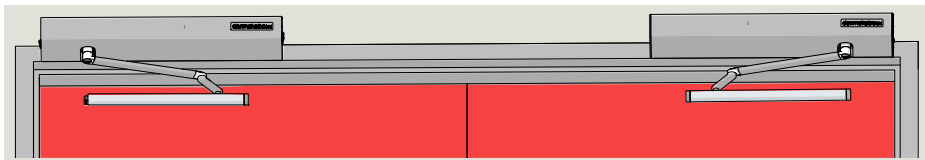


Fig. 2.3.4 Double egress


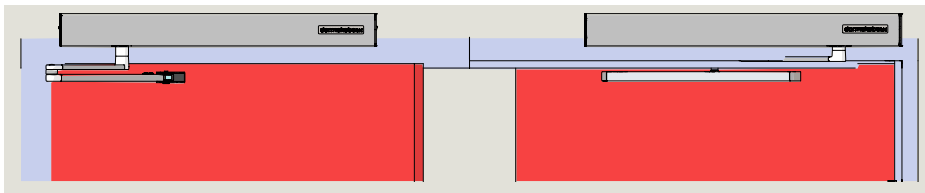


Fig. 2.3.5 Companion door; push without cover



Fig. 2.3.6 Companion door; pull without cover

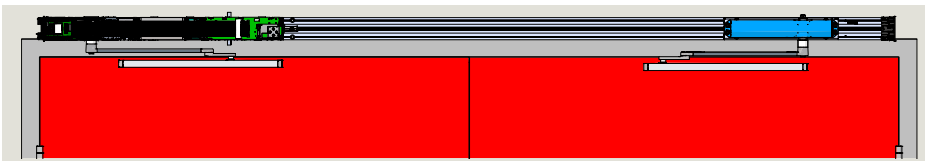

2.4 ED100LE low energy operator

Fig. 2.4.1 ED100LE operator HX4681-020

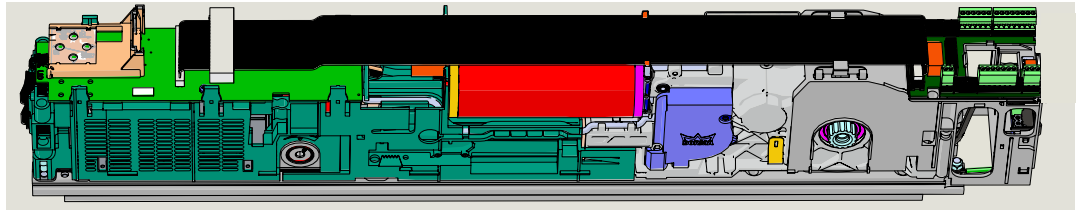


Fig. 2.4.2 Accessory terminals, guide pin

- 11 Terminals for accessory wiring
 - 12 Bag containing terminals and third guide pin*
 - 13 Guide pin
- * Included with operator

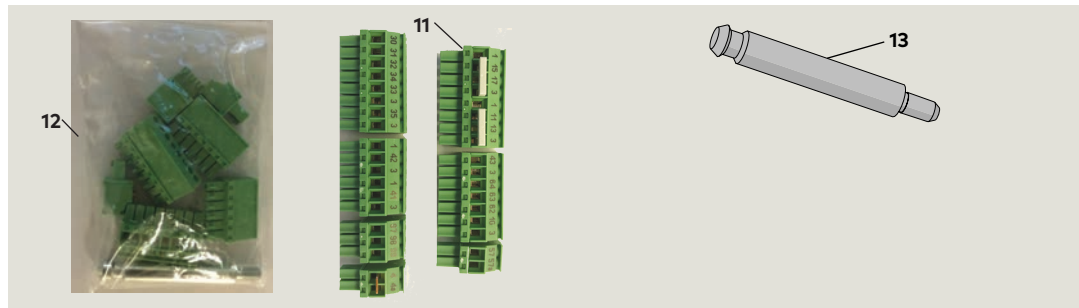


Fig. 2.4.3 ED100LE backplate plate screw kit HK4053-010

- 1 #12 x 2 1/2" Phillips FHWS DF0670 000
- 2 1/4-20 x 1 1/2" PFHMS DF0671-000

Assembly #	Item #	Quantity
HK4953-010 Screw kit	1	12
	2	12


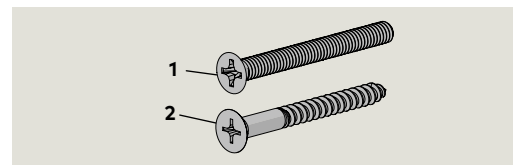


Fig. 2.4.4 Decal kit, low energy HK3137-0X0

- 1 DD0586-010
- 2 DD0758-010
- 3 DD0762-010
- 4 DD0762-020
- 8 Safety Information label, low energy DD1269-040
- 9 Label, Service call DD3425-010

Assembly #	Item #	Quantity
HK3137-010 Single door decal kit	1	2
	2	1
	3	1
	4	1
	8	1
HK3137-030 Double door decal kit	9	1
	1	4
	2	4
	3	2
	4	2
	8	1
	9	1

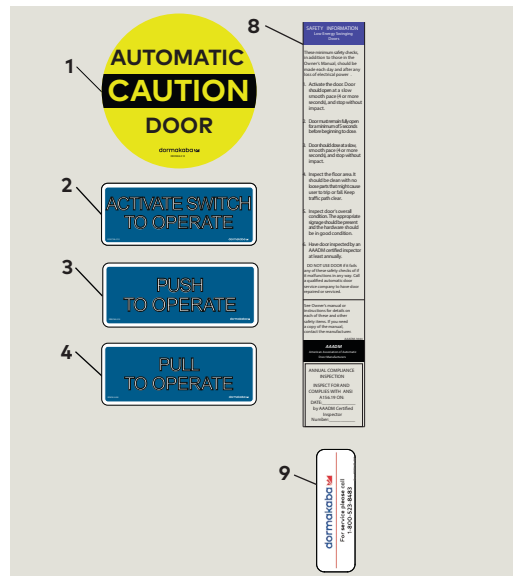

2.5 ED100LE fine cover kits


2.5.1 Fine cover kits.

- HK3401-01X Fine cover kit basic.
- HK3401-05X Fine cover professional single.
- HK3401-07X Fine cover professional pair.

Table 2.5.1 Fine cover kit part numbers

No.	Part number and description		Quantity		
			HK3401-01X	HK3401-05X	HK3401-07X
1	HC3459-01X	Fine cover single	1	1	
2	HC3459-03X	Fine cover pair			1
3	HC3466-01X	ED100/ED250 end cap set	1		
4	HC3466-01X	ED100/ED250 end cap set		1	1
5	HC3466-02X	Spindle cover set		1	1
6	HC3468-010	Backplate, ED operator, FC ext.		1	1
7	HC3481-010	ED100/ED250 professional cover bracket		1	
8	HD4613-020	Logo plate dormakaba ED swing	1	1	1
9					
10	DL4613-001	ED FC logo template instructions	1		
10	HC3494-010	ED100/ED250 cable tie			2
11	HP4613-001	ED FC logo placement template	1		
12	HL4613-001	ED FC logo template instructions - not shown	1	1	
13	HD4613-020	Logo plate dormakaba ED swing		1	1
14	HK3491-001	Backplate connect kit		1	2
15	DL4613-001	ED FC logo template instructions		1	1
16	HP4613-001	ED FC logo placement template		1	1
17	HS3487-010	ED between support assembly			1
18	HX3482-010	ED100/ED250 mode switch		121	
19	HX3484-030	ED power connect cable, 3400 mm			1
20	HX3485-030	ED sync cable, 2030 mm			1
21	HX3486-030	ED Mode switch 3 position			1

Fig. 2.5.1 Fine cover kits

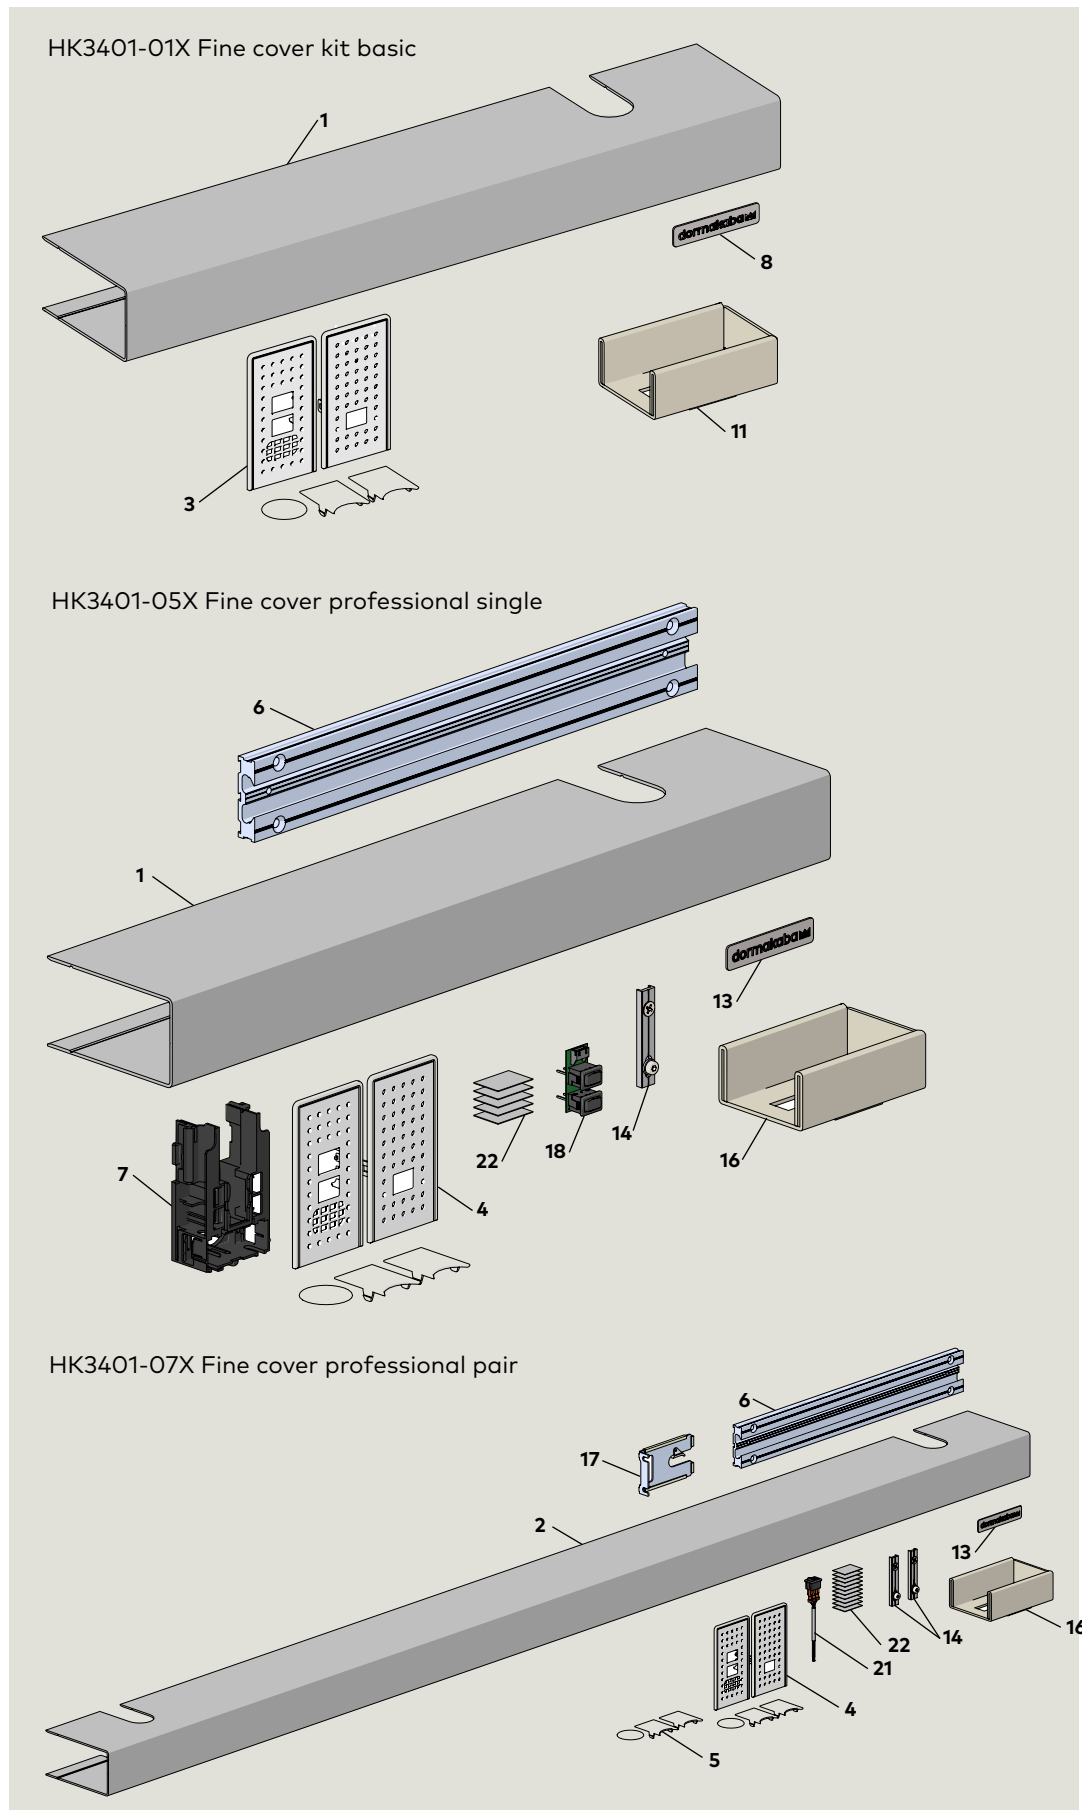

2.6 Fine cover kit hardware

- 1 Mounting, extr. connector HC3491-010
- 2 M6 x 10 mm SHCS and washer HF3495-01Z
- 3 M6 x 10 mm PFHS HF3496-01Z

Fig. 2.6.5 Backplate connect kit HK3491-001

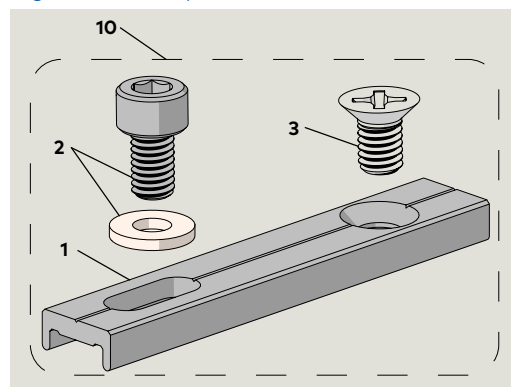


Fig. 2.6.1 End cap sets

- 3.1 End cap set, silver, HC3466-01A
- 3.2 End cap set, black, HC3466-01C
- 4.1 Spindle cap set, silver HC3466-02A
- 4.2 Spindle cap set, black HC3466-02B

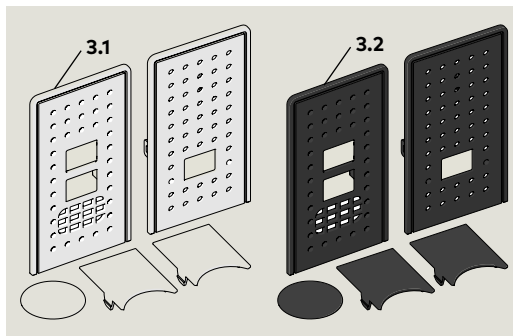


Fig. 2.6.6 Spindle cap sets

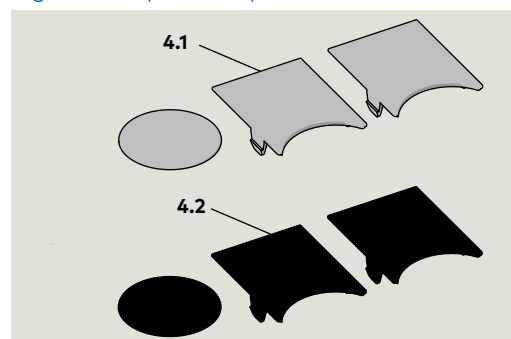


Fig. 2.6.2 Cover bracket

- 7 Cover bracket HC3481-010
- 8 dormakaba logo plate HD4613-020
- 15 Wire retainer HX3493

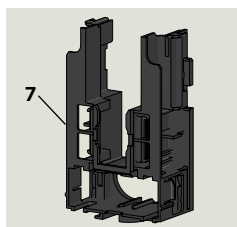


Fig. 2.6.3 Wire retainer


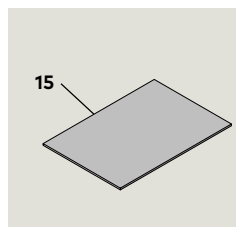


Fig. 2.6.7 dormakaba logo plate



Fig. 2.6.4 Mode switch

- 14 Mode switch HX3482-010
- 1 Mode switch PCB
- 2 JST HXP 4 pin connector
- 3 Alpha 1174C 4 conductor 22 AWG cable, 73" long

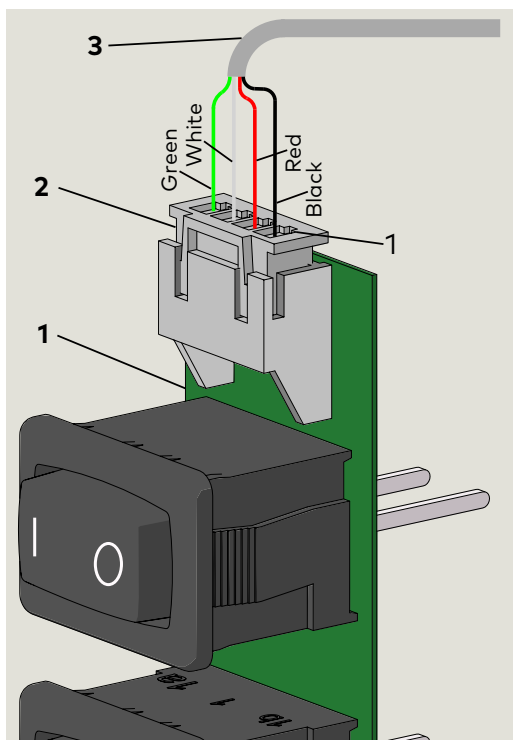

2.7 Push arm kits

- 1 Standard push arm, 8.75" reveal
DC4677-01X
- 2 Deep push arm, 19.5" reveal
DC4677-02X
- 3 Screw kit,
HK2719-010

Fig. 2.7.1 Push arm kit, 8.75" reveal
HK4709-01X


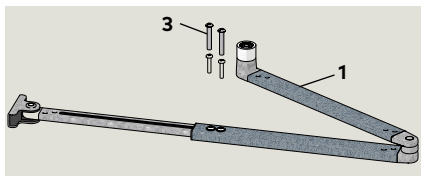



Fig. 2.7.2 Push arm kit, 19.5" reveal
HK4709-02X

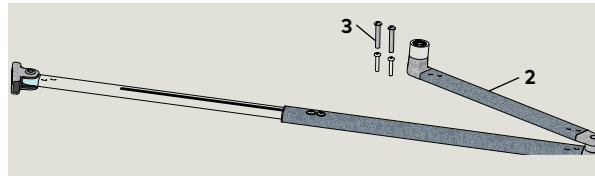

2.8 Deep pull arm kit

- 1 Deep pull arm
DC4678-02X
- 3 Screw kit,
HK2719-020

Fig. 2.8.1 Deep pull arm kit, HK4709-12X

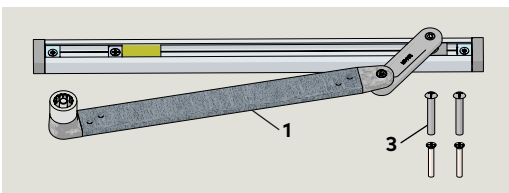

2.9 Arm screw kits

- 9.1 10-24 x 1 1/2"
barrel nut
DF2718-01Z
- 9.2 10-24 x 1/2"
PPHMS
DF3278-01Z
- 10.1 10-24 x 1 1/2"
barrel nut
DF2718-01Z
- 10.2 10-24 x 1 1/4"
FHSCS
DF2717-01Z

Fig. 2.9.1 Push arm screw kit HK2719-010


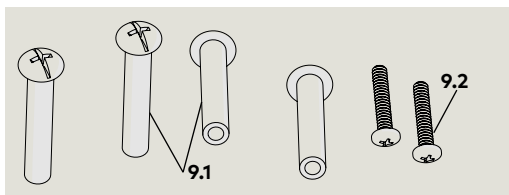



Fig. 2.9.2 Pull arm screw kit HK2719-020

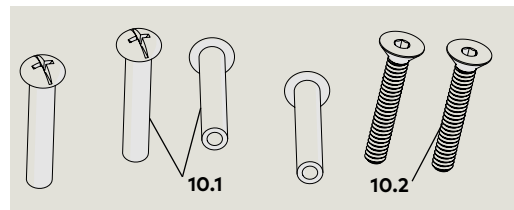

2.10 Optional key switch panels

- 2 Key switch panel,
RJ45, HX4604-21C
- 3 Key switch panel
HX4604-11C

Fig. 2.10.1 Key switch panels

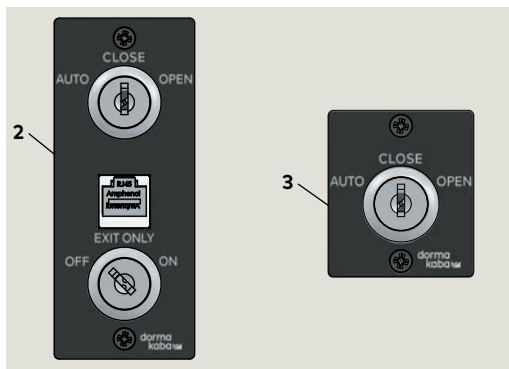


Communication cable 90 degree RJ45	Length	Item #
HX4662-001	3' [914 mm]	1
HX4662-002	10' [3048 mm]	1
HX4662-003	20' [6096 mm]	1



TIPS AND RECOMMENDATIONS

- Wiring diagrams; reference Appendix B.

Fig. 2.10.2 Communication cable,
90 degree RJ45



2.11 Push arm door stop - option

- 2** 1/4" thick base plate
DC4633-001
- 3** Rubber bumper
DC4633-003
- 4** Shoulder screw
DC4633-004
- 5.1** 1/4 x 1 1/4" Phillips FHS, black oxide,
- 5.2** No. 14 x 1 1/4" Phillips FHS for sheet metal

Fig. 2.11.1 Door stop assembly HS4633-001


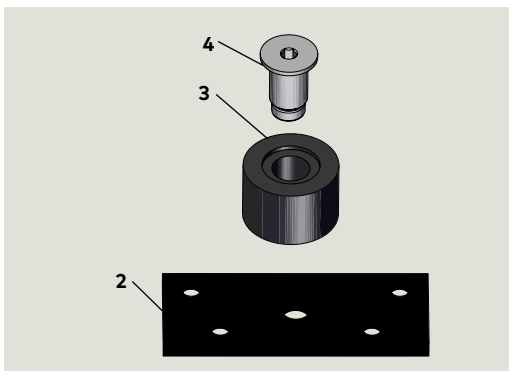


Fig. 2.11.2 Mounting screw kit HC4633-005

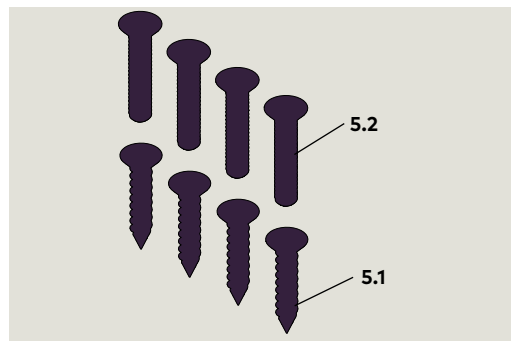

2.12 ED100LE axle extensions

- 1** M8 x 1.25 x 40 SHCS
- 2** M8 x 1.25 x 50 SHCS
- 3** M8 x 1.25 x 80 SHCS

Fig. 2.12.1 [20 mm]
DC4679-001

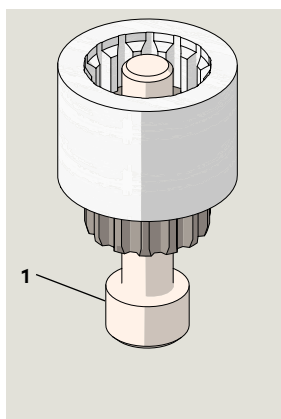


Fig. 2.12.2 [30 mm]
DC4679-002


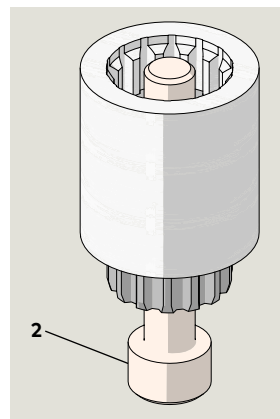


Fig. 2.12.3 [60 mm]
DC4679-003

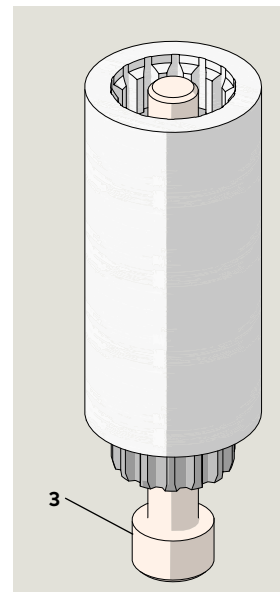

2.13 Double door ED100LE operator connection cables


Communication cable	Length	Item #	Quantity
HX3485-030	80" [2030 mm]	1	1
Optional			
HX3485-010	9 7/8" [250 mm]	1	0
HX3485-020	40 1/2" [1030 mm]	1	0

Fig. 2.13.1 Communication (sync) cable



Connect cable	Length	Item #	Quantity
HX3484-030	119 5/8" [3400 mm]	3	1
Optional			
HX3484-010	68 7/8" [1750 mm]	3	0
HX3484-020	94 1/2" [2400 mm]	3	0

Fig. 2.13.2 Connect cable

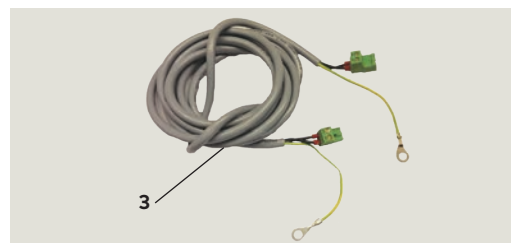

3 Technical data

3.1 ED100LE operator technical data

Technical data continued on page 10.

3.1.1 Operating conditions.

Ambient temperature	5 to 122 °F [-15 to 50° C]
Suitable for dry rooms only	Relative air humidity: 93% maximum, non-condensing
Power supply	115 Vac ±10%, 50/60 Hz 6.6 A maximum
Branch circuit protection (provided by others)	15 A maximum, dedicated branch circuit
Protection class	NEMA 1 [IP20]
Power wiring: black, white, bare copper (ground)	12 AWG maximum
Operating noise	Maximum 50 db(A)

3.1.2 General specifications.

Operator dimensions (W x H x D)	27" x 2 3/4 x 5 1/8" [685 x 70 x 130 mm] 27" cover standard
Operator weight	21.8 lb [9.9 kg]
Power supply for accessories	24 Vdc ± 5%, 1.5 A
Maximum door opening angle	95 to 110° depending on installation type



TIPS AND RECOMMENDATIONS

- *X4 terminal board numbers, reference Chapter 4.

3.1.3 Inputs

Wire size Connector plug screw size	14 AWG 1/16"
Activation inputs	X4* Interior, exterior N. O. contact
Safety sensors	X5 Swing, approach sides.
Night-bank (intercom system)	X10 57, 57a 8-24 Vdc/Vac +5%
Night-bank (key switch)	X1 35, 3 d2 parameter Configure for N.O. or N.C. contact
Deactivation of drive function	X6 4, 4a d1 parameter Configure for N.O. or N.C. contact

3.1.4 Outputs

Maximum wire size Connector plug screw size	16 AWG 1/16"
Door status	X7 97,98,99 Sr parameter Door closed Com, N.O., N.C. contacts Door open Door closed, locked

3.1.5 Integrated functions

Hold open time Automatic opening	dd parameter	0 to 30 s Optional 0 - 180 s.
Hold open time Night / bank	dn parameter	0 to 30 s
Hold open time Manual opening	do parameter	0 to 30 s
Door blocking behavior	hd parameter	Automatic, manual door modes
Electric strike delayed opening for locking mechanism	Ud parameter	0 to 4 s
Locking device feedback	X3 43, 3	Chapter 4 Motor lock
Wind load control, maximum	Fo, Fc parameters	33.7 lb f 150 N
Voltage independent braking circuit		Adjustable with potentiometer
LED status indicators Green, Red, Yellow		24 Vdc power Error codes Service interval
Program and Exit Only switches	Reference: Setup and Troubleshooting Instructions	Auto, Close, Open Exit only; Off, On
User interface		4 button keypad, 2 digit display
Slot for upgrade cards		Extension of functional range.
Firmware update		Firmware update

TMP, temperature management program	Overload protection	
IDC, initial drive control	Driving phase optimization	
Cycle counter	CC parameter	0 to 1,000,000
Power assist function	hA, hF, hS parameters	Drive support for manual opening of door
Push & go function	PG parameter	Auto opening of door at 4° open



TIPS AND RECOMMENDATIONS

- **Parameters**, reference Setup and Troubleshooting Instructions Manual.

3.2 ED100LE operating specifications

3.2.1 ED100LE

Maximum power consumption	120 watts	
Opening force lbf - N Fo parameter	Minimum 4.5 [20]	Maximum 13.5 [60]
Manual closing force lbf - N Fc parameter	Minimum 4.5 [20]	Maximum 13.5 [60]
Maximum door weight, lb [kg]	220 [100 kg]	Depending on door width and application.
Door width	Minimum 28"	Maximum 48"


Maximum opening speed, %s	27	May be limited by door weight after learning cycle.
Maximum closing speed, %s	27	
Axle extensions	13/16" [20 mm] 2 3/8" [60 mm]	
Reveal depth for pull arm with CPD lever	0 to 2 1/4" [0 to 57.1 mm]	
Reveal depth for standard push arm	0 to 11 13/16" [0 to 300 mm]	
Reveal depth for deep push arm	0 to 19 11/16" [0 to 500 mm].	

4 E100LE terminal board interfaces

4.1 ED100LE terminal board interfaces

Fig. 4.1.1 Terminal board electrical connections

- 1 Green LED
- 2 Yellow LED
- 3 Red LED
- 4 Key (red insert) location in socket. Assigned plug has tab in same location broken off.
- 5 Jumpers, factory installed at following terminals:
 - 4 and 4a
 - 15 and 3*
 - 11 and 3*
- 6 DCW upgrade card plug. Not used.
- 7 Fire protection upgrade card plug. Not used.

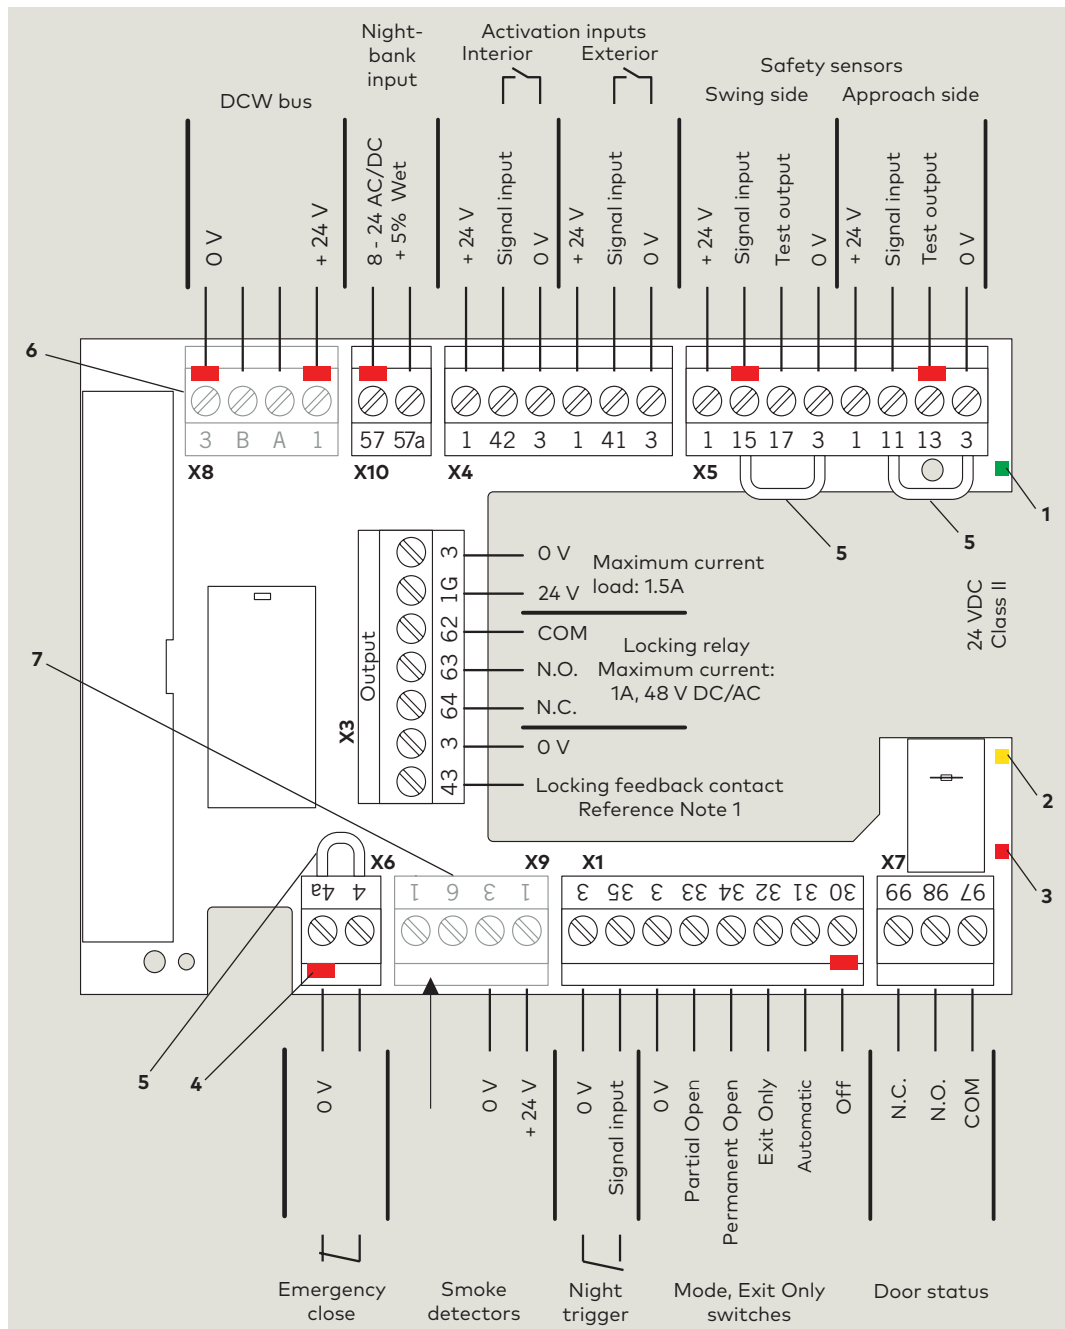

TIPS AND RECOMMENDATIONS

- Use documentation provided with each device for electrical installation.

TIPS AND RECOMMENDATIONS

- Do not connect system accessories to board until operator has been commissioned and learning cycle performed (Setup and Troubleshooting Manual).

5 ED100LE door signage

5.1 Low energy operator

5.1.1 Overview

Signage and warnings are specified in ANSI /BHMA A156.19, American National Standard for Power Assist and Low Energy Power Operated Doors.

5.1.2 All low energy doors.

1. AUTOMATIC CAUTION DOOR decal.
 - All low energy doors shall be marked with signage visible from both side of door with the words "AUTOMATIC CAUTION DOOR".
 - Signs shall be mounted 50" ± 12" from floor to centerline of sign.

5.1.3 Knowing act switch used to initiate door operation.

1. ACTIVATE SWITCH TO OPERATE decal.
 - When a knowing act device is used to initiate operation of door operator, door shall be provided with sign on each side of door where switch is operated with message "ACTIVATE SWITCH TO OPERATE".

5.1.4 Push/Pull used to initiate door operation.

1. PUSH TO OPERATE, PULL TO OPERATE decals.
 - When push/pull is used to initiate operation of door operator, doors shall be provided with the message "PUSH TO OPERATE" on push side of door and "PULL TO OPERATE" on pull side of door.

Fig. 5.1.1 AUTOMATIC CAUTION DOOR decal



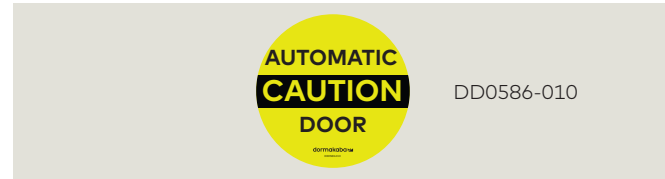


Fig. 5.1.2 ACTIVATE SWITCH TO OPERATE decal



- 1 Activate Switch to Operate DD0758-010


Fig. 5.1.3 PUSH TO OPERATE, PULL TO OPERATE decals

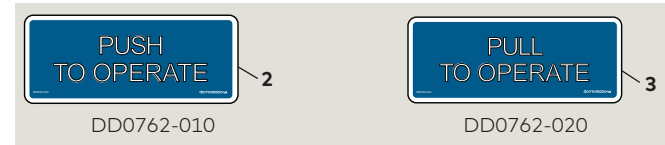

- 2 Push to Operate DD0762-010
- 3 Pull to Operate DD0762-020


5.2 Door signage, low energy swing door per ANSI / BHMA A156.19

Fig. 5.2.1 Push / Pull initiation of door operation

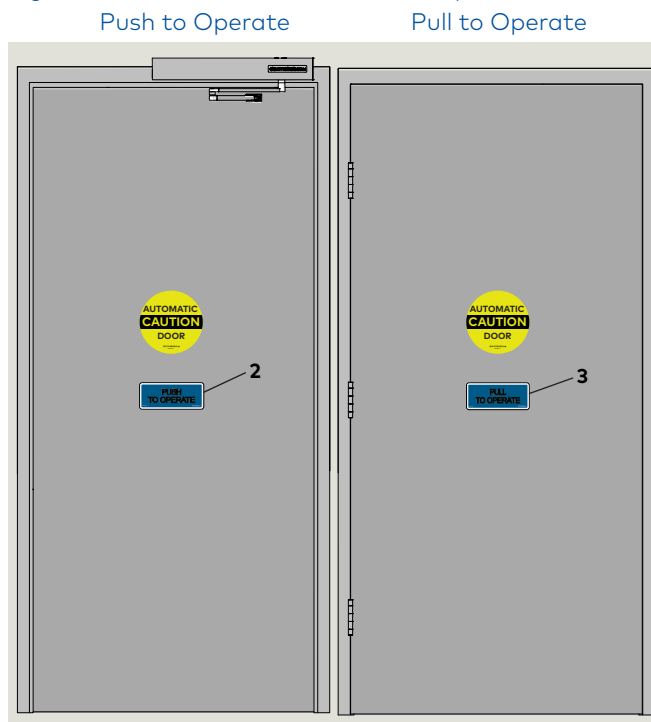

- 2 Push to Operate DD0762-010
- 3 Pull to Operate DD0762-020

Fig. 5.2.2 Knowing act device initiation of door operation

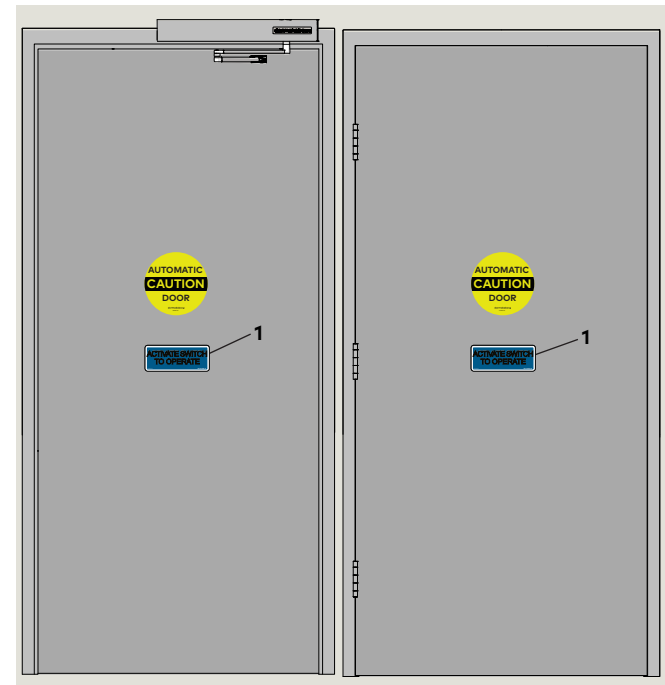


- 1 Activate Switch to Operate DD0758-010

Fig. 5.2.3 Double door, Push / Pull, push to operate



Fig. 5.2.4 Double door, Push / Pull, pull to operate

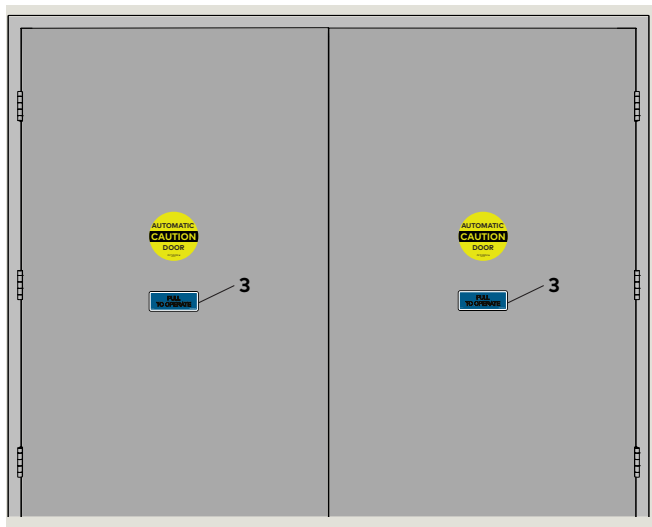

2 Push to Operate
DD0762-010

3 Pull to Operate
DD0762-020

5.3 Safety label, low energy swing doors

5.3.1 Low energy swinging door safety information label (Fig. 5.3.1).

This AAADM label outlines safety checks that should be performed daily on low energy swinging door controlled by an ED100LE operator.

5.3.2 Safety information label location.

Place label in a protected, visible location on door frame, near program switch panel if possible.

5.3.3 Annual compliance section of label.

This section of label is only completed on low energy swing doors that comply with ANSI/BHMA A156.19 standard and pass inspection by an AAADM certified dormakaba USA, Inc. technician.

5.3.4 Additional annual compliance inspection labels.

Place additional labels over annual compliance inspection section of safety information label.

Fig. 5.3.1 LE Safety information label
DD1269-040

SAFETY INFORMATION
 Low Energy Swinging Doors

These minimum safety checks, in addition to those in the Owner's Manual, should be made each day and after any loss of electrical power.

1. Activate the door. Door should open at a slow smooth pace (4 or more seconds), and stop without impact.
2. Door must remain fully open for a minimum of 5 seconds before beginning to close.
3. Door should close at a slow, smooth pace (4 or more seconds), and stop without impact.
4. Inspect the floor area. It should be clean with no loose parts that might cause user to trip or fall. Keep traffic path clear.
5. Inspect door's overall condition. The appropriate signage should be present and the hardware should be in good condition.
6. Have door inspected by an AAADM certified inspector at least annually.

DO NOT USE DOOR if it fails any of these safety checks or if it malfunctions in any way. Call a qualified automatic door service company to have door repaired or serviced.

AAADM-3044

AAADM
 American Association of Automatic Door Manufacturers

ANNUAL COMPLIANCE INSPECTION

INSPECT FOR AND COMPLIES WITH ANSI A156.19 ON:

DATE: _____
 by AAADM Certified Inspector
 Number: _____

Fig. 5.3.2 Annual compliance inspection label

ANNUAL COMPLIANCE INSPECTION

INSPECT FOR AND COMPLIES WITH ANSI A156.19 ON:


DATE: _____
 by AAADM Certified Inspector
 Number: _____

6 Recommended tools and torque chart

6.1 Recommended tools

- 1 T-handle hex key, 5 mm
- 2 Hex keys, 2.5 mm, 3 mm, 6 mm
- 3 Screwdriver, flat blade
- 4 Door pressure gauge, 0 to 35 ft - lbf
- 5 Screwdriver, Phillips, #2, #3
- 6 Torque wrench, 3 to 50 ft lb min.
- 6.1 Metric hex key sockets
- 7 Open end wrench, 13 mm
- 8 Screwdriver, flat blade, M2 (1/16 to 3/32")

Fig. 6.1.1 Recommended tools

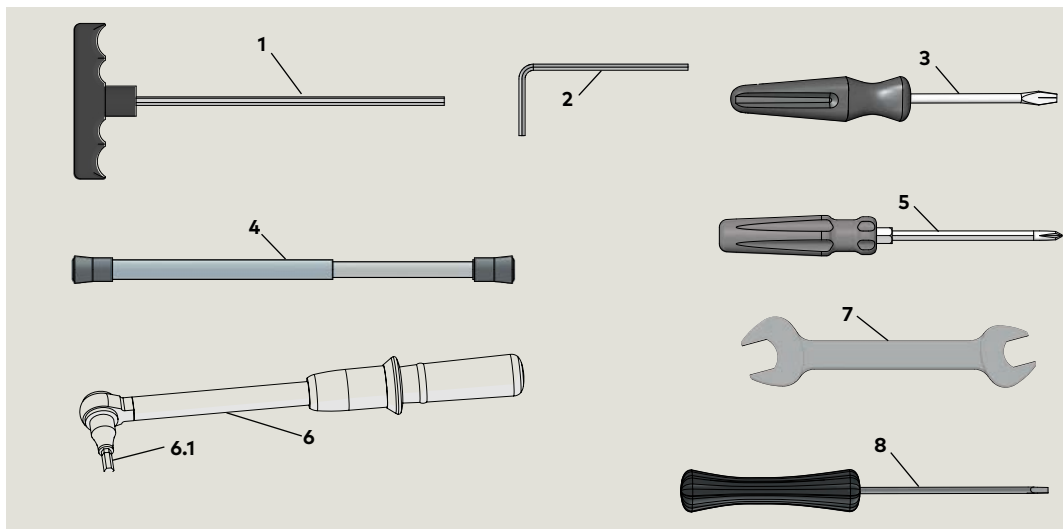

6.2 Standard tightening torque

6.2.1 Standard tightening torque


Fastener size	ft lb
M5	3.7
M6	7
M8	17
M10	34
M12	58

6.3 Drill bits

6.3.1 Drill bit sizes for fasteners

Fastener	Drill bit size	
#10 wood screw	Hardwood 9/64"	Softwood 1/8"
#12 wood screw	Hardwood 5/32"	Softwood 9/64"
#14 wood screw	Hardwood 11/64"	Softwood 5/32"
1/4 -20 metal self tapping screw	7/32"	
10-24 barrel nut	5/32"	


Fig. 6.3.1 Drill bit



7 Installation templates


7.1 ED100LE installation templates

Fig. 7.11 Assembly on hinge side, pull version with slide channel CPD and 1/2" [25] pivot pin

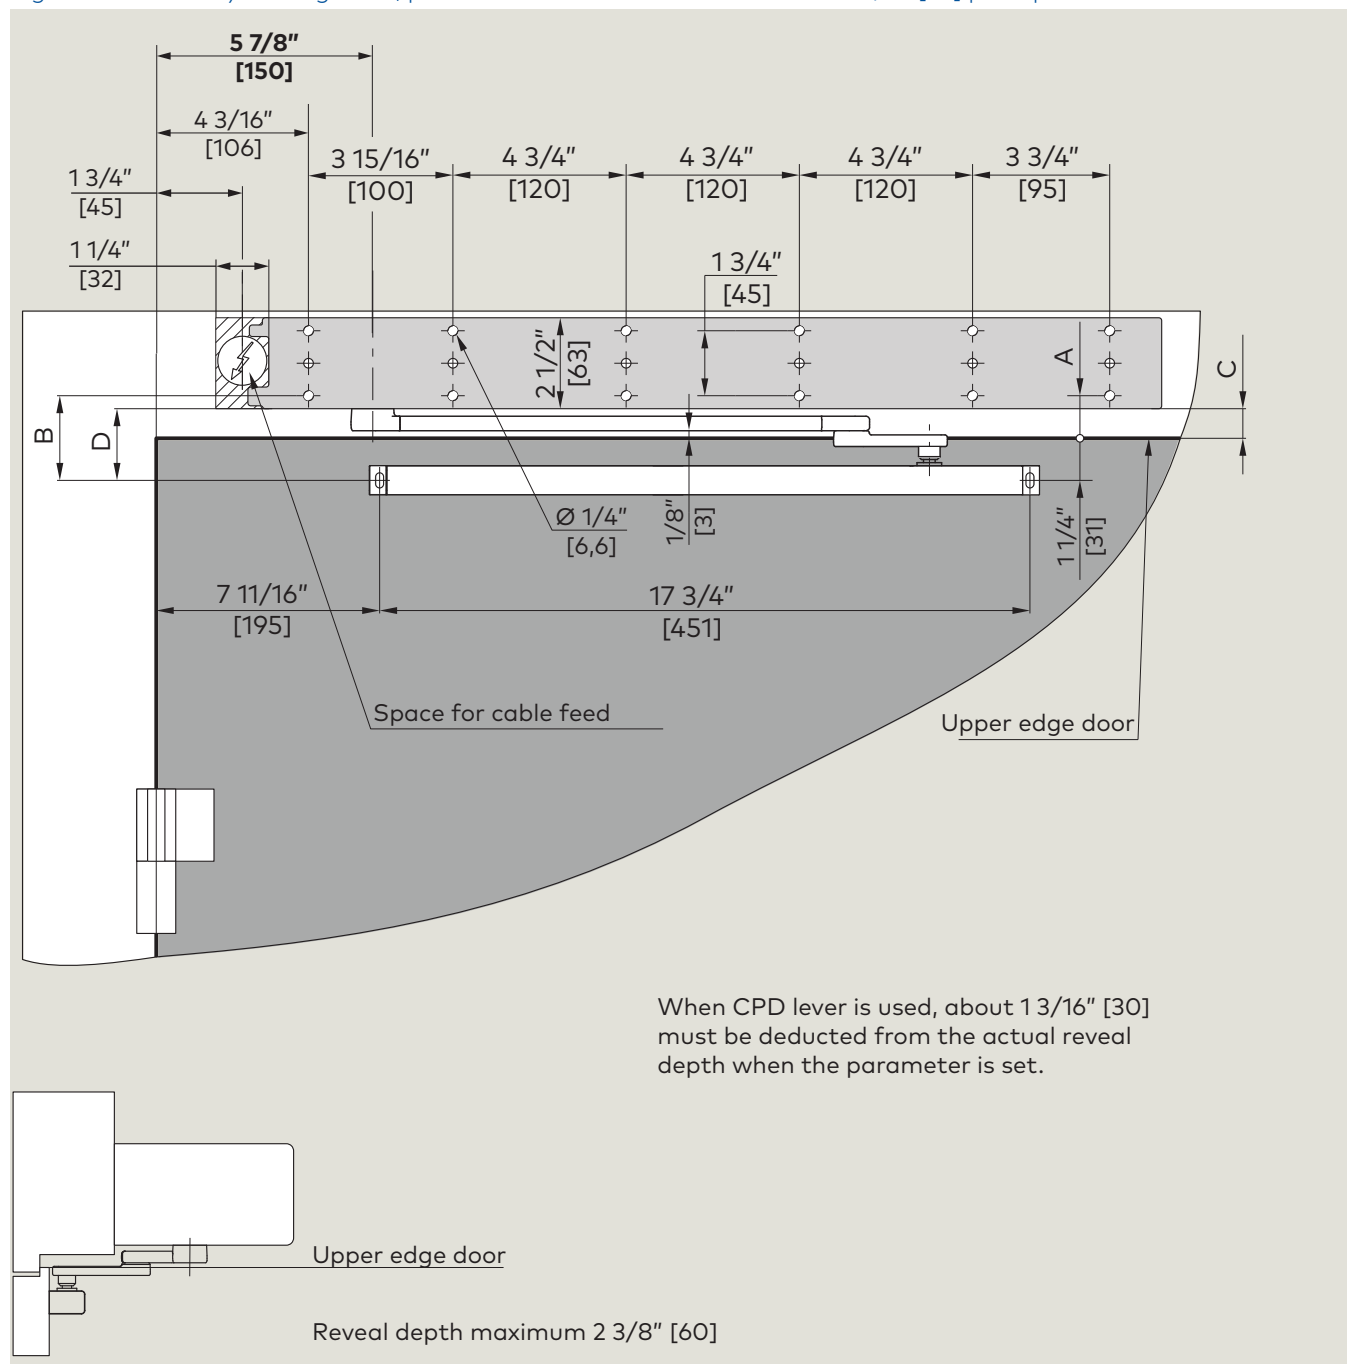


Axle extension	ED100LE	A		B		C		D	
		Inches	mm	Inches	mm	Inches	mm	Inches	mm
Standard	●	11/16	18	2	51	11/32	9	1 21/32	42
3/4" [20]	●	1 1/2	38	2 13/16	71	1 1/8	29	2 7/16	62
1 3/16" [30]	●	1 7/8	48	3 3/16	81	1 13/32	39	2 13/16	72
2 3/8" [60]	●	3 1/16	78	4 3/8	111	2 23/32	69	4	102

Fig. 7.1.2 Assembly on hinge side, pull version with slide channel CPD and 1" [50] pivot pin

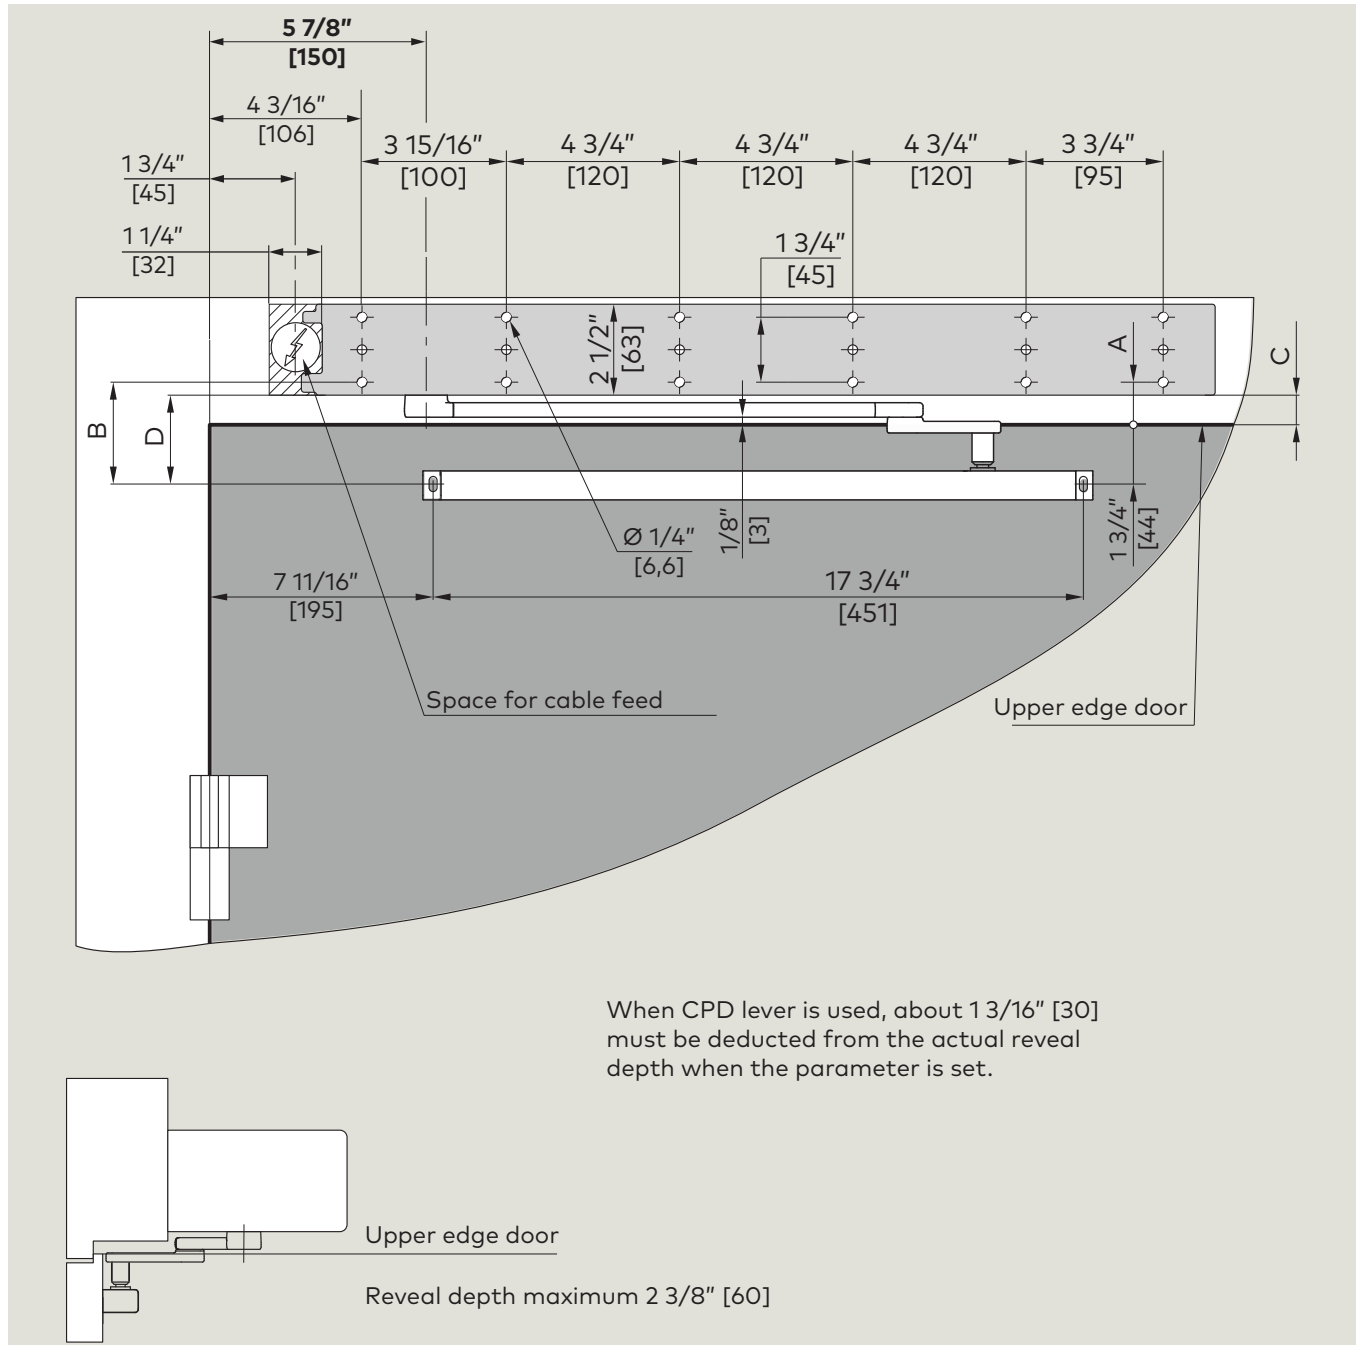

Axle extension	ED100LE	A		B		C		D	
		Inches	mm	Inches	mm	Inches	mm	Inches	mm
Standard	●	1 7/32	31	2 7/16	62	7/8	22	2 3/32	53
3/4" [20]	●	2	51	3 7/32	82	1 21/32	42	2 7/8	73
1 3/16" [30]	●	2 13/32	61	3 5/8	92	2 1/16	52	3 1/4	83
2 3/8" [60]	●	3 9/16	91	4 13/16	122	3 7/32	82	4 7/16	113

Fig. 7.13 Assembly on opposite hinge side, with push arm

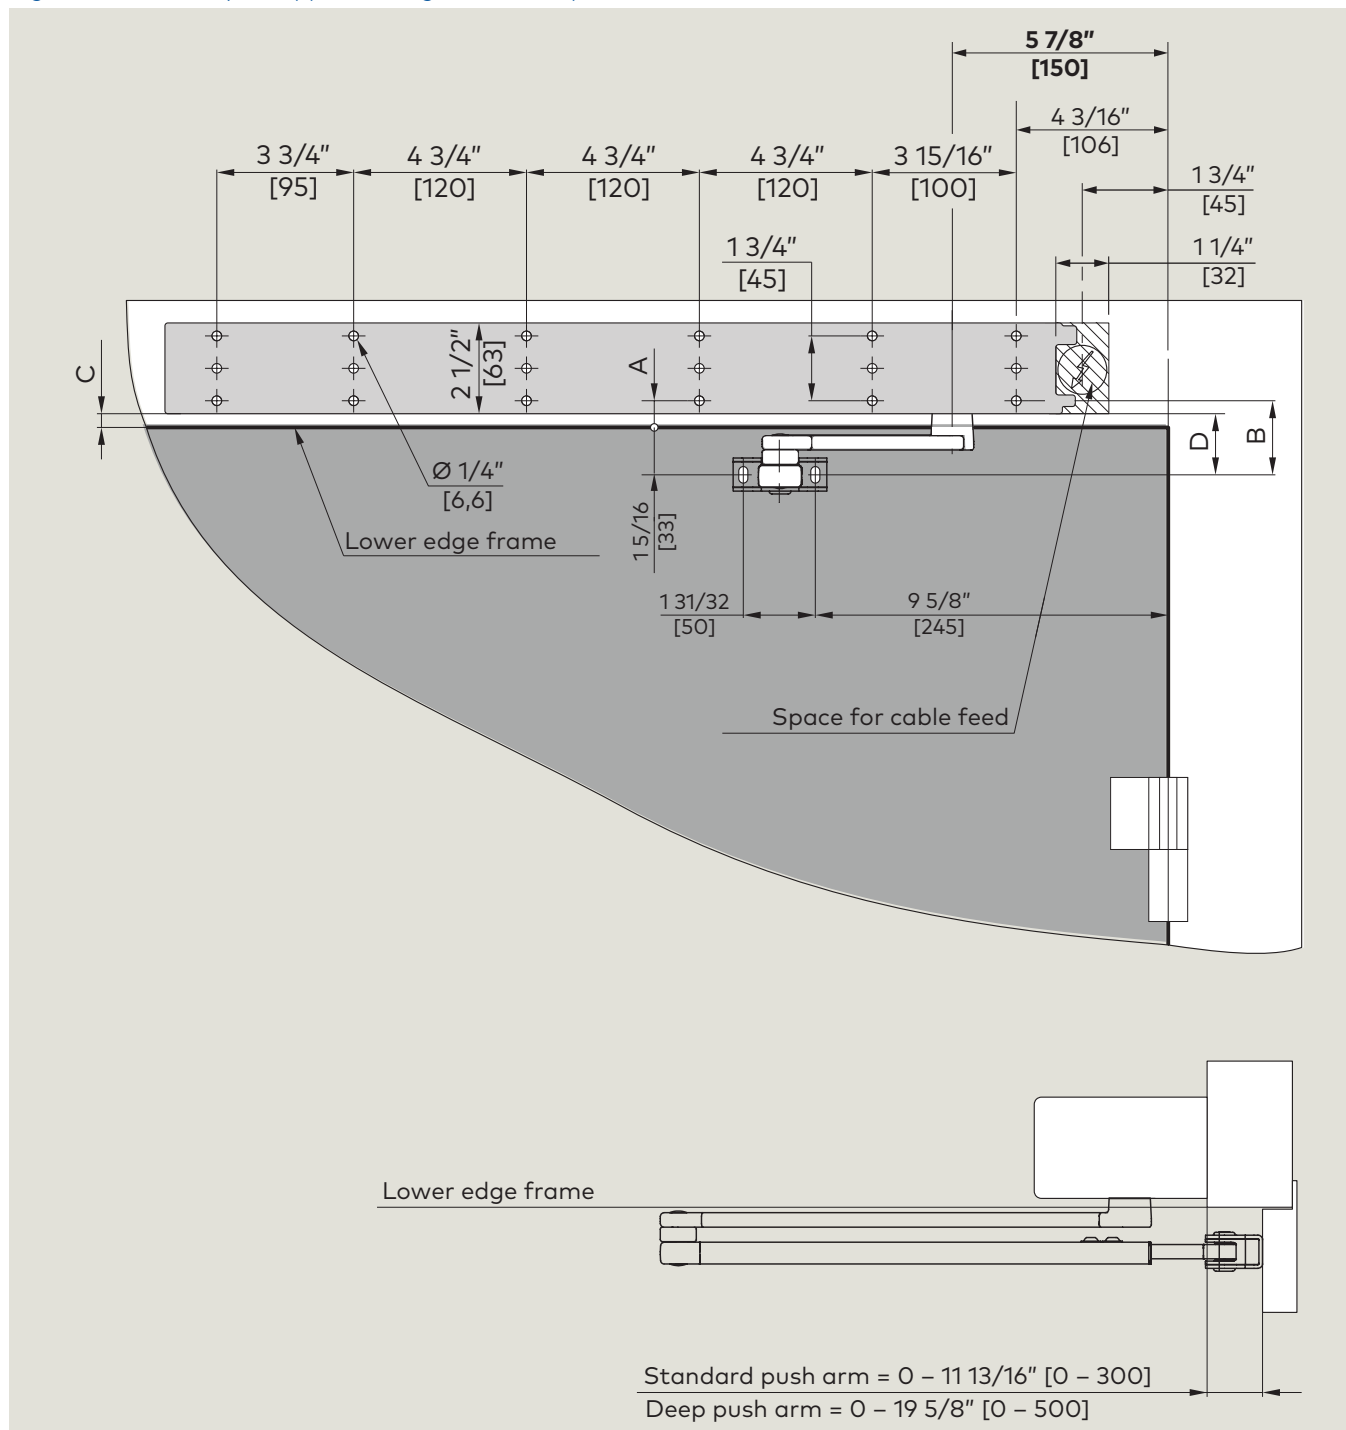

Axle extension	ED100LE	A		B		C		D	
		Inches	mm	Inches	mm	Inches	mm	Inches	mm
Standard	●	11/16	18	2	51	11/32	9	1 21/32	42
3/4" [20]	●	1 1/2	38	2 13/16	71	1 1/8	29	2 7/16	62
1 3/16" [30]	●	1 7/8	48	3 3/16	81	1 13/32	39	2 13/16	72
2 3/8" [60]	●	3 1/16	78	4 3/8	111	2 23/32	69	4	102

8 ED100LE operator installation

NOTICE

Double door Installation:

Repeat steps in Chapter 8 for each ED100LE operator

NOTICE

Companion Door Installation:

Reference Chapters 16 through 19.

8.1 Installation preparation

NOTICE

Installation steps listed in Chapter 8 through 11 are a recommendation. Structural, local conditions, available tools, or other factors or circumstances may require modification to these steps.



WARNING

ED100LE system should be installed by trained and knowledgeable installers experienced in installation and commissioning of swing door operators.

The installer should be familiar with all applicable local and national building code requirements, and with requirements of current ANSI/BHMA standard A156.19, Power Assist and Low Energy Power Operated Doors.

8.1.1 Door frame and door.

CAUTION

Insure area around door frame, adjacent walls and door is readily accessible and free of objects and debris.

8.1.2 Knowing act devices.

1. Verify knowing act devices planned for or in place for the door.



TIPS AND RECOMMENDATIONS

Knowing act device wiring should be planned for prior to operator installation.

8.1.3 ED100LE mounting plate installation preparation.

CAUTION

Using applicable ED100LE installation template (Chapter 7), holes for mounting plate fasteners must be located and drilled into door frame, wall or substructure prior to mounting plate installation.

CAUTION

Mounting plate installation must be orientated with 115 Vac connection towards door hinge side.

8.1.4 ED100LE mounting plate extension used with optional full door width cover.



TIPS AND RECOMMENDATIONS

Mounting plate extension is included for full width cover installation.

- Reference Appendix A for mounting plate extension and full width cover installation.

8.1.5 ED100LE 115 Vac electrical installation.



WARNING

Work on electrical equipment and 115 Vac wiring installation must be performed only by qualified personnel!




WARNING

115 Vac wiring to ED100LE operator must conform to local and national electrical codes.

8.2 Remove mounting plate from ED100LE operator

- 5 115 Vac plug
- 6 115 Vac socket

Fig. 8.2.1 115 Vac plug removal

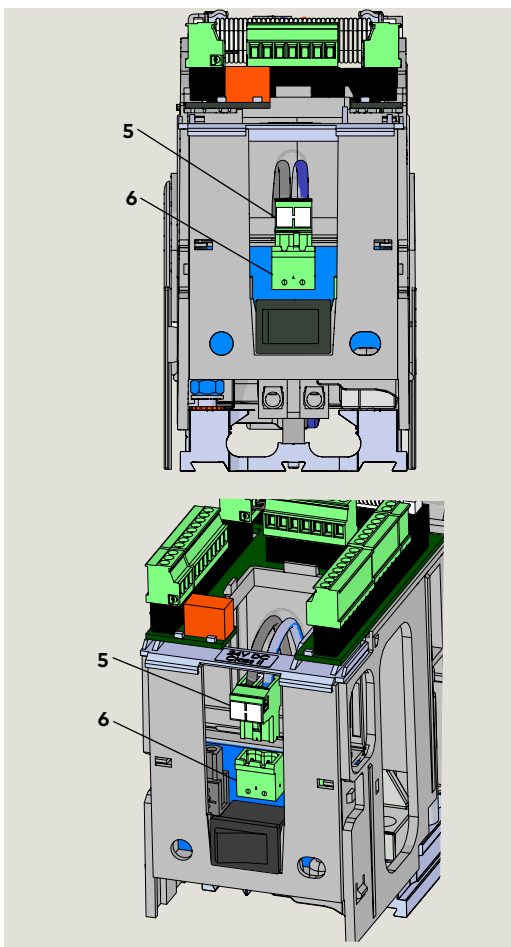

8.2.1 Remove 115 Vac plug from receptacle.

1. Remove 115 Vac plug (5) from its receptacle (6).

8.2.2 Remove mounting plate from operator.

1. Loosen all eight captive M6 socket head cap screws (SHCS) using a 5 mm hex T-handle.



TIPS AND RECOMMENDATIONS

Insure all eight fasteners are free of the mounting plate.

2. Remove operator from mounting plate.



TIPS AND RECOMMENDATIONS

Guide pin resistance may require screwdriver to start operator removal from end of mounting plate (Fig. 8.2.3).

- 1 ED100 operator
- 2 Mounting plate
- 5 115 Vac plug
- 3 M6 X 20 SHCS
- 4 M6 X 10 SHCS
- 5 Guide pin
- 6 115 Vac plug

Fig. 8.2.2 Mounting plate removed from ED100LE operator

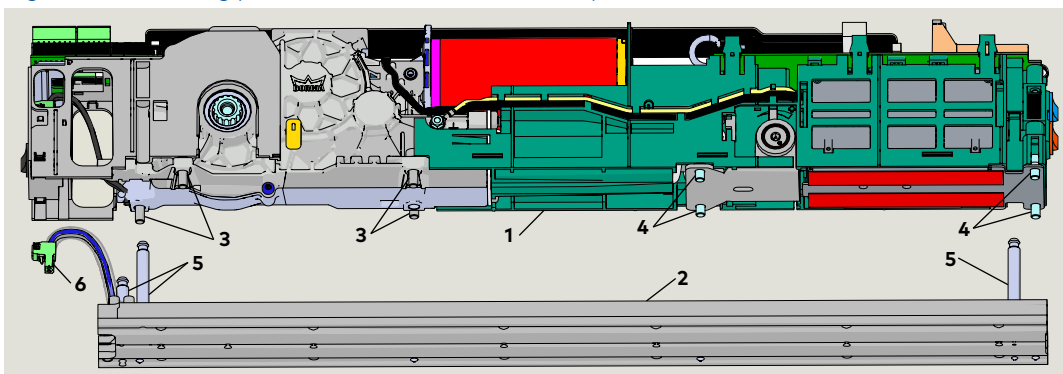


Fig. 8.2.3 Mounting plate removal

- 5 Guide pin


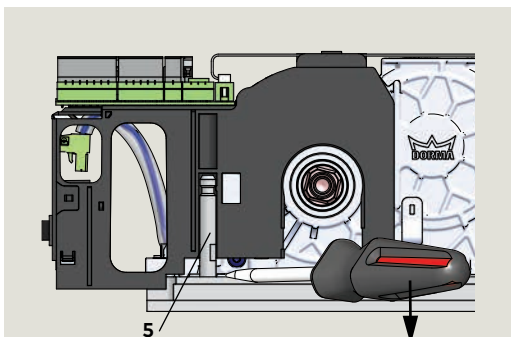


Fig. 8.2.4 5mm T-handle hex key

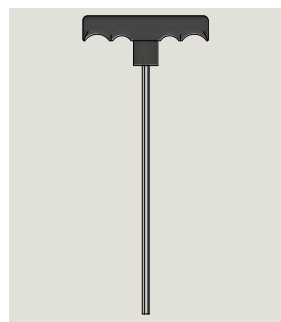

8.3 Customer 115 Vac connection to mounting plate terminal block

- 1 115 VAC terminal block
- 2 Ground terminal
- 3 Mains terminal torque and wire label
- 5 M3.5 screw
- 6 115 Vac plug to operator
- L 115 Vac
- N Neutral
- G Ground

Fig. 8.3.1 115 VAC terminal block

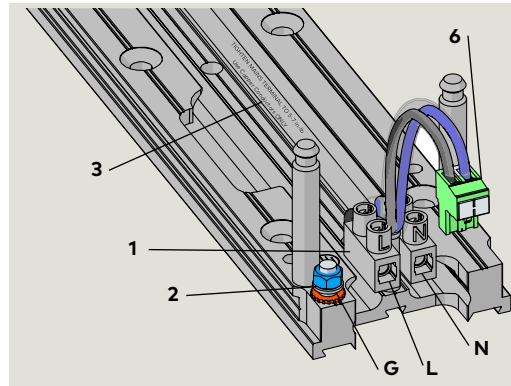


Fig. 8.3.2 Mains terminal torque and wire label

TIGHTEN MAINS TERMINAL TO 5-7 in-lb
Use Copper Conductors ONLY

- 4 Conduit box HX3501-001

Fig. 8.3.3 CB conduit box


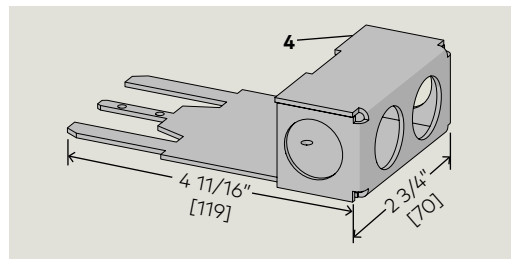


Fig. 8.3.4 PC wiring kit HK3597-010



- | | |
|----------------------------|---|
| 1 Power cord
HX3500-001 | 4 Conduit box
HX3501-001 |
| 2 Wire nut
HX1429-010 | 5 120 Vac label
DD3597-001 |
| 3 Cord grip
HX3502-001 | Instruction manual,
power cord kit
DL3597-001 |

8.3.1 Customer 115 Vac wiring.

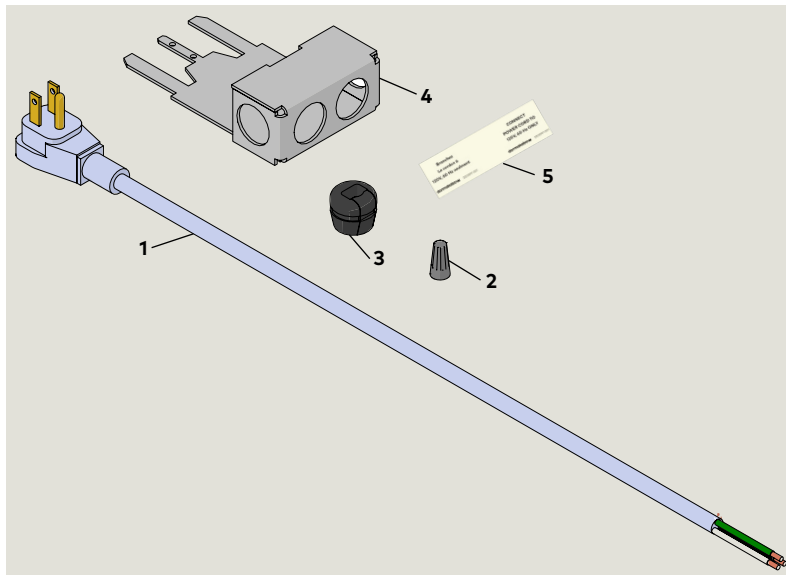

WARNING

Routing and connection of 115 Vac wiring to ED100LE must be performed by a qualified person!



WARNING

115 Vac branch circuit disconnect or circuit breaker must be OFF!

CAUTION

Use copper conductors only!

8.3.2 ED100LE wiring options.

1. Conduit box **CB** (Fig. 8.3.3).
 - U/L approved conduit box accessory; provides 115 Vac surface wiring to ED100LE.
 - Reference Para. 8.3.3 for **CB** box installation.
2. Power cord wiring kit **PC** (Fig. 8.3.4).
 - Eliminates need for hard wiring. Permits ED100LE to plug directly into 115 Vac receptacle.
 - Power cord length: 15" from end of conduit box to center of plug.

CAUTION

Insure **PC** installation conforms to local and national electrical codes.

- 1 115 VAC terminal block
- 2 Ground terminal
- 5 M3.5 screw
- 6 115 Vac plug to operator
- L 115 Vac
- N Neutral
- G Ground

Fig. 8.3.5 115 Vac terminal block mounting

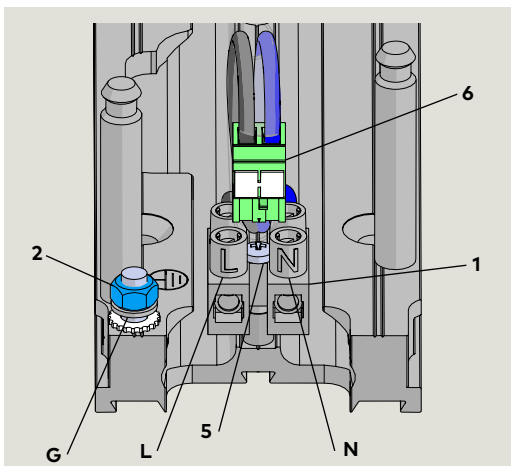


Fig. 8.3.6 Conduit box installed on mounting plate

- 1 115 VAC terminal block
- 2 Ground terminal
- 5 M3.5 screw
- 6 115 Vac plug to operator
- 7 Conduit box DX3501
- 7.1 Conduit box mounting hole


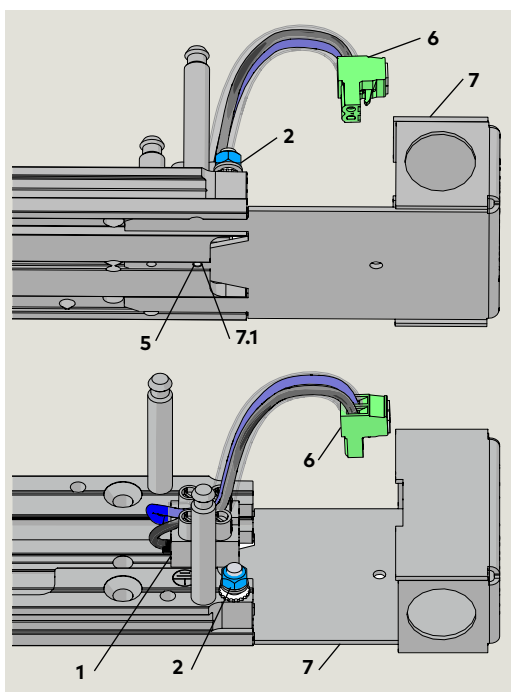


Fig. 8.3.7 PC power cord wiring kit assembly (option)

- 1 Power cord
- 3 Cord grip
- 4 Conduit box
- 5 120 Vac label



8.3.3 Install conduit box (option).

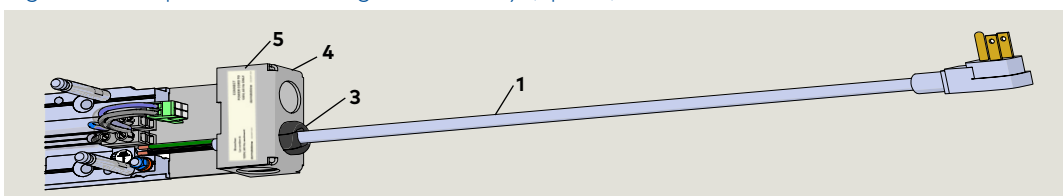

TIPS AND RECOMMENDATIONS

115 Vac terminal block is secured to mounting plate by M3 x 25 Phillips head screw.

- Screw must be loosened to allow conduit box tabs to slide into mounting plate slots.
- Screw is then threaded into conduit box mounting hole and tightened.

1. Loosen M3 x 25 Phillips head screw.
2. Slide conduit box tabs into slots in bottom of mounting plate until hole in conduit box lines up with hole in mounting plate.
3. Thread M3 Phillips head screw into conduit box mounting hole and tighten screw.

CAUTION

Terminal block M3 screw torque.


Tighten M3 screw to a torque of 5 - 7 in-lb.

- Insure screw is threaded into conduit box mounting hole.

4. Mounting plate assembly is ready for installation.


8.4 Mounting plate attachment to jamb or wall

Fig. 8.4.1 Mounting plate installation

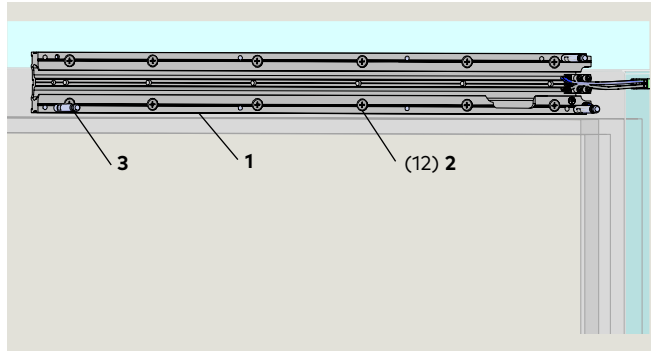

- | | | | |
|---|----------------------|---|---------------|
| 1 | ED100 mounting plate | 2 | Mounting hole |
| 3 | Guide pin | | |


Fig. 8.4.2 Mounting plate installation with conduit box

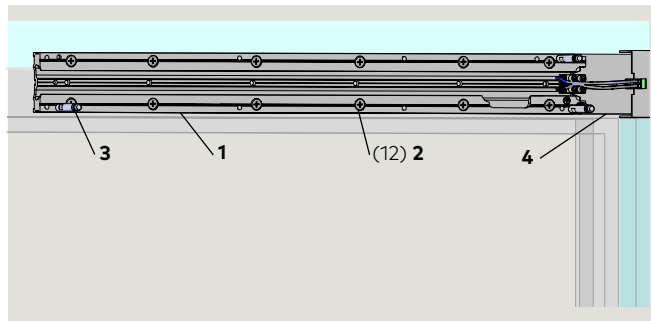

- | | | | |
|---|----------------------|---|----------------|
| 1 | ED100 mounting plate | 2 | Mounting hole |
| 3 | Guide pin | 4 | CB conduit box |


Fig. 8.4.3 ED100LE mounting plate screw pack
HK4053-010

- | | |
|---|---|
| 7 | #12 x 2 1/2" Phillips FHWS
DF0670 000
Quantity 12 |
| 8 | 1/4-20 x 1 1/2" PFHMS
DF0671-000
Quantity 12 |

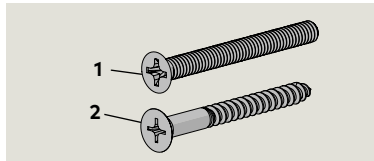

- | | |
|----|-----------|
| 13 | Guide pin |
|----|-----------|

Fig. 8.4.4 Guide pin

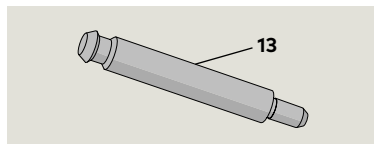

NOTICE

Optional full width cover installation.

Reference Appendix A for mounting plate extension installation.

8.4.1 Fasten mounting plate to jamb and/or wall.

CAUTION

Conduit box (if used):

- Insure conduit box or plate is prepared with applicable conduit fitting or cord grip.
- Insure jamb or wall is prepared for wiring to conduit fitting or cord grip.

1. Select applicable installation template.

NOTICE

Installation templates.

- Reference Chapter 7 – Installation Templates.

2. Using template as a guide, locate mounting plate on door frame/wall and prepare twelve mounting holes for mounting plate fasteners.

CAUTION

- Select fasteners based on door frame and wall material.
- Use fasteners provided with ED100LE (Fig. 8.4.3).
- Use appropriate wall anchors if required.

3. Fasten mounting plate to door frame and/or wall.

8.4.2 Mounting plate installation checks.

NOTICE

Installation checks.

- Check level.
- Check spindle to hinge centerline distance.
- Check alignment.

8.4.3 Install third guide pin.

1. Install third guide pin (Fig. 8.4.1, 8.4.4) in mounting plate.
 - Use 3 mm hex T-handle or hex key.

8.5 Connect customer 115 Vac to mounting plate terminal block

- 4 115 Vac terminal block
- 5 Ground post

Fig. 8.5.1 115 Vac wiring example

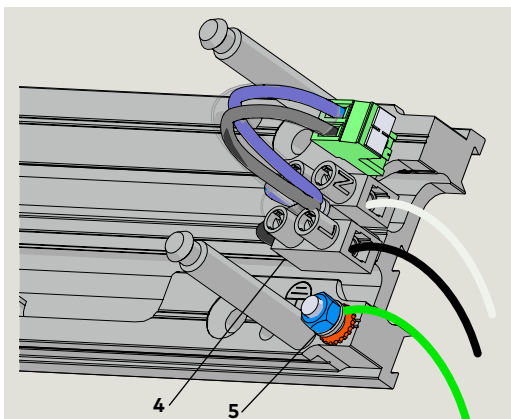


Fig. 8.5.2 Conduit box installation


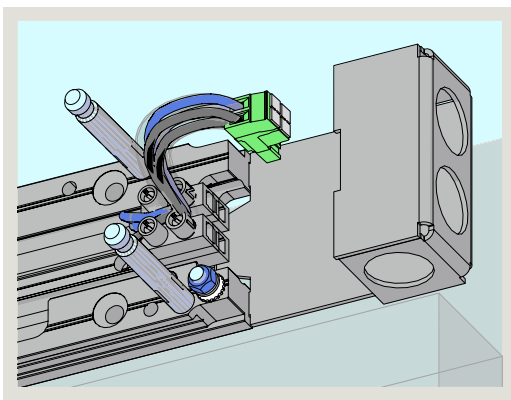


Fig. 8.5.3 PC power cord, conduit box installation



8.5.1 Connect customer 115 Vac wiring.

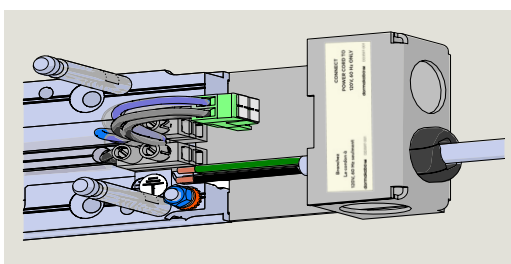

WARNING

Work on electrical equipment and ED100LE 115 Vac wiring installation must be only be performed by qualified personnel!



WARNING

Insure disconnect supplying power to ED100LE operator is OFF before connecting power!

1. Route wiring to 115 Vac terminal block.

CAUTION

115 Vac wiring.

Use copper conductors only!

2. Connect 115 Vac wiring to terminal block.
 - Terminal block screw tightening torque.

CAUTION

TIGHTEN MAINS TERMINAL TO 5-7 in-lb
Use Copper Conductors ONLY

3. Connect earth ground to ground post.

8.6 Route accessory wiring to mounting plate

Fig. 8.6.1 Mounting plate slots for accessory wiring



8.6.1 Route accessory wiring to mounting plate.

1. Route wiring to 115 Vac terminal block side of mounting plate (Fig. 8.5.1).
2. Accessory wiring opposite door hinge side: route wiring into mounting plate track (Fig. 8.6.1) to 115 Vac terminal block side of mounting plate.




TIPS AND RECOMMENDATIONS

Accessory wiring will terminate at ED100LE terminal board (Chapter 4).

8.7 Remove protective film strips from ED100LE operator

- 1 Heat conductive pad

Fig. 8.7.1 Operator heat conductive pads

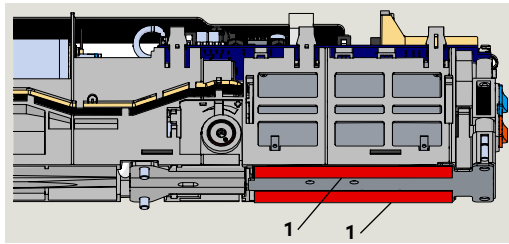

8.7.1 Remove protective film strips.

1. Remove two protective film strips from operator heat conductive pads.


CAUTION

Heat conductive pads.

Heat conductive pads must remain clean once protective film strips are removed!

8.8 Install ED100LE operator onto mounting plate

Fig. 8.8.1 ED100LE operator installation

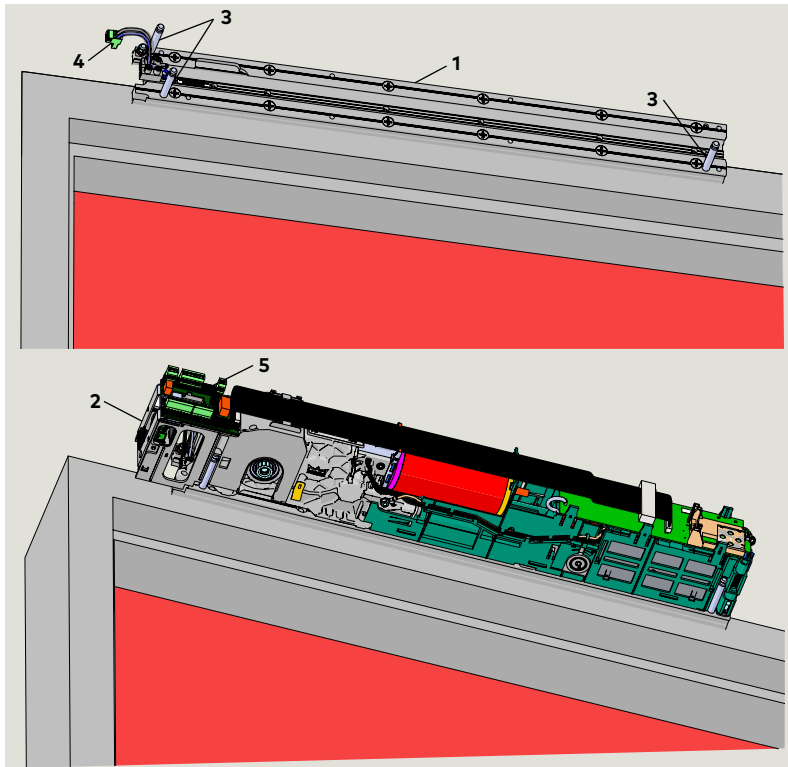

- | | | | | | |
|---|---------------------|---|--------------|---|--------------------------------------|
| 1 | Mounting plate | 4 | 115 Vac plug | 5 | Accessory wiring terminal connectors |
| 2 | ED100 operator | | | | |
| 3 | Guide pin | | | | |
| 4 | 115 Vac plug | | | | |
| 6 | 115 Vac socket | | | | |
| 7 | Power off/on switch | | | | |

Fig. 8.8.2 115Vac plug and socket


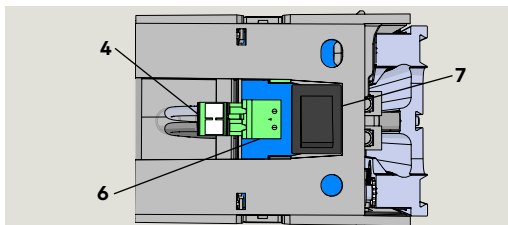


Fig. 8.8.3 Terminal connectors

- 11 Connectors
12 Jumpers

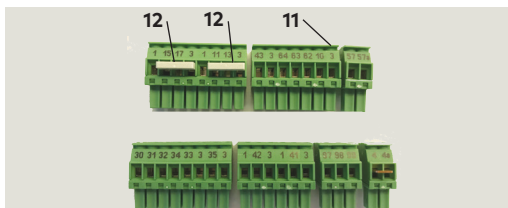

8.8.1 Install operator onto mounting plate.

CAUTION

Protective film strip removal.

Insure two protective film strips have been removed from operator heat conductive pads.

1. Slide ED100LE operator over the three mounting plate guide pins and onto mounting plate.
 - Guide 115 Vac plug (4) into housing adjacent to socket (6).
2. Thread the eight captive M6 SHCS into their mounting plate holes using 5 mm hex T-handle.
3. Tighten the eight M6 SHCS.

8.8.2 Insert 115 Vac plug into socket.

1. Insert 115 Vac plug from mounting plate 115 Vac terminal block into socket (Fig. 8.8.2).

8.8.3 Full width cover option.

CAUTION

Program switch wiring.

Reference Appendix A for program switch wiring terminal connections.

8.8.4 Connect accessory wiring.

1. Use applicable terminal connectors (Fig. 8.8.3) to terminate accessory wiring.
2. Use diagram in Chapter 4 to locate connector to its socket.

CAUTION

Safety sensor jumpers.

Jumpers (Fig. 8.8.3) must be in place on safety sensor connectors.

- Reference Chapter 4.

9 Push arm installation

9.1 Push arm installation templates

NOTICE


Reference Chapter 7 – ED100LE installation templates.

NOTICE

Double door push arm installation.
Repeat steps in Chapter 9 for each push arm installation.

- 1 Standard push arm
- 2 Deep push arm


Fig. 9.1.1 Push arm assemblies

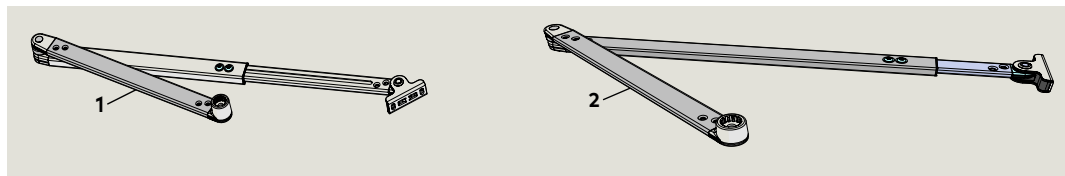

9.2 Push arm installation

- 1 Splined drive arm
- 2 Socket
- 4 Adjustment arm 11 1/4" [285]
- 5 Adjustment arm tube 12 1/4" [311]
- 6 Shoe
- 7 M6 x 10 mm flanged button head screw
- 8 Ball head
- 11 Shoe screw cover
- 12 M8 x ___ SHCS
- 13 Cap

Fig. 9.2.1 Splined push arm assembly, 8 75" [225] DC4677-01X

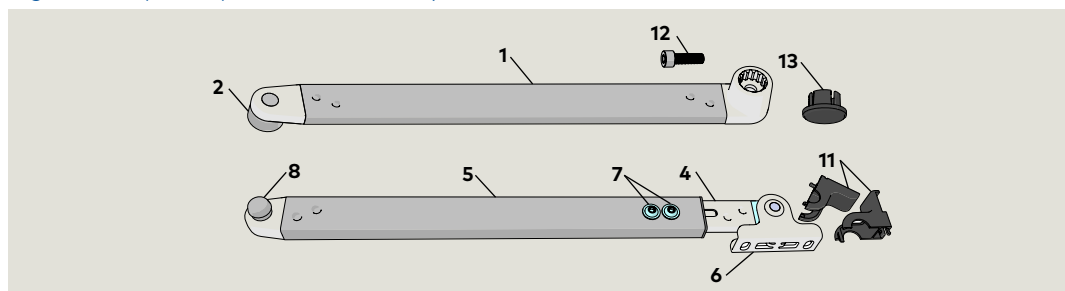

- 1 Splined drive arm
- 2 Socket
- 6 Shoe
- 7 M6 x 10 mm flanged button head screw
- 8 Ball head
- 9 Adjustment arm, 17 3/4" [450]
- 10 Adjustment arm tube, 17 3/4" [450]
- 11 Shoe screw cover
- 12 M8 x ___ SHCS
- 13 Cap

Fig. 9.2.2 Splined push arm assembly, 19 11/16" [500] DC4677-02X

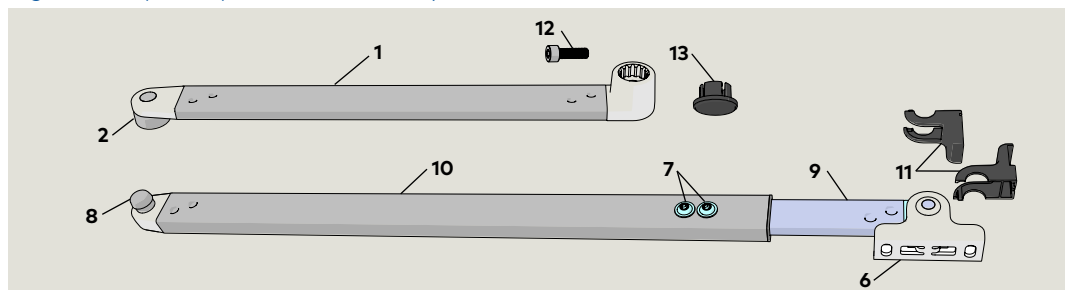


Fig. 9.2.3 Drive arm

- 1 Drive arm
- 2 Socket
- 3 Arm axle sleeve



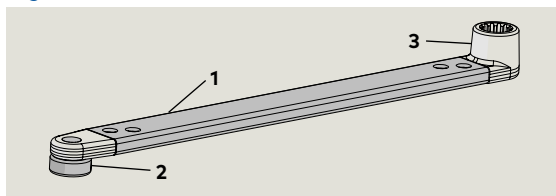


Fig. 9.2.4 Drive arm extension installation

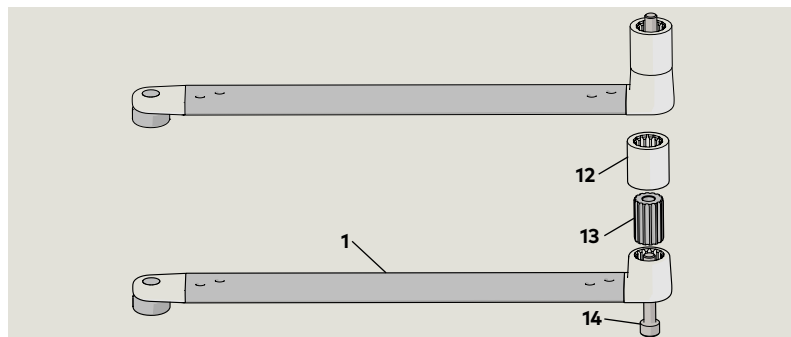


- 1 Drive arm
- 12 Axle extension sleeve
- 13 Axle extension
- 14 M8 x ___ SHCS

Fig. 9.2.5 Push arm assemblies for installation

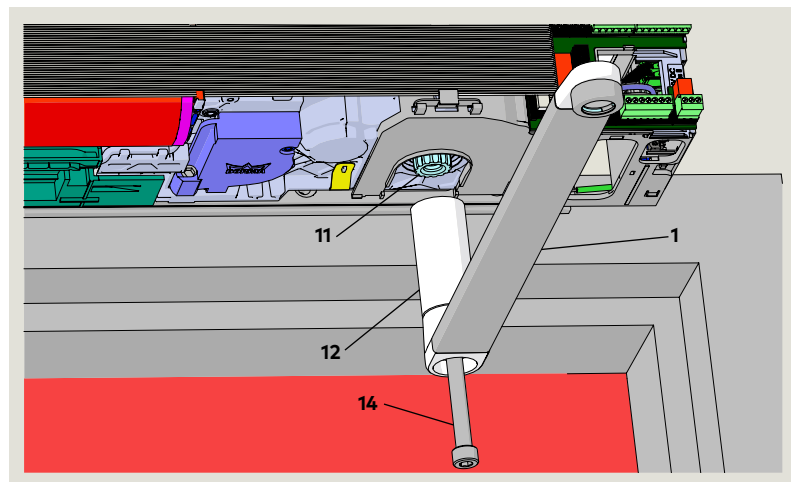

- 1 Drive arm
- 11 Spindle
- 12 Axle extension sleeve
- 14 M8 x ___ SHCS

Fig. 9.2.6 Arm assemblies attached to door and ED100LE

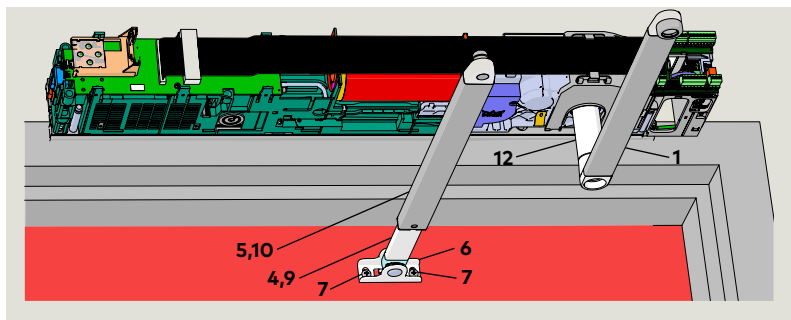

- 1 Drive arm
- 4 Adjustment arm 11 1/4" [285]
- 5 Adjustment arm tube 12 1/4" [311]
- 6 Shoe
- 7 Fastener
- 9 Adjustment arm, 17 3/4" [450]
- 10 Adjustment arm tube, 17 3/4" [450]
- 12 Axle extension sleeve

9.2.1 Attach drive arm to operator.

CAUTION

Door must be fully closed!



WARNING

Use caution when working in proximity of door and push arm!.

CAUTION

ED operator axle zero position.

In order to mount the drive arm in the correct position, the axle must be brought to the zero position.

1. Set ED100LE operator spring preload to approximately ten clockwise rotations.
 - Axle rotates to the zero position.



TIPS AND RECOMMENDATIONS

Reference Para. Chapter 12, Set operator spring tension.

2. Insert axle extension into drive arm.
 - Reference Chapter 7 for installation templates.
3. Move arm to ED100LE, inserting arm into axle extension sleeve at a 90° angle to operator (Fig. 9.2.5).
4. Insert M8 SHCS through drive arm and axle extension. Thread SHCS into ED100LE spindle and tighten.

CAUTION

Use torque wrench with hex key socket to tighten SHCS to 26 ft-lb [35.3 Nm]

9.2.2 Drill two holes in door for adjustment arm shoe.

Installation templates (Chapter 7) document location of shoe on door.

1. Drill two holes in door for adjustment arm shoe.
 - Fastener type based on door material.



TIPS AND RECOMMENDATIONS

Reference Chapter 2 for arm fasteners.

9.2.3 Secure adjustment arm assembly to door.

1. Fasten adjustment arm assembly to door (Fig. 9.2.6).

11 Shoe screw cover

Fig.9.2.7 Shoe fastener covers






Fig.9.2.8 Arm assemblies attached to door, ED100LE

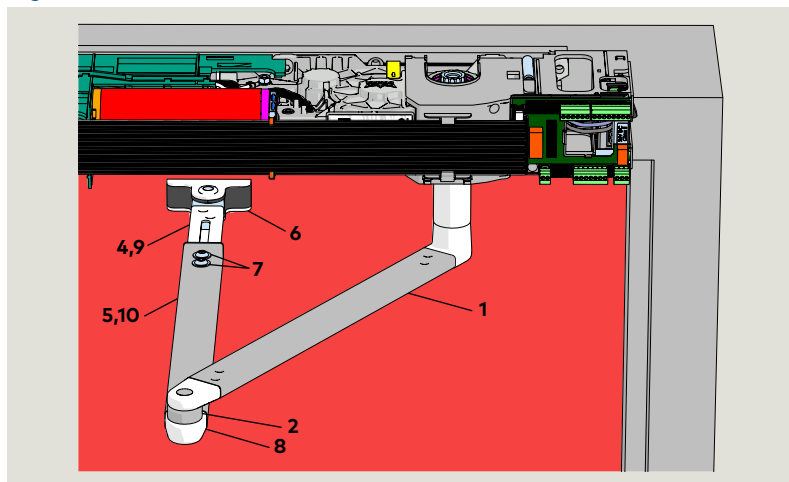


- | | | |
|------------------|----------------------|-------------------|
| 1 Drive Arm | 5 Adjustment arm | button head screw |
| 2 Socket | tube 12 1/4" [311] | 8 Ball head |
| 4 Adjustment arm | 6 Shoe | 9 Adjustment arm, |
| 11 1/4" [285] | 7 M6 x 10 mm flanged | 17 3/4" [450] |

Fig. 9.2.9 Drive arm, adjustment arm connection

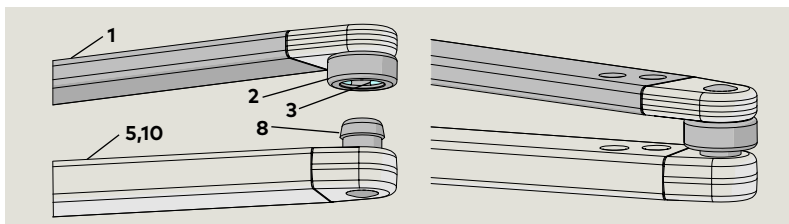

- | | | |
|-------------|---------------------|-------------|
| 1 Drive arm | 5 Adjustment arm | 8 Ball head |
| 2 Socket | tube 12 1/4" [311] | |
| 3 Spring | 10 Adjustment arm | |
| | tube, 17 3/4" [450] | |

Fig. 9.2.10 Adjustment arm at 90° angle to door

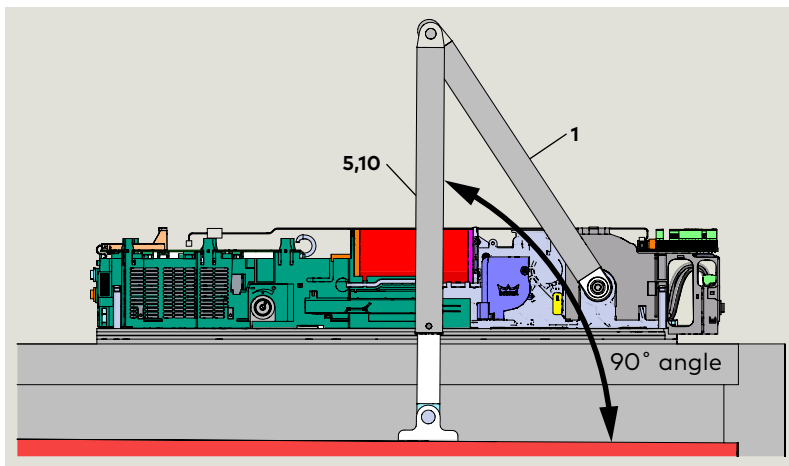

- | | | |
|-------------|--------------------|---------------------|
| 1 Drive Arm | 5 Adjustment arm | 10 Adjustment arm |
| | tube 12 1/4" [311] | tube, 17 3/4" [450] |


9.2.4 Install shoe fastener covers.

1. Install two shoe fastener covers.

9.2.5 Connect adjustment arm to drive arm.

1. Loosen the two adjustment M6 x 10 mm flanged button head screws.

Fig. 9.2.11 Adjustment arm M6 x 10 screws

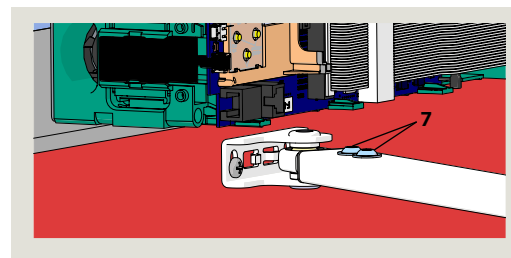

- 7 M6 x 10 mm flanged button head screw
2. Using square, position adjustment arm assembly at 90° angle to door (Fig. 9.2.10).
3. Rotate drive arm and adjust length of adjustment arm until drive arm ball head (8) is aligned with adjustment arm socket (2).

CAUTION

Maintain adjustment arm assembly at a 90° angle to door (Fig. 9.2.10).

4. Insert adjustment arm ball head (8) into drive arm socket (2).
 - Spring in socket will retain ball head in socket.
5. Secure adjustment arm position by tightening the two M6 x 10 mm flanged button head screws.

CAUTION

Recheck that adjustment arm is at 90° angle to door.

10 Pull arm installation

10.1 Pull arm installation

NOTICE

Reference Chapter 7 – ED100LE installation templates.

NOTICE

Double door pull arm installation.
Double door pull as a push installation.
Repeat steps in Chapter 10 for each pull arm installation.

10.2 Pull arm assemblies

Fig. 10.2.1 Arm with CPD lever and track assembly, LH


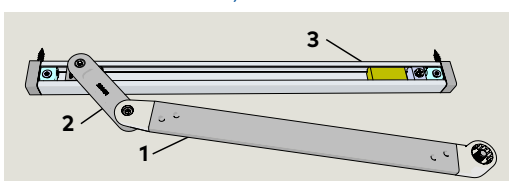


Fig. 10.2.2 Arm with CPD lever and track assembly, RH

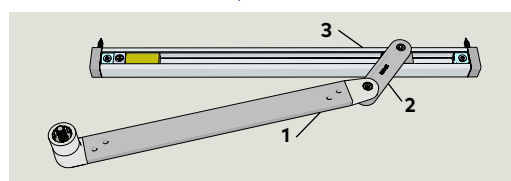


- 1 Drive arm
- 2 CPD
- 3 Track

10.3 Pull arm hardware


Fig. 10.3.1 Pull arm assembly HK4709-12X

- 1 Track
- 2 End cap
- 3 Fixing piece
- 3.1 M5 x 15 Phillips FHS
- 4 Pull arm
- 5 20 mm axle extension
- 5.1 Splined
- 6 CPD lever
- 6.1 M6 x 10 SHCS
- 7 Slotted spring pin
- 8 Arm cap
- 9 Slide shoe
- 10 Pivot pin
- 11 Retaining ring
- 12 Bumper
- 13 M8 x 1.25 x 40 SHCS
- 14 Wood screws
- 15 Machine screws
- 16 Bumper stop
- 17 M5 x 13 FHMS cross recessed

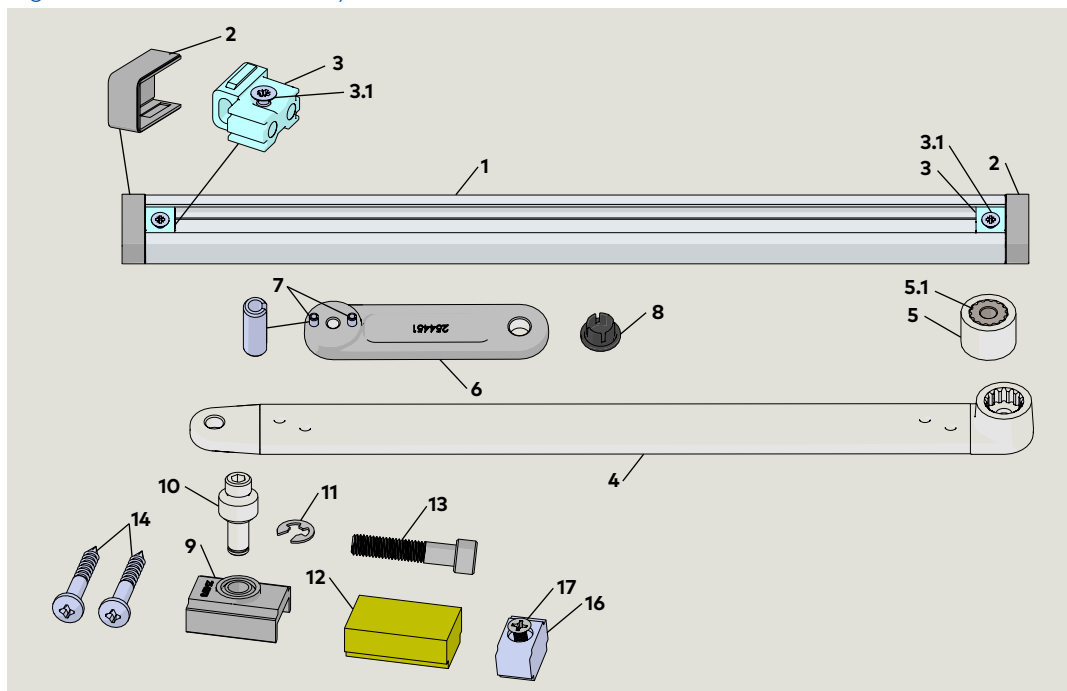


10.4 Install hardware into track

Fig. 10.4.1 RH track assembly

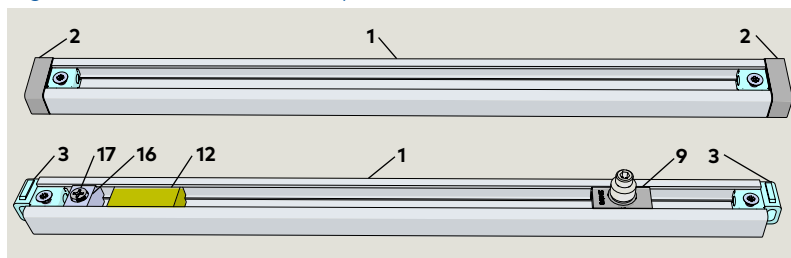

- | | | |
|----------------|--------------|-----------------------------------|
| 1 Track | 9 Slide shoe | 16 Bumper stop |
| 3 Fixing piece | 12 Bumper | 17 M5 x 13 FHMS
cross recessed |

Fig. 10.4.2 LH track assembly

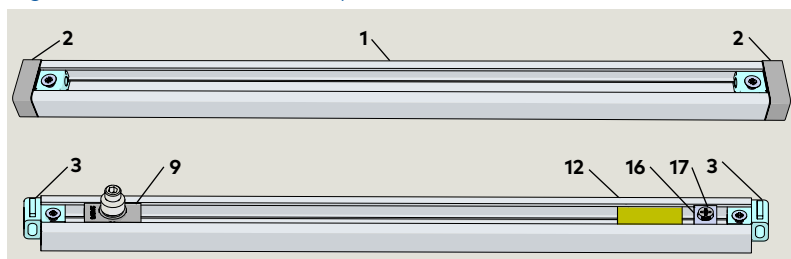


- | | | |
|----------------|--------------|-----------------------------------|
| 1 Track | 9 Slide shoe | 16 Bumper stop |
| 3 Fixing piece | 12 Bumper | 17 M5 x 13 FHMS
cross recessed |

10.5 Assemble slide shoe

- | |
|-------------------|
| 8 Slide shoe |
| 9 1/2" pivot pin |
| 10 1" Pivot pin |
| 11 Retaining ring |

Fig. 10.5.1 Slide shoe and pivot pin

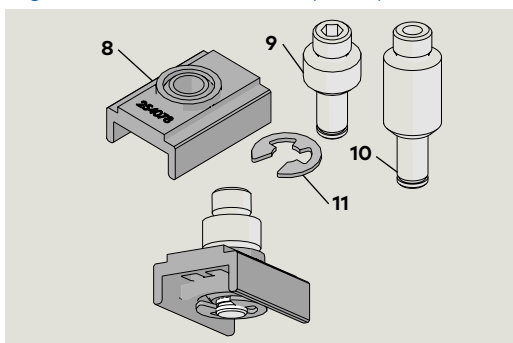

10.4.1 Assemble track.

CAUTION

Assemble track hardware based on RH or LH installation.


- Remove both end caps (2) and one fixing piece (3) from track.
- Slide bumper stop (16), bumper (12) and slide shoe assembly (9) into track.
 - Do not tighten bumper stop M5 screw (17).
- Secure fixing piece to end of track with M5 x 15 screw (3.1).
 - Use No. 2 Phillips, do not over-tighten.

10.5.1 Assemble slide shoe.

- Insert pivot pin into slide shoe.
- Install spring clip into pivot pin slot.


10.6 Assemble drive arm and CPD lever

Fig. 10.6.1 Slotted spring pin

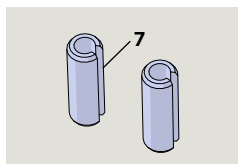

- 6.1 M6 x 10 SHCS
- 7 Slotted spring pin

Fig. 10.6.2 M6 x 10 SHCS for CPD

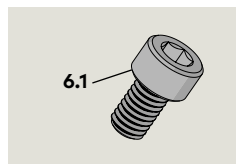


10.6.1 Assemble drive arm and CPD lever assembly.

CAUTION

Assemble arm and CPD lever based on RH or LH pull or push.


1. Secure CPD lever to arm with M6 x 10 SHCS.

Fig. 10.6.3 CPD lever and slotted spring pins

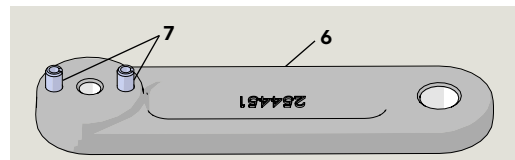


- 6 CPD lever
- 7 Slotted spring pin

Fig. 10.6.4 Arm assembly, RH pull, LH push

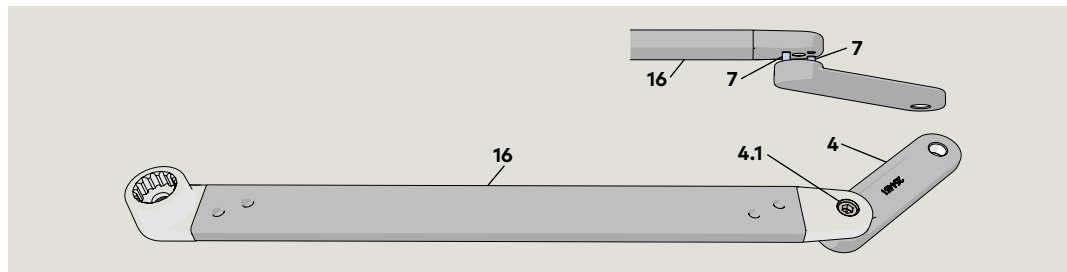

- 4 CPD lever
- 4.1 M6 x 10 SHCS
- 7 Slotted spring pin
- 16 Arm

Fig. 10.6.5 Arm assembly, LH pull, RH push

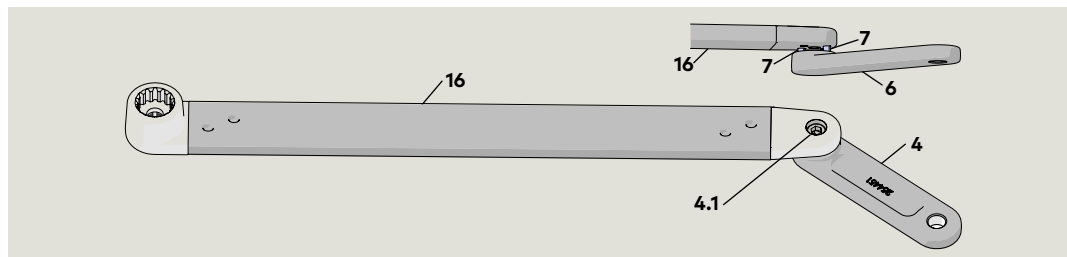

- 4 CPD lever
- 4.1 M6 x 10 SHCS
- 7 Slotted spring pin
- 16 Arm

10.7 Fasten drive arm to ED100LE operator

Fig. 10.7.1 Mount drive arm to operator at 12 degrees

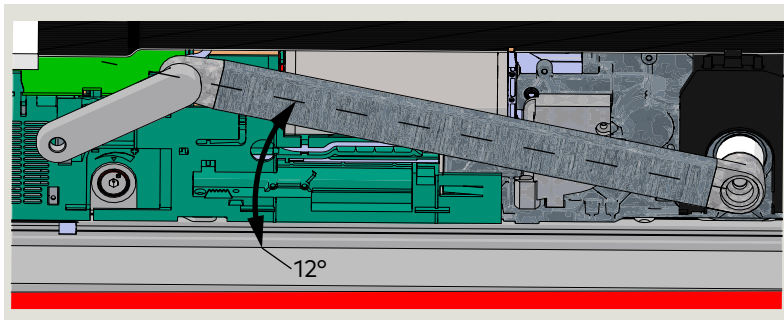


Fig. 10.7.2 Rotate drive arm 10 degrees in door opening direction

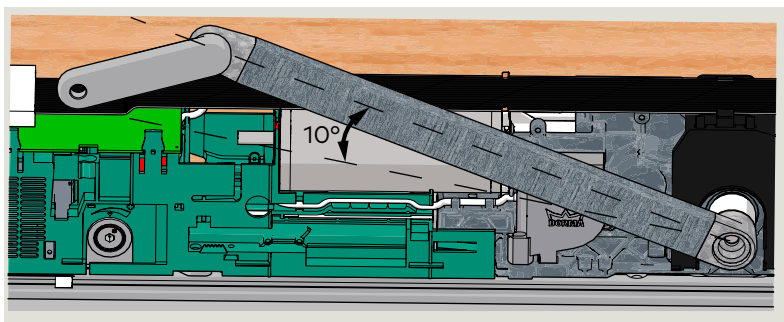


Fig. 10.7.3 Remove drive arm from ED100LE spindle


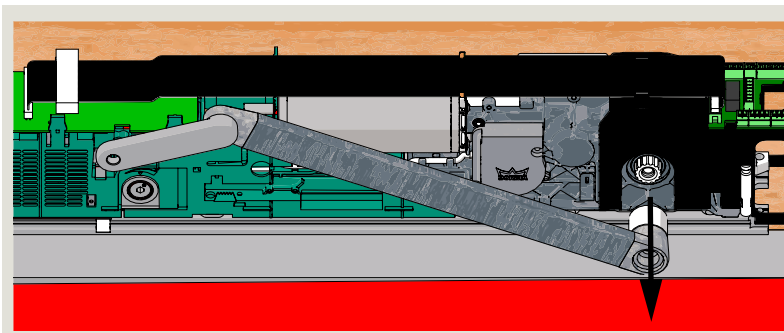


Fig. 10.7.4 Install drive arm and extension onto ED100LE spindle



- 1 M8 SHCS
- 2 Axle extension

10.7.1 Mount drive arm to operator.

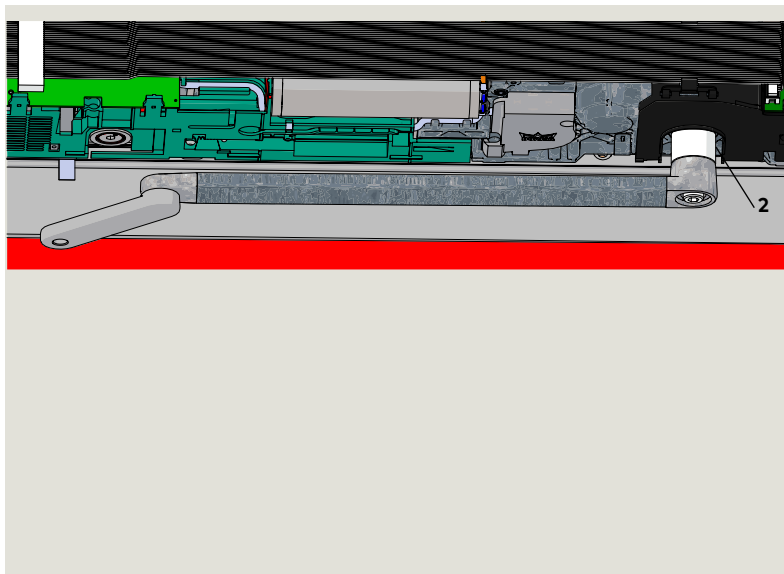

WARNING

Use caution when working in proximity of door and pull arm!.

CAUTION

ED100LE operator axle zero position.

In order to mount the drive arm in the correct position, the spindle must be brought to the zero position.

1. Set ED100LE operator spring preload to approximately ten clockwise rotations.
- Axle rotates to the zero position.



TIPS AND RECOMMENDATIONS


Reference Chapter 11, Operator spring tension.

2. Turn spring preload back to zero rotations (fully CCW).
3. Push the drive arm onto the spindle at an angle of approximately 12° to the ED100LE operator (Fig. 10.7.1).
4. Rotate drive arm/spindle approximately 10° in door's opening direction (Fig. 10.7.2).
5. Remove the drive arm from spindle (Fig. 10.7.3).
6. Position the drive arm with axle extension one tooth in door's closing direction (Fig. 10.7.4).
7. Push the axle extension onto spindle (Fig. 10.7.4).
8. Thread the M8 x ___ mm SHCS (length determined by axle extension) into spindle and tighten SHCS (Fig. 10.7.4).

CAUTION


Use torque wrench with hex key socket to tighten M8 screw to 26 ft-lb [35.3 Nm].

Fig. 10.7.5 Torque wrench, 5 mm hex key

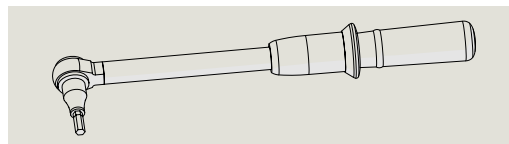


10.8 Install track assembly

Fig. 10.8.1 Track mounting holes in door

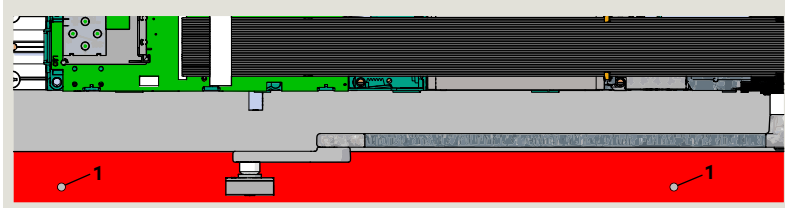


1 Track mounting holes

Fig. 10.8.2 Slide shoe installation on CPD lever

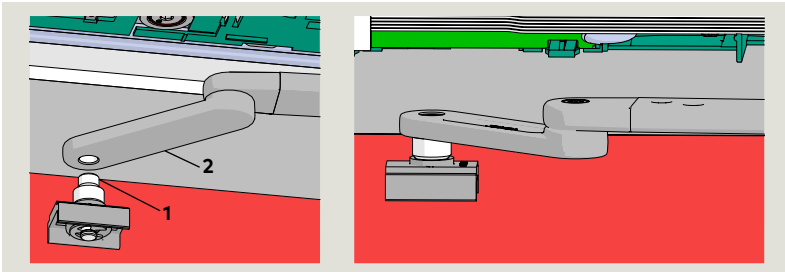

1 Pivot pin M8 SHCS 2 CPD lever

Fig. 10.8.3 Track assembly installed onto slide shoe

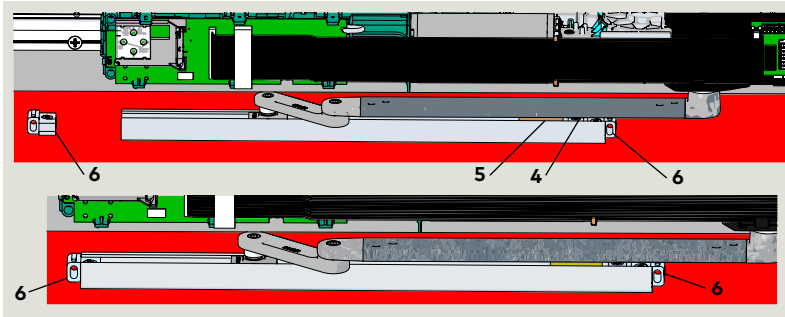

3 Shoe 5 Bumper
4 Bumper stop 6 Fixing piece

Fig. 10.8.4 Track assembly secured to door


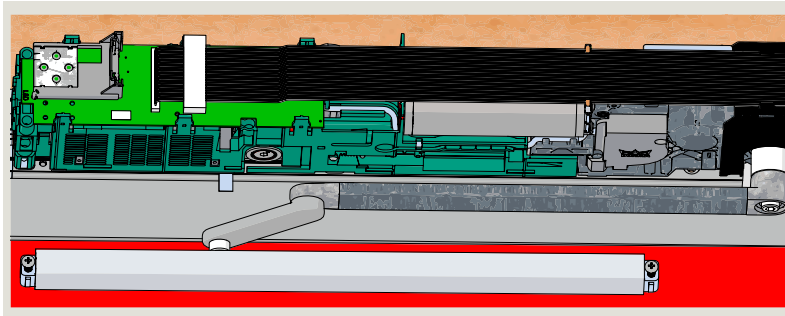


Fig. 10.8.5 End caps and spindle cap installed

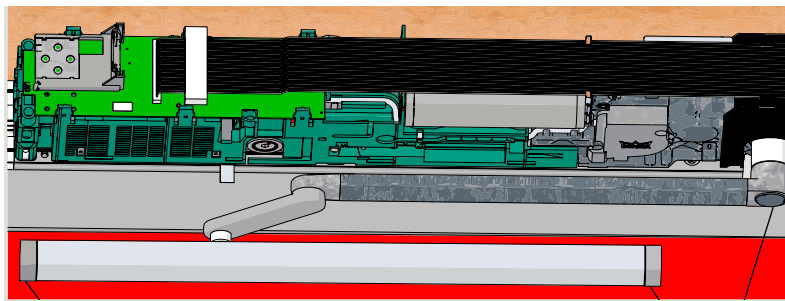

10.8.1 Locate and drill track mounting holes.

1. Using applicable template, locate and drill mounting holes for track.

10.8.2 Install slide shoe assembly onto CPD lever.

1. Thread pivot pin M8 SHCS into CPD lever mounting hole.
2. Use 6 mm hex key to tighten.

10.8.3 Slide track assembly onto slide shoe.

1. Insure track components and CPD lever are assembled based on hand of door (Para. 10.4).
2. With fixing piece removed from track on opposite end from bumper, slide track assembly onto shoe (Fig. 10.8.3).
3. Install second fixing piece onto track.

10.8.4 Secure track assembly to door.

1. Attach track fixing pieces to door using selected fasteners.
 - Insure track is level as fasteners are tightened.

10.8.5 Install end caps and spindle caps.

1. Install two end caps on track and spindle cap.

11 ED100LE Operator spring tension

11.1 Set ED100LE operator spring tension

Fig. 11.1.1 Spring tension adjustment




1 Spring tension adjustment

Fig. 11.1.2 5 mm T-handle hex key



Fig. 11.1.3 Door pressure gauge



11.1.1 Spring tension setting revolutions.

Door width					
Inches	28	32	36	42	48
mm	711	813	914	1067	1219
Spring setting revolutions					
ED100LE	10	10	14	16	18

11.1.2 Operator spring tension function.

1. Spring tension sets closing force on door.
2. Required spring tension is based on door width.

11.1.3 Spring tension adjustment.

1. Spring tension adjustment is factory set fully CCW, no spring tension.
 - Use 5 mm T-handle hex key.
 - Clockwise - increases spring tension.
 - Counterclockwise - decreases spring tension.
2. Spring must be pretensioned per Para. 11.1.1.

CAUTION

A minimum of ten spring tension revolutions are required to operate system.

11.1.4 Check door closing force.

1. Para. 11.1.1 lists approximate spring tension settings.
2. Use pressure gauge to check door closing force at 2° and adjust tension setting if necessary.



TIPS AND RECOMMENDATIONS

Reference Chapter 12, ANSI/BHMA standards for door closing forces.



TIPS AND RECOMMENDATIONS

System checks spring tension during learning cycle (Reference ED50LE/ED100LE Setup Manual).

Learning cycle will be canceled if spring is insufficiently tensioned; door will stop and display will show a rotating "0" and an "F".



12 ANSI/BHMA standards

12.1 ANSI/BHMA A156.19 Low Energy Power Operated Swinging Doors

The following table references portions of content from ANSI/BHMA A156.19. Refer to the standard, available through ANSI or BHMA for additional information. Standard material reprinted with BHMA permission.

12.1.1 Door measurements, low energy power operated door.

ED100LE Parameter				A156.19 standard		
Parameter	Function	Factory setting	Adjustment range	Para.	Requirement	
So	Opening speed	Swing door opening speed.	17% Note 1	8%/s - 27%/s 27%/s max. L.E. mode	4.2	Opening Doors shall open from closed to back check or 80°, whichever occurs first, in 3 seconds or longer as required in Table I. Total opening time to 90° shall be as in Table II. If door opens at more than 90°, it shall continue at the same rate as back check speed.
bc	Back check	Checking or slowing down of door speed before door being fully opened.	10°	5° - 40°	4.2	Back check shall not occur before 60° opening.
Sc	Closing speed	Swing door closing speed, automatic mode.	17% Note 1	8%/s - 27%/s 27%/s max. L.E. mode	4.4	Closing: Doors shall close from 90° to 10° in 3 seconds or longer as required in Table I. Doors shall close from 10° to fully closed in not less than 1.5 seconds.
dd	Hold open time	Hold open time.	5 s	5 s - 30 s	4.3	Time delay: When powered open, the door shall remain open at the fully opened position for not less than 5 seconds. Exception: when push-pull activation is used, the door shall remain at the fully opened position for not less than 3 seconds.
hS		Support for manual mode in door closed position.				
hA		Adjustment, door activation angle.			4.5	
hF		Power assist function.				
Fo	Static force in opening direction	Static force on door closing edge in opening direction.	13.5 lb f [60 N]	4.5 lb f [20 N] - 15 lb f [67 N]	4.5	Force required to prevent a stopped door from opening or closing shall not exceed 15 lb f [67 N] measured 1" [25.4] from latch edge of door at any point during opening or closing.
Fc	Static force in closing direction	Static force on door closing edge in closing direction.	13.5 lb f [60 N]	4.5 lb f [20 N] - 15 lb f [67 N]	4.5	

Note 1: Speed may be slower after learning cycle completed.

12.1.2 A156.19, Table I: Minimum opening and closing times.

"D" door width, inches [mm]	"W" door weight, pounds [kg]				
	100 [45.4]	125 [56.7]	150 [68]	175 [79.4]	200 [90.7]
30 [762]	3.0	3.0	3.0	3.0	3.5
36 [914]	3.0 s	3.5 s	3.5 s	3.0 s	3.0 s

Minimum opening time to back check or 80 degrees (whichever occurs first).
Minimum closing time from 90 degrees to latch check or 10 degrees (whichever occurs first).

12.1.3 A156.19, Table II: Total opening time to 90 degrees.

Back check at 60°	Back check at 70°	Back check at 80°
Table I plus 2 s	Table I plus 1.5 s	Table I plus 1 s

If door opens more than 90°, it shall continue at the same rate as backcheck speed.

Back check occurring at a point between positions shall use lowest setting.

12.1.4 Other door weights and widths.

Closing time $T = (D \sqrt{W}) / 188$
 D = Width of door in inches.
 W = Weight of door in pounds.
 T = Closing time to latch check in seconds.

SI (metric) units
 Closing time $T = (D \sqrt{W}) / 2260$
 D = Width of door in mm.
 W = Weight of door in kg.
 T = Closing time to latch check in seconds.

13 Install door signage, low energy door

13.1 Install door signage

13.1.1 Install door signage.

Install applicable door signage as outlined in Chapter 5, ED100LE door signage.

14 Cover, end caps and spindle caps

14.1 Cover end cap and spindle installation

14.1.1 Cover and end cap installation.

Cover and end caps will be installed after ED100LE operator setup is completed.

- Reference ED50LE/ED100LE Setup Manual.

15 Maintenance

15.1 Safety label, low energy swing doors

15.1.1 Low energy swinging door safety information label.

This AAADM label outlines safety checks that should be performed daily on a swinging door controlled by an ED100LE low energy operator.

15.1.2 Safety information label location.

Place label in a protected, visible location on door frame, near program switch panel if possible.

15.1.3 Annual compliance section of label.

This section of label is only completed on low energy swing doors that comply with ANSI/BHMA A156.19 standard and pass inspection by an AAADM certified dormakaba USA, Inc. technician.

15.1.4 Additional annual compliance inspection labels.

Place additional labels (over annual compliance inspection section of safety information label.

Fig. 15.1.1 Safety information label


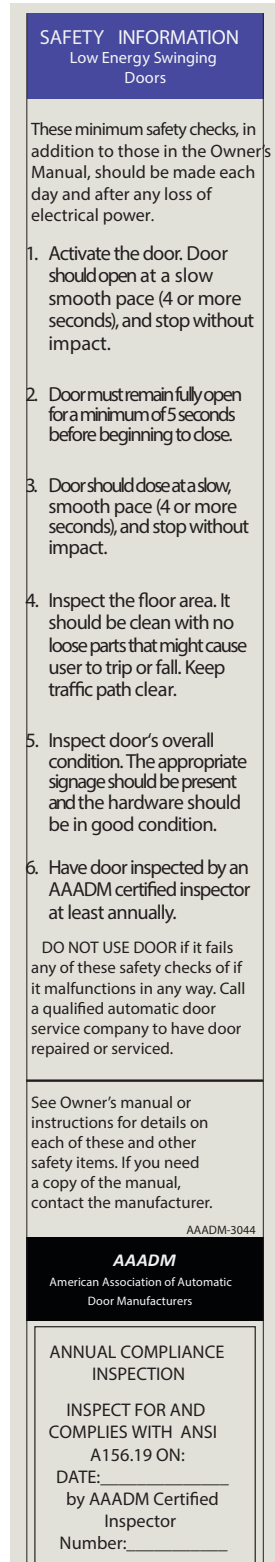



Fig. 15.1.2 Annual Compliance Inspection label

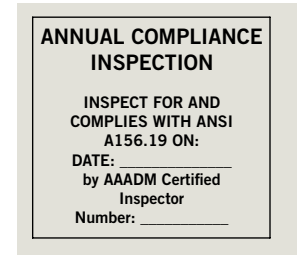

15.2 Arm fasteners – torque requirements

Fig. 15.2.1 Arm M8 SHCS cap

8 Cap

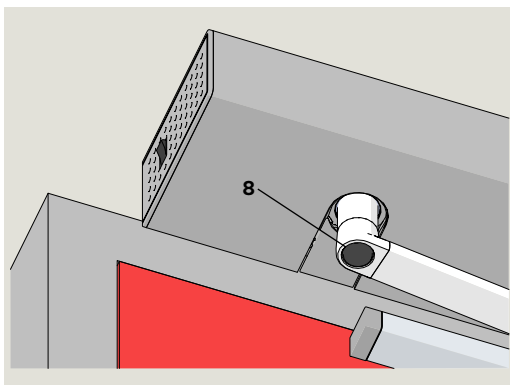

15.2.1 Check drive arm M8 SHCS torque.


1. Set program switch to CLOSE.
2. Remove cap over M8 SHCS.
3. Check torque.
4. Replace cap.

CAUTION

Using torque wrench with 6 mm hex key socket, check M8 SHCS torque: 26 ft-lb [35.3 Nm].

Fig. 15.2.2 M8 SHCS

5 M8 x__ SHCS

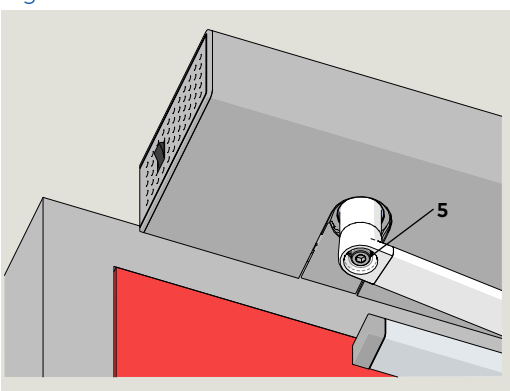

15.2.2 Check pivot pin M8 socket head torque.


1. Check torque.

CAUTION

Use torque wrench with hex key socket. M8 screw torque: 5.9 - 7.4 ft-lb [8 - 10 Nm].

Fig. 15.2.3 Pivot pin M8 socket head


3 Pivot pin M8 socket head

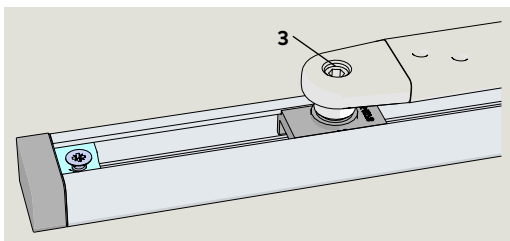

16 Companion door installation


16.1 ED100LE Companion installation templates

Fig. 16.1.1 ED100LE Companion pull

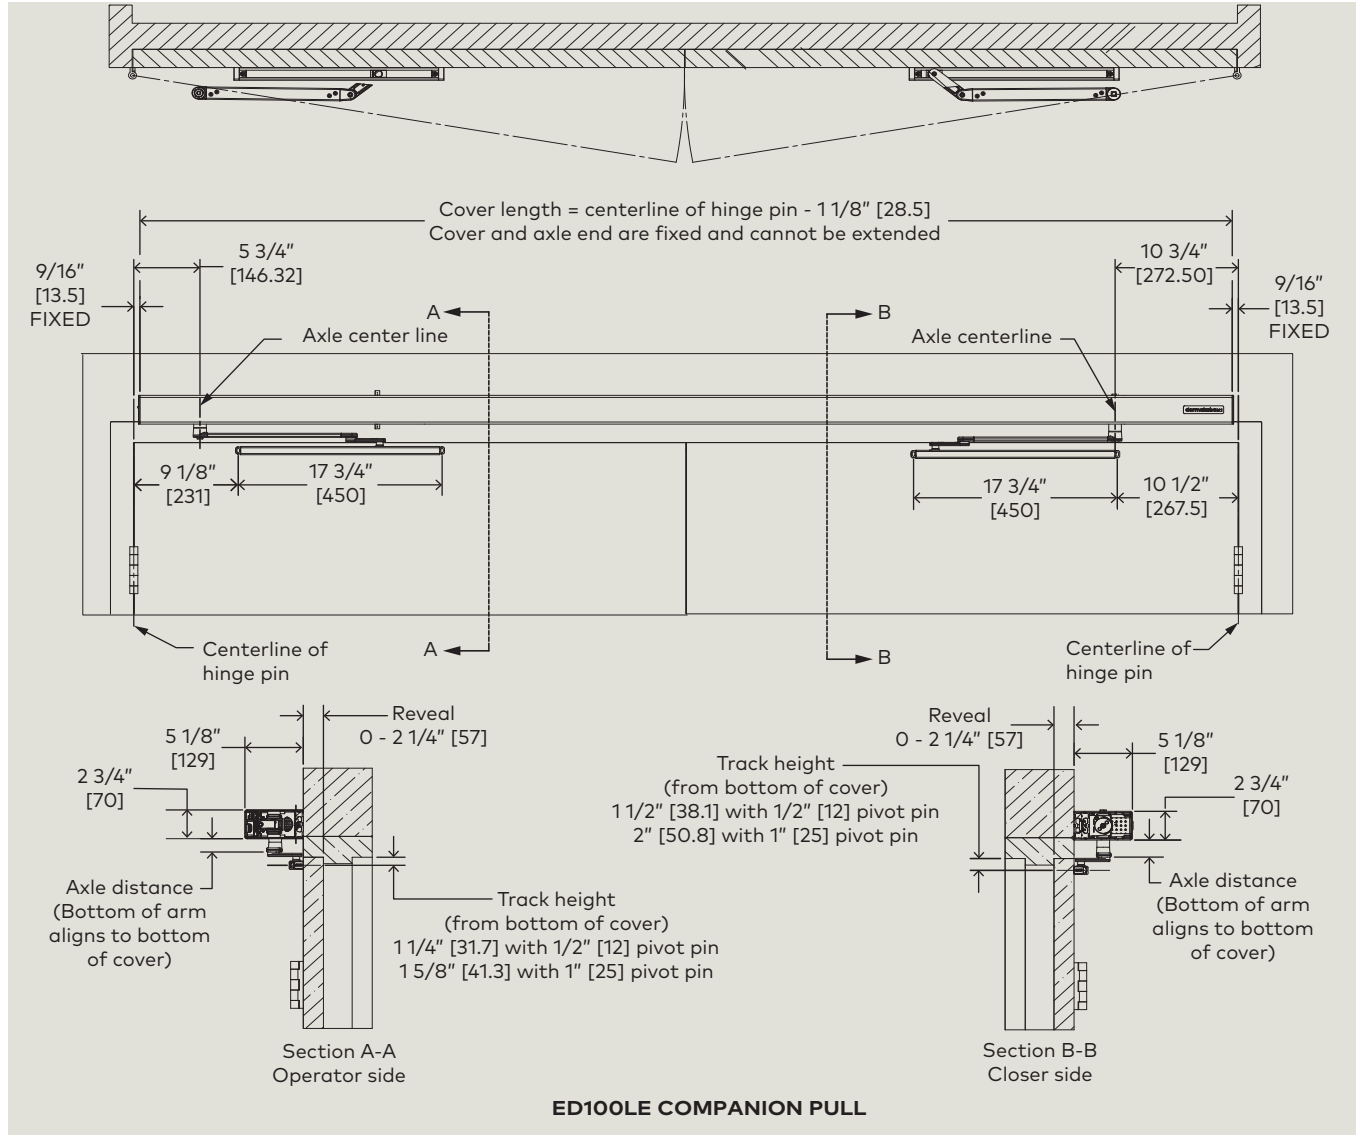

Axle extension	Pull axle distance
13/16" [20]	1 5/8" [41]
2 3/8" [60]	3 1/8" [81]

Fig. 16.1.2 ED100LE Companion push

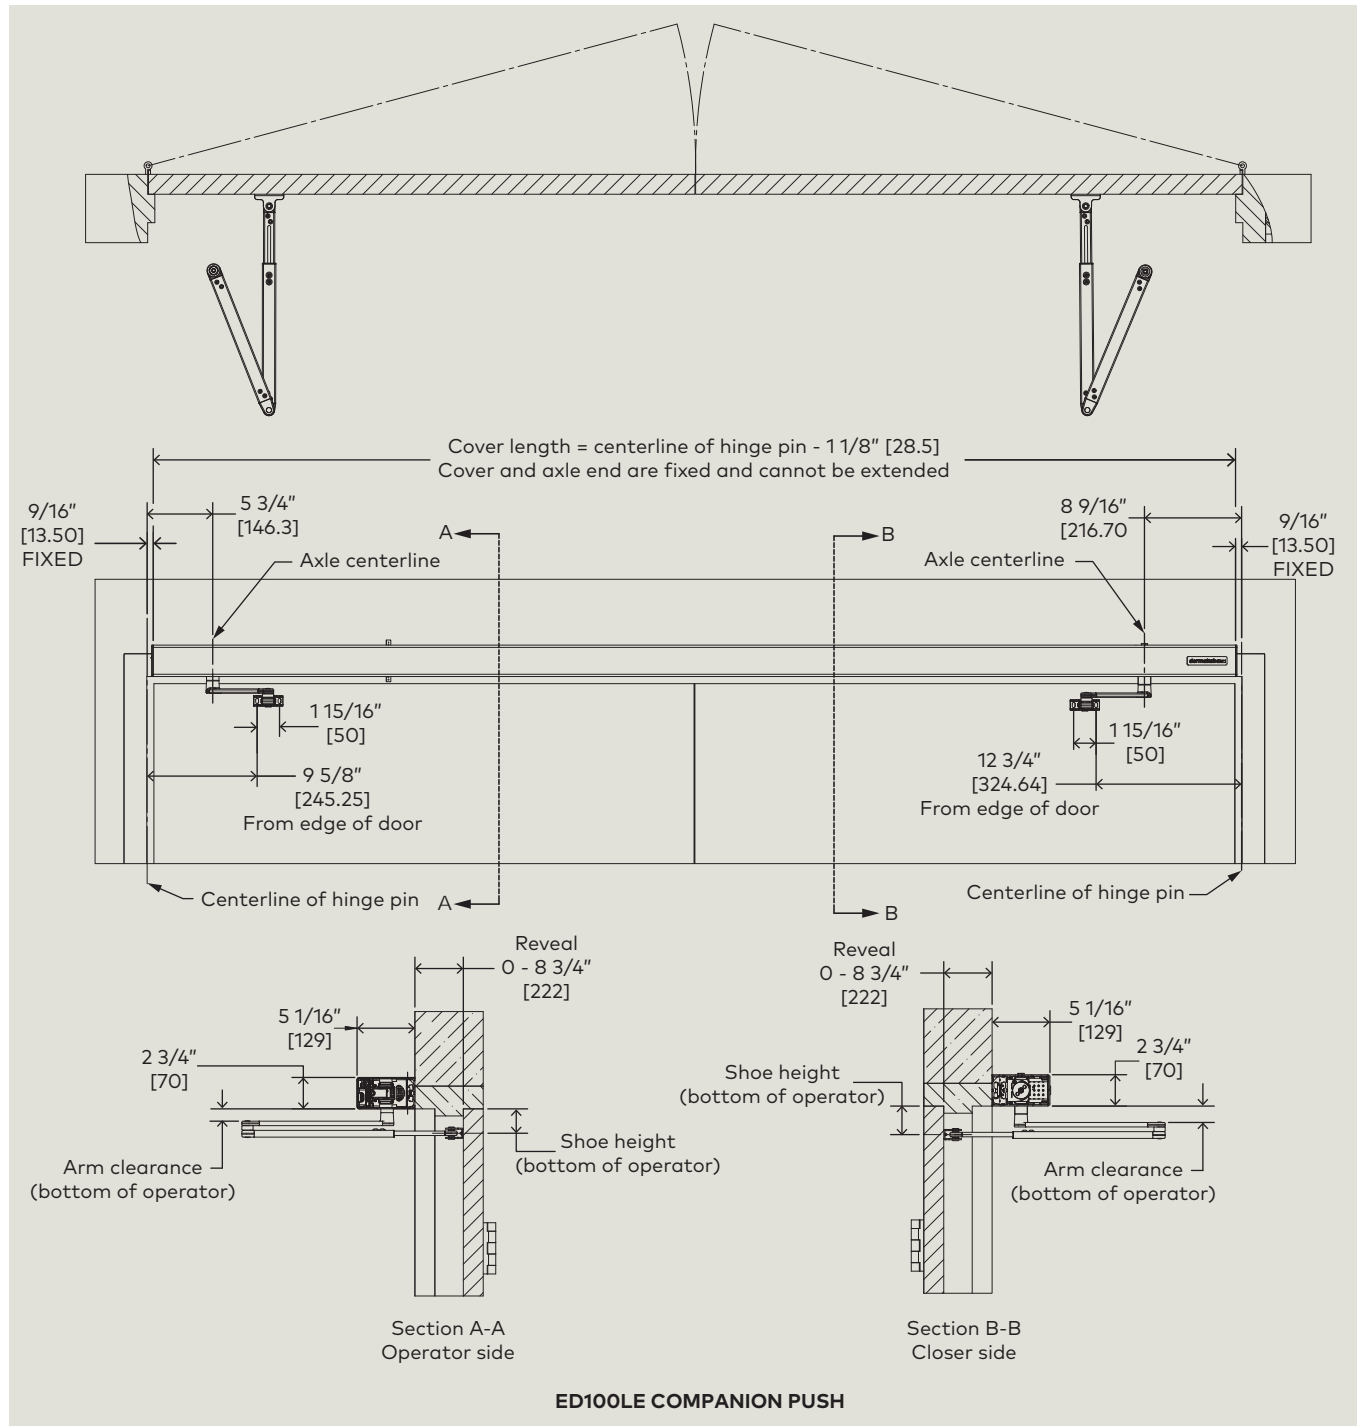

Axle extension	Push shoe height	Push arm clearance
13/16" [20]	2 1/2" [63.5]	1 3/8" [36]
2 3/8" [60]	4" [103]	3" [76]

16.2 8616 closer and adaptor

Fig. 16.2.1 8616 closer views

- 1 Latch speed adjustment (L)
- 2 Sweep (closing speed) adjustment (S)
- 3 Delayed action
- 4 Backcheck positioning
- 5 Backcheck (BC)
- 6 Spring force
- 8 Pinion screw

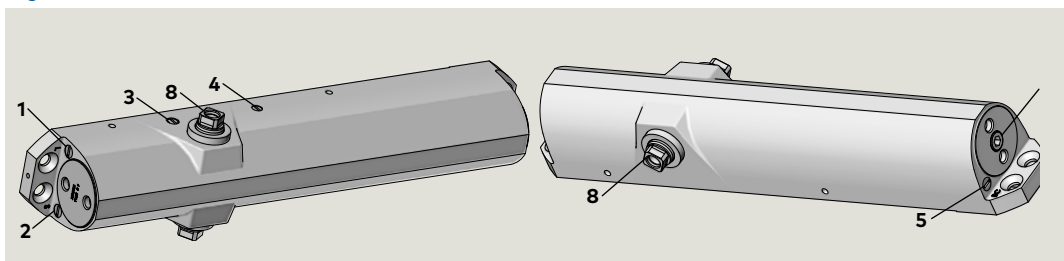


Fig. 16.2.2 Companion screw kit HK4607-001

- 4 1/4-20 x5/8" FHCS DF0399-00G


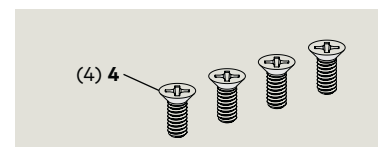


Fig. 16.2.3 Companion closer adaptor HC3468-070

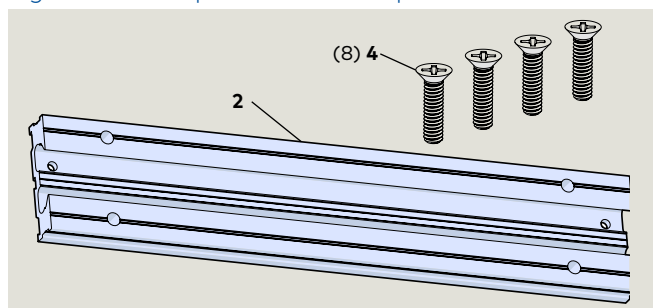

- 2 Companion closer adaptor DC3468-070
- 4 1/4-20 x 1" FHMS Phillips undercut DF3101-01Z

16.2.1 Companion door 8616 Door closer data

16.2.1.1 8616 adjustments.

Adjustments				
		Spring force adjustment	Adjustable	From size 1 to size 6
1	L	Latch speed	Adjustable	
2	S	Sweep speed	Adjustable	Door should close in 3 to 6 seconds
5	BC	Backcheck	Off, On	Must be turned ON for parallel arm applications. Backcheck position will advance approximately 15°.
4		Backcheck positioning	Adjustable	Adjustable hydraulic backcheck will take effect at approximately 70°.
3	DEL	Delayed action	Adjustable	Delays door closing to allow unobstructed passage through the opening.

16.2.1.2 8616 spring size selection, regular and top jamb closers.

Closer size	Spring Full turns	Door width maximum size		Maximum door weight
		Interior	Exterior	
1		28"		
2	-19 CCW	34"	28"	
3	-11 CCW	38"	30"	
4	0 turns	48"	36"	
5	+5 CW	54"	42"	
6	+13 CW			

16.3 Select installation template

16.3.1 Select installation template.

1. Select installation template based on companion door configuration.
 - Reference Para. 16.1.

Fig. 16.3.1 ED100LE Companion push example




Fig. 16.3.2 ED100LE Companion pull example



16.4 Assemble ED100LE and closer backplates

Fig. 16.4.1 Backplate connect kit HK3491-001

- 1 ED100, mtg extr connector DC3491-010
- 2 M6 x 10 mm socket head w/washer DF3495-01Z
- 3 M6 x 10 mm Phillips flat head screw DF3496-01Z

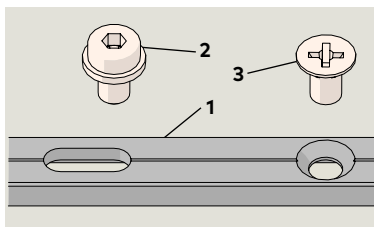


16.4.1 Remove ED100LE operator from mounting plate.

1. Reference Chapter 8, Para. 8.2.
2. Remove ED100LE operator from its mounting plate.

16.4.2 Connect ED100LE mounting plate and closer mounting plate.

1. Connect ED100LE operator mounting plate to companion mounting plate using backplate connect kit HK3491-001.
2. Insure the two mounting plates are configured based on door configuration.

Fig. 16.4.2 Backplate assembly example

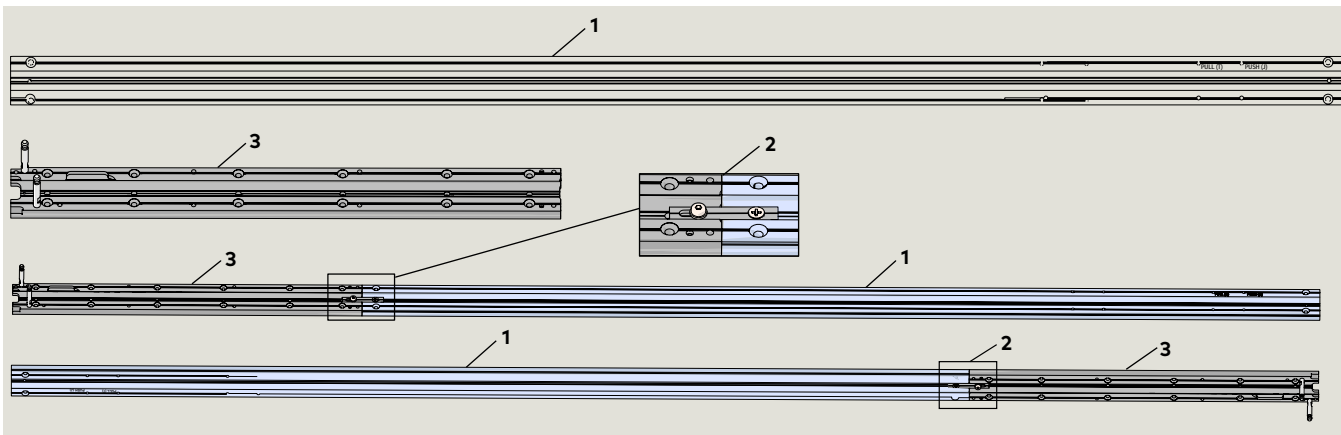

- 1 Backplate, ED operator companion HC3468-050
- 2 Backplate connect kit HK3491-00
- 3 ED100LE operator mounting plate

17 Companion door, push arm installation

17.1 Mount backplate, push arm application

Fig. 17.1.1 ED100LE Companion backplate template; LH push version


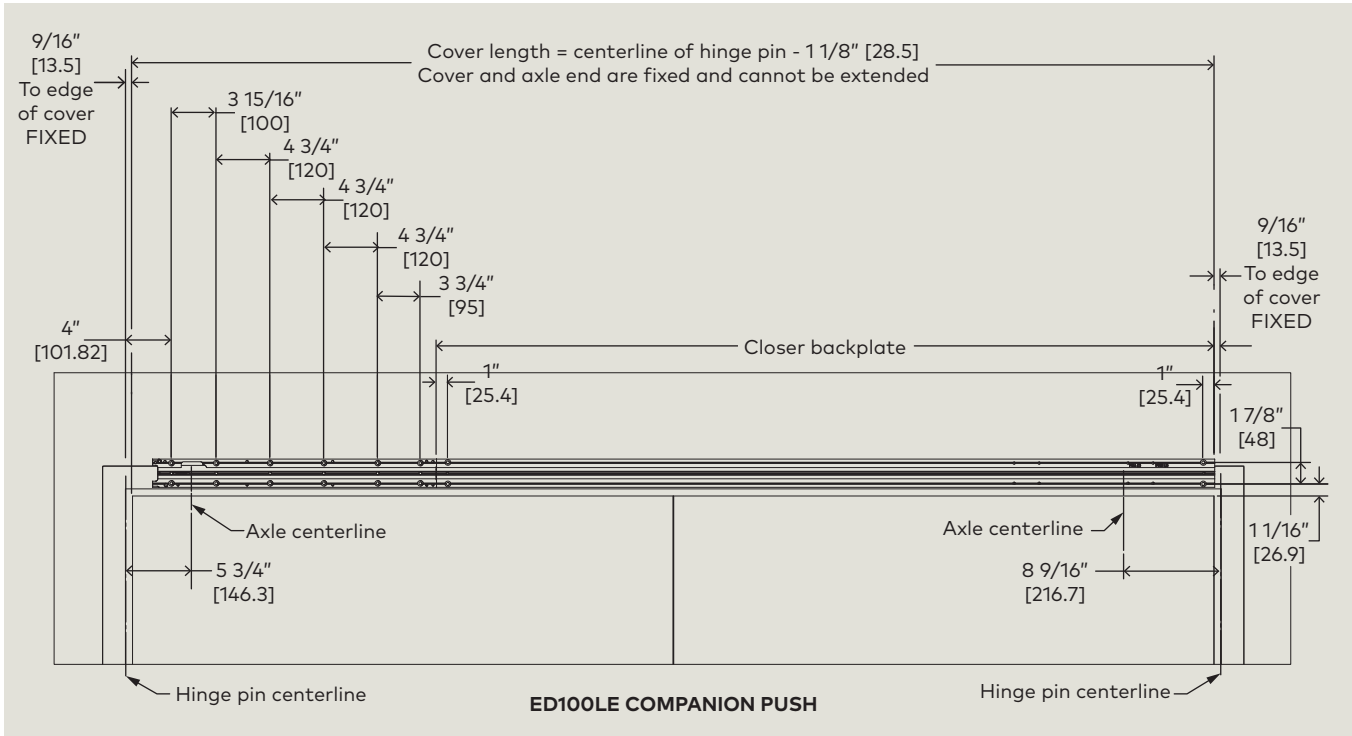


Fig. 17.1.2 Push arm backplate mounting

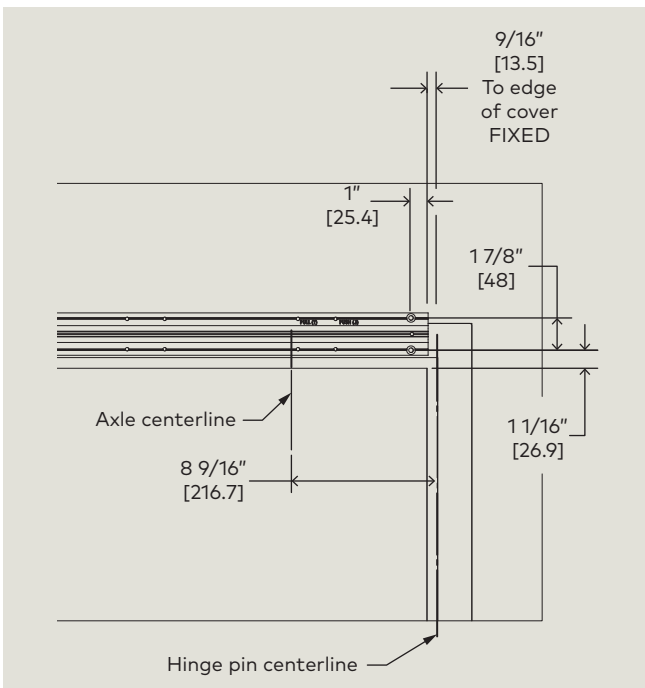

17.1.1 Install backplate, push arm application.

1. Using backplate template (Fig. 17.1.1 and 17.1.2), locate left hand and right hand backplate mounting holes on door frame/wall.

NOTICE

Template documents a LH push installation. Template must be mirrored for a RH push installation.

2. Place backplate on door frame/wall and align with the mounting hole locations in step 1.
 - Check hinge pin centerline to edge of backplate distance.
3. Check backplate for level; adjust if necessary.
4. Mark backplate mounting hole locations.
5. Remove backplate and drill holes based on fastener selected for door frame/wall material.
 - Reference Para. 2.1 for backplate mounting screw kit.
 - Use appropriate wall anchors if required.
6. Place backplate on door frame/wall and secure with fasteners (Step 6).

17.2 Install 8816 closer on backplate – push arm mounting


Fig. 17.2.1 Companion screw kit HK4607-001

- 3 #4 x 1/4-20 x 5/8"
Philips flat head
screw
DF0399-00G



Fig. 17.2.2 Companion closer adapter fasteners

- 4 1/4-20 x 1" Philips
FHMS undercut
DF3101-01Z

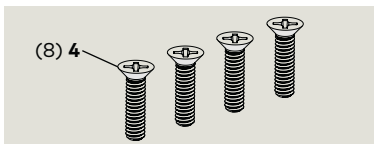

17.2.1 Install 8816 closer for push arm application.

NOTICE

Verify closer spring size prior to installation.

NOTICE

PUSH (J) mounting holes.

For push arm application, use PUSH (J) mounting holes (Fig. 17.2.3).

Fig. 17.2.3 Closer adapter and closer assembly mounting to backplate – push arm application

- 1 Backplate, ED
operator
companion
HC3468-050
2 Companion closer
adapter
HC3468-070
3 #4 x 1/4-20 x 5/8"
Philips flat head
screw
DF0399-00G
4 1/4-20 x 1" Philips
FHMS undercut
DF3101-01Z
5 Door closer, 8816
08210970



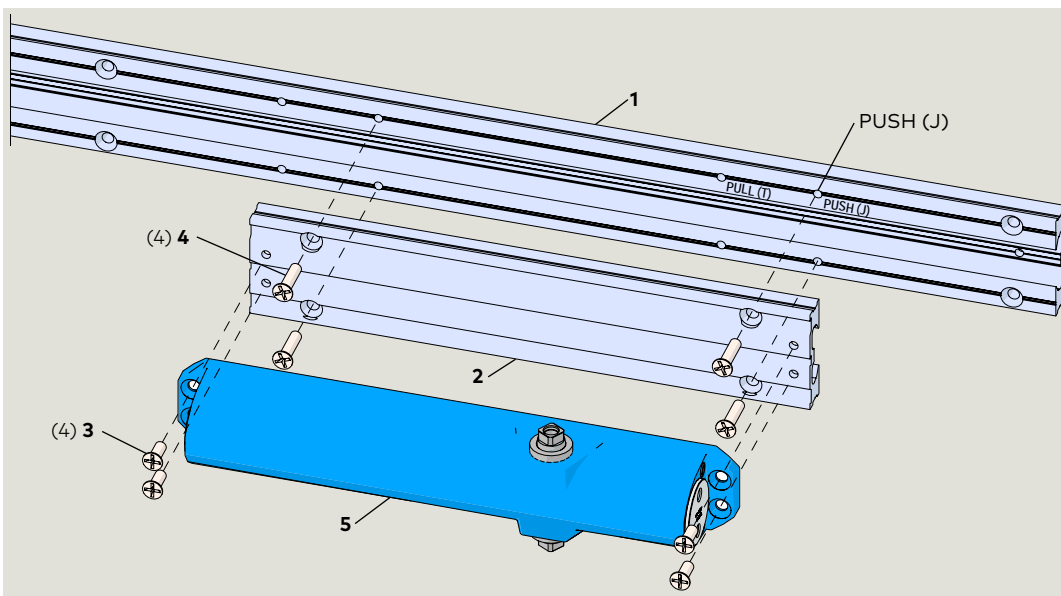


Fig. 17.2.4 Closer adapter and closer assembled to backplate

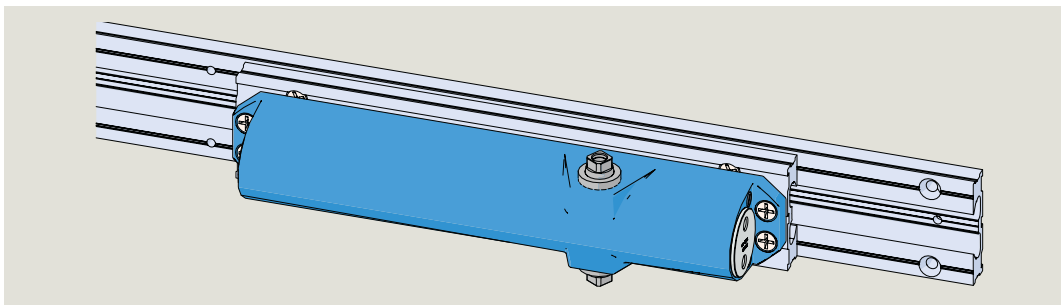

17.3 Push arm installation


Fig. 17.3.1 Drive arm installation

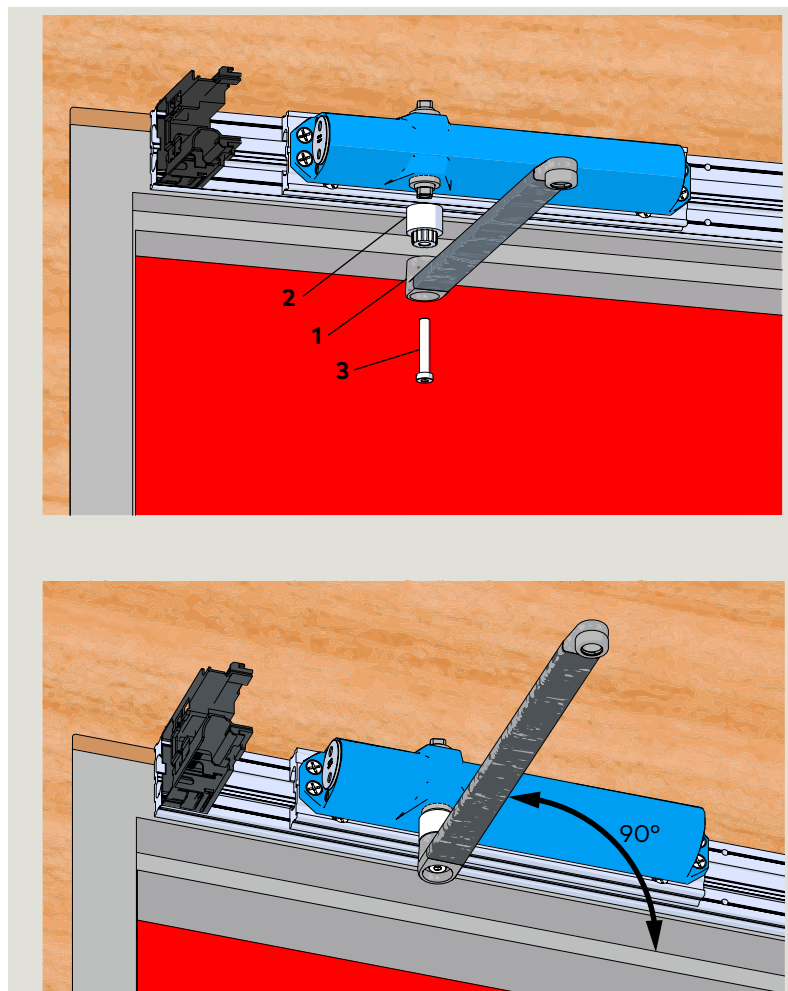

- 1 Drive arm
- 2 20 mm axle extension
- 3 20 mm bolt axle extension


- 1 20 mm axle extension, door closer, HC4680-001
- 2 60 mm axle extension, door closer, HC4680-002

Fig. 17.3.2 Drive axle extensions

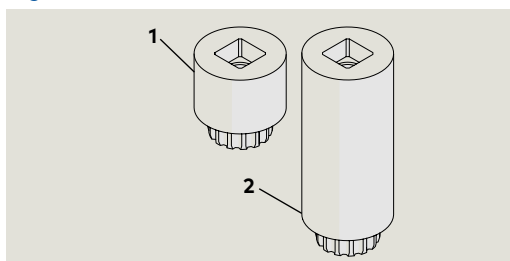

- 1 20 mm bolt, axle extension HF3465-020
- 2 60 mm bolt axle extension HF3465-040

Fig. 17.3.3 Bolt, axle extensions

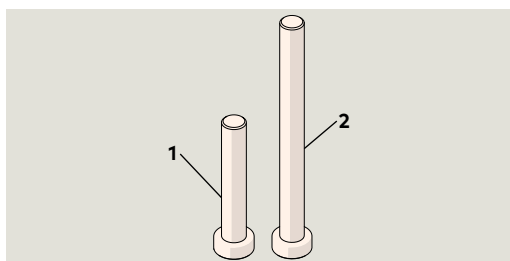

17.3.1 Push arm hardware.

- Reference Para. 9.2 for push arm hardware.

17.3.2 Attach drive arm to closer.

CAUTION

Door must be fully closed!



WARNING

Use caution when working in proximity of door and push arm!.


- Insert axle extension (Fig. 17.3.2) into drive arm.
- Move arm to 8816, inserting arm into 8816 pinion at a 90° angle.
- Insert M8 SHCS through drive arm and axle extension. Thread SHCS into 8816 pinion and tighten.

NOTICE

M8 SHCS tightening torque.


Use torque wrench (25 ft-lbs) to tighten SHCS to 17 ft-lb [23 Nm].

Fig. 17.3.4 Push arm screw kit HK2719-010

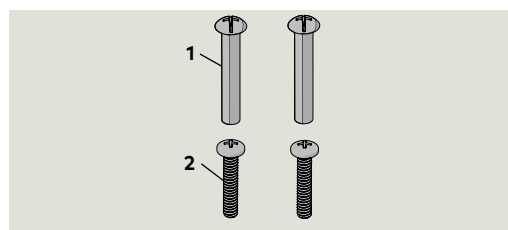


- 1 10-24 x 1 1/2" pan head Philips slotted barrel nut DF2718-01Z
- 2 10-24 x 1/2" pan head Philips screw DF3278-01Z

Fig. 17.3.5 Adjustment arm installation

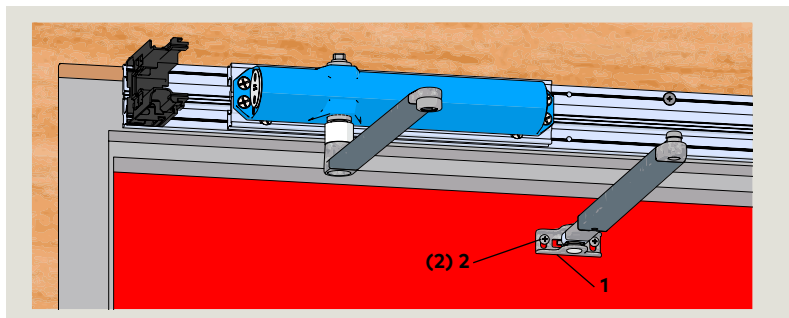

- | | | | |
|---|---------------------|---|-----------------------------------|
| 1 | Adjustment arm shoe | 2 | 10-24 x 1" pan head Philips screw |
|---|---------------------|---|-----------------------------------|

Fig. 17.3.6 Connecting drive arm to adjustment arm

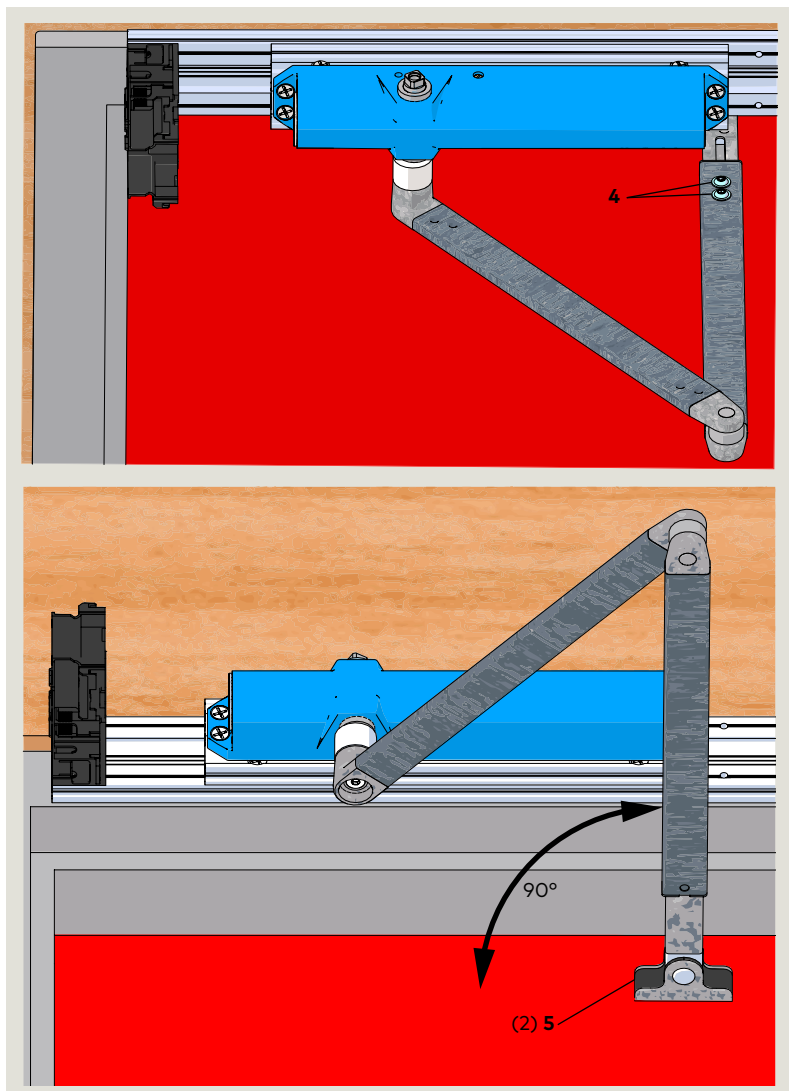

- | | | | |
|---|--------------------------------------|---|------------------|
| 4 | M6 x 10 mm flanged button head screw | 5 | Shoe screw cover |
|---|--------------------------------------|---|------------------|

17.3.3 Drill two holes in door for adjustment arm shoe fasteners.

Push arm installation template (Chapter 16) documents location of shoe on door.

1. Drill holes in door for adjustment arm shoe fasteners. Reference push arm screw kit (Fig. 17.3.4).

17.3.4 Install adjustment arm assembly on door.

1. Fasten adjustment arm assembly to door.
2. Insure arm is at installation height as shown on push arm installation template.

NOTICE

Check shoe for level.

Check adjustment arm shoe for level as fasteners are tightened.

17.3.5 Connect adjustment arm to drive arm.

1. Loosen the two adjustment M6 x 10 mm flanged button head screws..
1. Using square, position adjustment arm assembly at 90° angle to door.
2. Adjust length of adjustment arm until drive arm ball head is aligned with adjustment arm socket.

CAUTION

Maintain adjustment arm assembly at a 90° angle to door.

3. Insert adjustment arm ball head into drive arm socket.
4. Secure adjustment arm position by tightening the two M6 x 10 mm flanged button head screws.

CAUTION

Recheck that adjustment arm is at 90° angle to door.

17.3.6 Install shoe screw covers.

1. Install shoe screw covers.

17.3.7 Door closer adjustments.

Reference Chapter 19.

18 Companion door, pull arm installation

18.1 Mount backplate, pull arm application

Fig. 18.1.1 ED100LE Companion backplate template; RH pull version


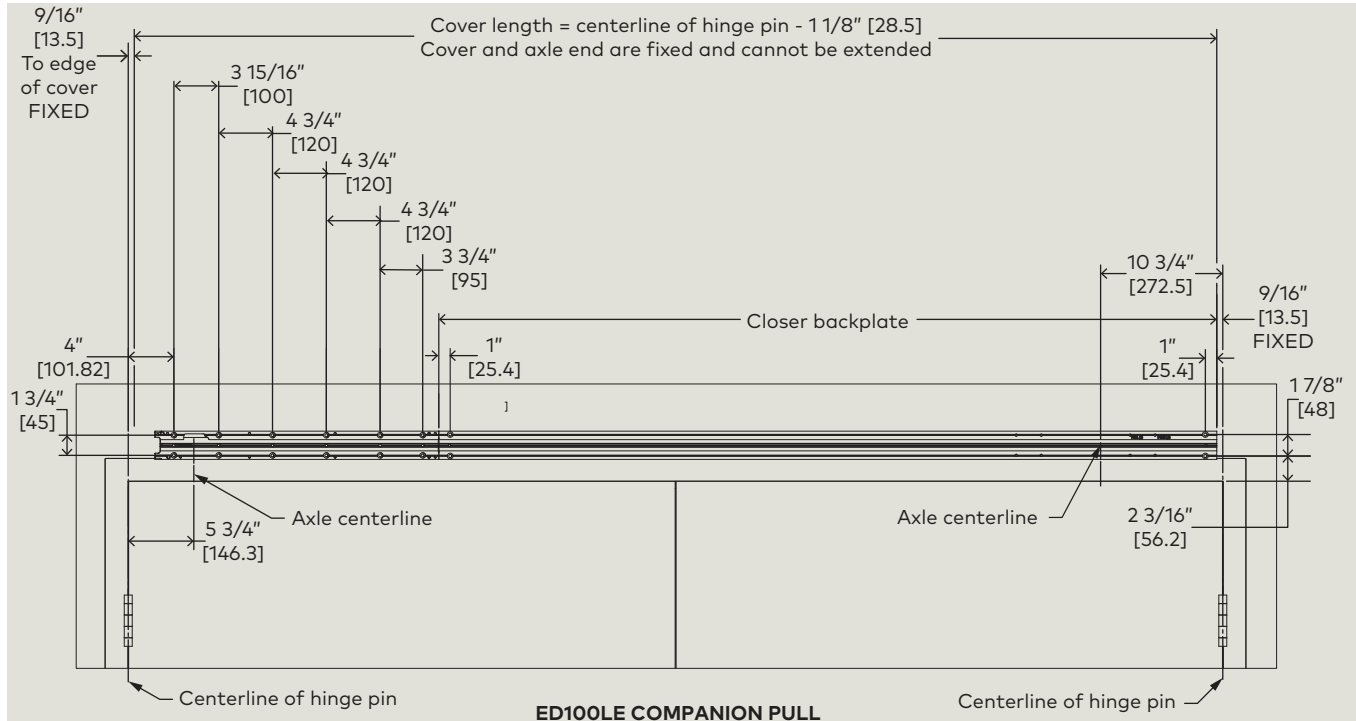


Fig. 18.1.2 Pull arm backplate mounting

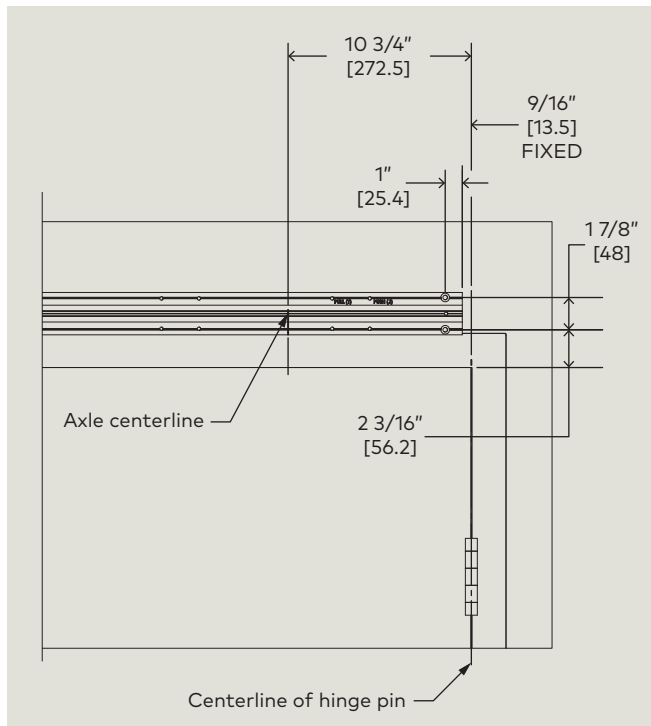

18.1.1 Install backplate, pull arm application.

1. Using backplate template (Fig. 18.1.1 and 18.1.2), locate left hand and right hand backplate mounting holes on door frame/wall.

NOTICE

Template documents a RH pull installation. Template must be mirrored for a LH pull installation.

2. Place backplate on door frame/wall and align with the mounting hole locations in step 1.
 - Check hinge pin centerline to edge of backplate distance.
3. Check backplate for level; adjust if necessary.
4. Mark backplate mounting hole locations.
5. Remove backplate and drill holes based on fastener selected for door frame/wall material.
 - Reference Para. 2.1 for backplate mounting screw kit.
 - Use appropriate wall anchors if required.
6. Place backplate on door frame/wall and secure with fasteners.

18.2 Install 8816 closer on backplate – pull arm mounting

Fig. 18.2.1 Companion screw kit HK4607-001

- 3 #4 x 1/4-20 x 5/8"
 Philips flat head
 screw
 DF0399-00G





Fig. 18.2.2 Companion closer adapter fasteners

- 4 1/4-20 x 1" Philips
 FHMS undercut
 DF3101-01Z

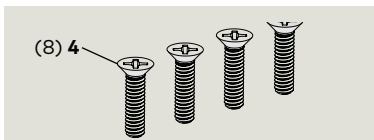

18.2.1 Install 8816 closer for pull arm application.

NOTICE

Verify closer spring size prior to installation.

NOTICE

PULL (T) mounting holes.

For pull arm application, use
 PULL (T) mounting holes (Fig..18.2.3)

Fig. 18.2.3 Closer adapter and closer assembly mounting to backplate – pull arm application

- 1 Backplate, ED
 operator
 companion
 DC3468-0502
 Companion closer
 adapter
 DC3468-070
- 3 #4 x 1/4-20 x 5/8"
 Philips flat head
 screw
 DF0399-00G
- 4 1/4-20 x 1" Philips
 FHMS undercut
 DF3101-01Z
- 5 Door closer, 8816
 08210970



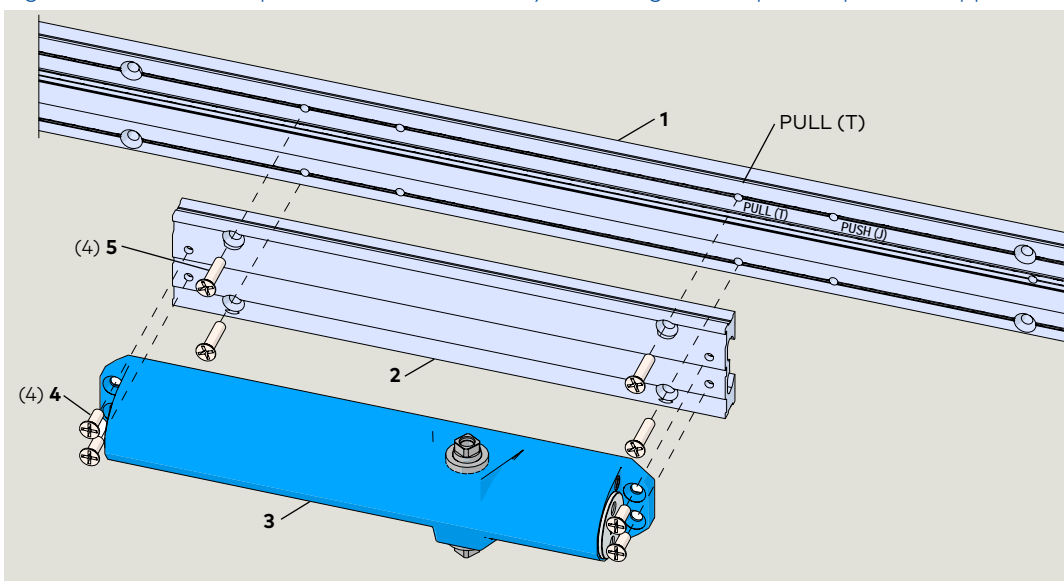


Fig. 18.2.4 Closer adapter and closer assembled to backplate

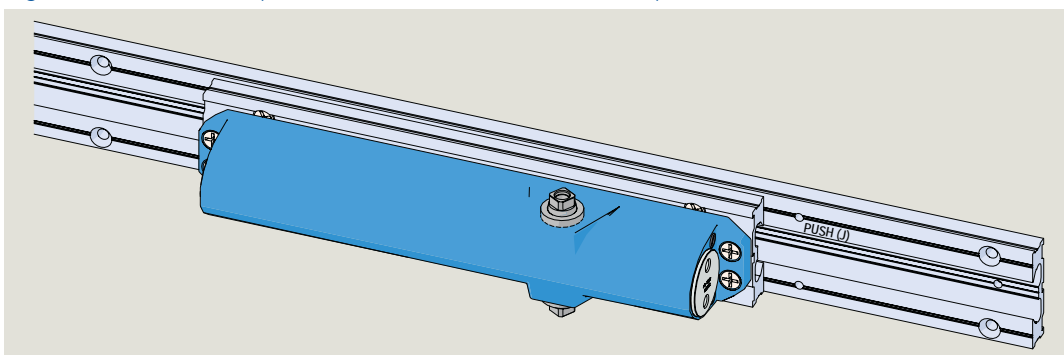

18.3 Pull arm installation

Fig. 18.3.1 Drive arm with CPD lever installation

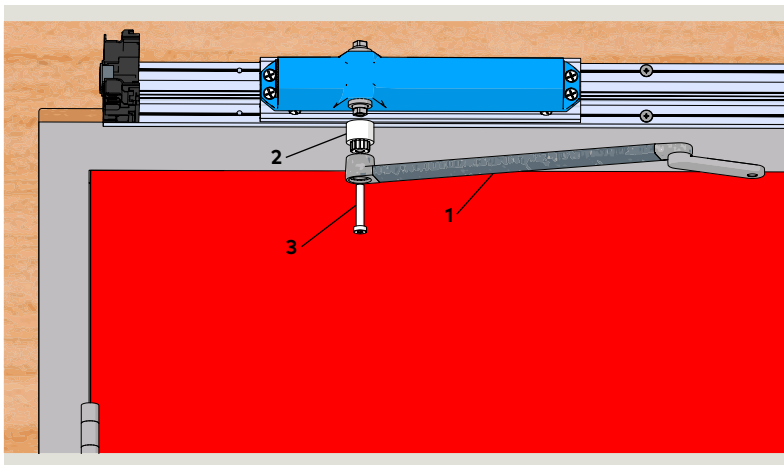

- | | | |
|--|---|--------------------------|
| 1 Drive arm with CPD lever assembly | 2 20 mm axle extension
HC4680-001 | 3 M8 x 40 mm SHCS |
|--|---|--------------------------|

18.3.1 Assemble track hardware.


1. Reference Chapter 10, Para. 10.4 and assemble hardware into track based on RH or LH pull arm installation.

18.3.2 Assemble CPD lever to drive arm.

1. Reference Chapter 10, Para. 10.6. Assemble CPD lever to drive arm based on RH or LH pull arm installation.

- 1** 20 mm axle extension, door closer, HC4680-001
- 2** 60 mm axle extension, door closer, HC4680-002

Fig. 18.3.2 Drive axle extensions

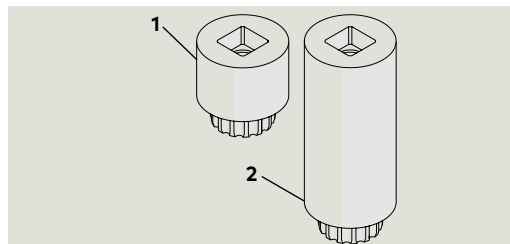

- 1** 20 mm bolt, axle extension HF3465-020
- 2** 60 mm bolt axle extension HF3465-040

Fig. 18.3.3 Bolt, axle extensions

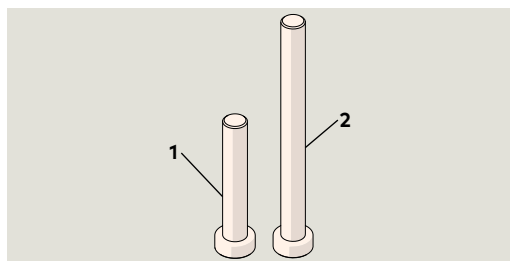


Fig. 18.3.4 Drive arm with CPD lever installed at 15 degree angle



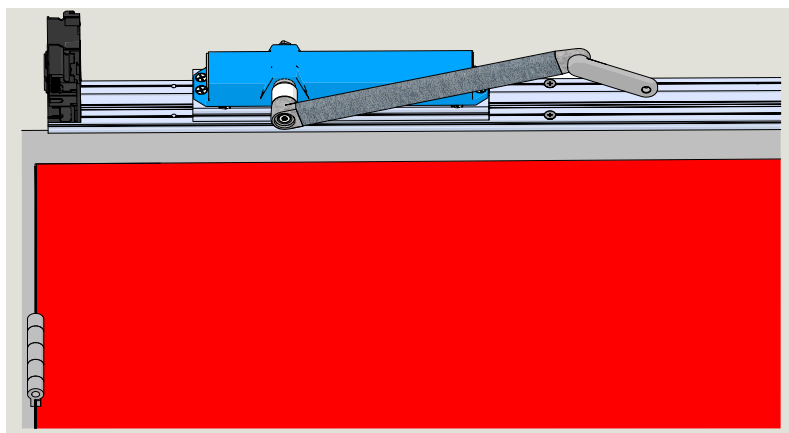


Fig. 18.3.5 Mounting holes for track

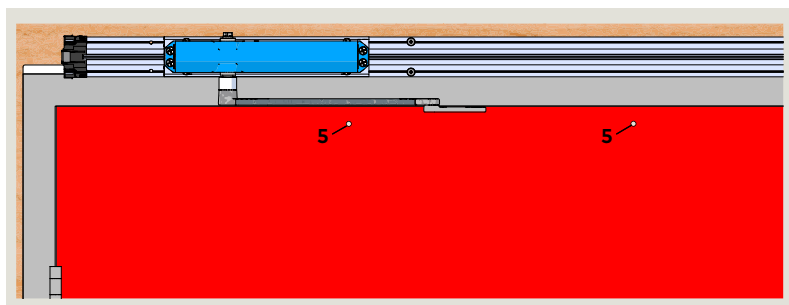

- 5 Track mounting holes
- 1 10-24 x 1 1/2" pan head Philips slotted barrel nut DF2718-01Z
- 2 10-24 x 1 1/4" flat head Philips screw DF2717-01Z

Fig. 18.3.6 Pull arm screw kit HK2719-020

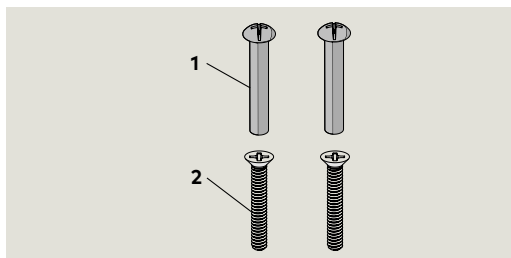

18.3.3 Install drive arm with axle extension.

1. Install the drive arm with axle extension (Fig. 18.3.2) onto the 8816 pinion at a minimum angle of 15 degrees.
2. Thread M8 x 40 mm SHCS (for 20 mm axle extension) into 8816 pinion and tighten SHCS.

NOTICE

M8 SHCS tightening torque.

Use torque wrench (25 ft-lbs) to tighten SHCS to 17 ft-lb [23 Nm].

18.3.4 Drill holes in door for track fasteners.

NOTICE

Pull arm installation template.

Reference Chapter 16 for installation template.


1. Use pull arm template to locate two track mounting holes on door.
 2. Drill two holes in door for track mounting.
- Reference Fig. 18.3.6 for pull arm screw kit.

NOTICE

Check hole locations for level.


Check mounting hole locations for level prior to drilling holes.

Fig. 18.3.7 Track assembly

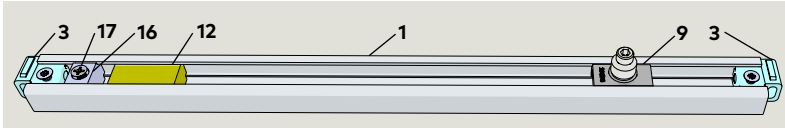

- | | | |
|----------------|--------------|-----------------------------------|
| 1 Track | 9 Slide shoe | 16 Bumper stop |
| 3 Fixing piece | 12 Bumper | 17 M5 x 13 FHMS
cross recessed |

Fig. 18.3.8 Pivot pin/slide shoe attachment to CPD lever

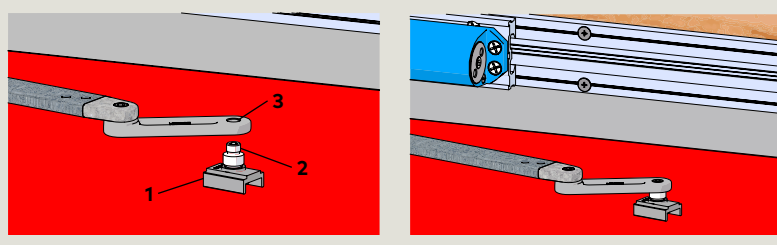

- | | |
|------------------------------|---------------------|
| 1 Slide shoe | 3 Pivot pin M8 SHCS |
| 2 CPD lever
mounting hole | |

Fig. 18.3.9 Track mounted to slide shoe/pivot pin assembly



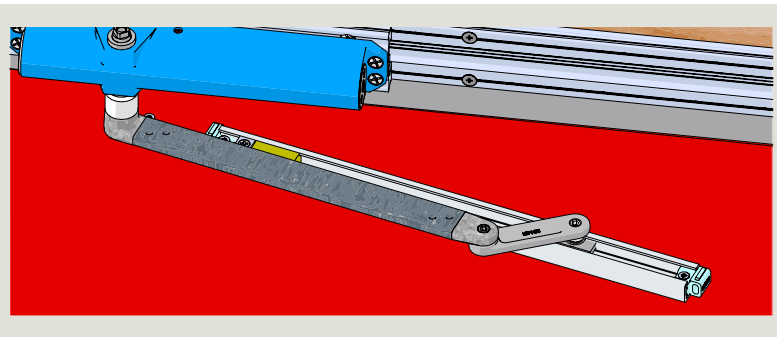


Fig. 18.3.10 Track assembly mounted to door

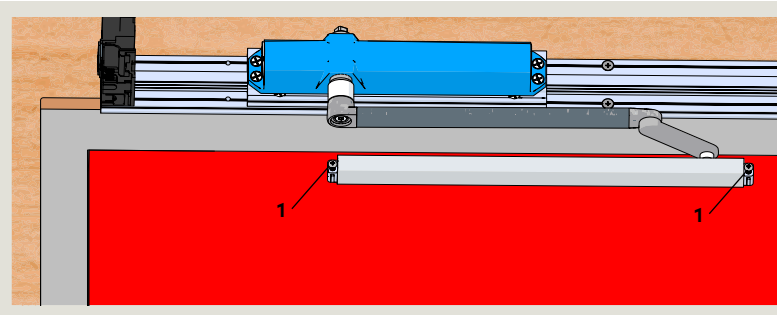

- | |
|----------------------|
| 1 Pull arm fasteners |
|----------------------|

Fig. 18.3.11 Track end caps installed

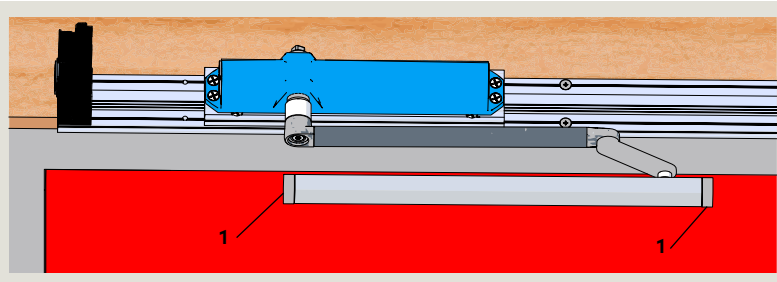

- | |
|------------------|
| 1 Track end caps |
|------------------|

18.3.5 Attach track pivot pin to CPD lever.

1. Remove fixing piece from one end of track.
2. Remove slide shoe/pivot pin assembly.
3. Position slide shoe/pivot pin under CPD lever mounting hole.
4. Thread pivot pin M8 SHCS into CPD lever mounting hole.
5. Use 6 mm hex key to tighten.

NOTICE

M8 SHCS tightening torque.

Use torque wrench (25 ft-lbs) to tighten SHCS to 5.9 - 7.4 ft-lb [8 - 10 Nm].

18.3.6 Install track onto slide shoe/pivot pin assembly.

1. Slide track onto slide shoe.
2. Reinstall fixing piece assembly.

18.3.7 Attach track assembly to door.

1. Rotate track assembly to door (Fig. 18.3.10).
2. Fasten track to door using fasteners selected in Para. 18.3.4.

NOTICE

Check track for level.

Check track for level as fasteners are tightened.

18.3.8 Attach end caps.

1. Attach end caps to track.

18.3.9 Door closer adjustments.

Reference Chapter 19.

19 8816 closer adjustments

19.1 8816 door closer adjustments

19.1.1 8816 closer adjustments.

CAUTION

Confirm closer spring size prior to making any closer speed adjustments.

CAUTION

Do not back valves out beyond closer casting.

CAUTION

Maximum door opening angle: 110°.


CAUTION

Door should close in 3 to 6 seconds from 90°.

NOTICE

Closer supplied with a size 2 spring setting.

Fig. 19.1.1 8816 closer adjustments

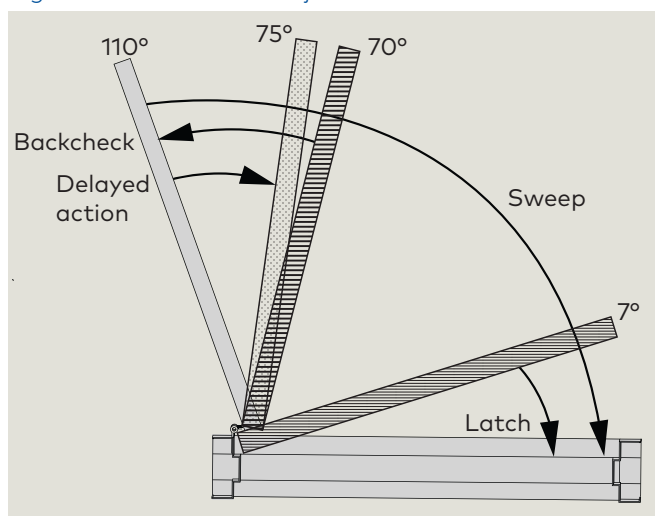

19.1.2 Sweep speed (1) adjustment.

Adjust sweep speed from 70° to 10°.

- Increase speed: Turn sweep valve CCW.
- Decrease speed: Turn sweep valve CW.

19.1.3 Latch speed (2) adjustment.

1. Adjust latch speed from 10° to 0°

- Increase speed: Turn sweep valve CCW.
- Decrease speed: Turn sweep valve CW.

19.1.4 Backcheck (3) adjustment.

1. Adjust backcheck for door area from 110° to 70°.

- Increase resistance: Turn valve CW.
- Decrease resistance: Turn valve CCW.


19.1.5 Backcheck positioning (5) adjustment.

Adjusting backcheck positioning will advance approximately 15° in the "ON" position. Shipped from factory fully "ON".

Backcheck positioning MUST be turned ON for arm and track applications.


- Turn OFF: Turn valve CCW.
- Turn ON: Rotate valve CW.

Fig. 19.1.2 8816 spring force adjustment

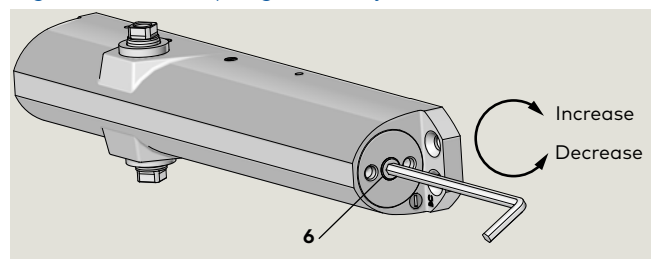

6 Spring force adjustment

Fig. 19.1.3 8816 closer adjustments

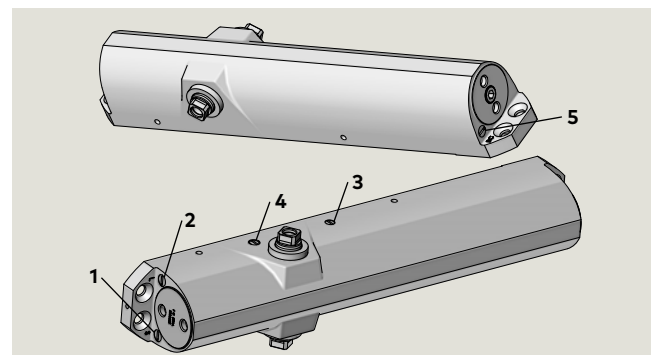

- | | | |
|---------|-------------|------------------|
| 1 Sweep | 3 Backcheck | 4 Delayed action |
| 2 Latch | positioning | 5 Backcheck |

19.1.6 Delayed action (4) adjustment.

1. Adjust delayed action for door area from 110° to 75°.

- Increase delayed action: Turn valve CCW.
- Decrease delayed action: Turn valve CW.

Appendix A - Fine cover professional cover kits

A.1 Professional cover kit HK3401-05X installation instructions – single door

A.1.1 Fine cover kit professional single, HK3401-05X.

Fig.A1.1 Fine cover kit professional single HK3401-05X

- 1 Fine cover single
HC3459-01X
- 3 End cap set
HC3466-01X
- 4 Backplate,
ED oper FC Ext,
HC3468-010
- 6 Cover bracket
HC3481-010
- 7 Mtg, extr
connector
HC3491-010
- 9 dormakaba logo
plate HD4613-010
- 10 M6 x 10 mm SHS
with washer
DF3495-01Z
- 11 M6 x 10 mm PFHS,
HF3496-01Z
- 13 Logo placement
template
HP4613-001
- 14 Mode switches
with cable
HX3482-010
- 15 Wire retainer
HX3493-010


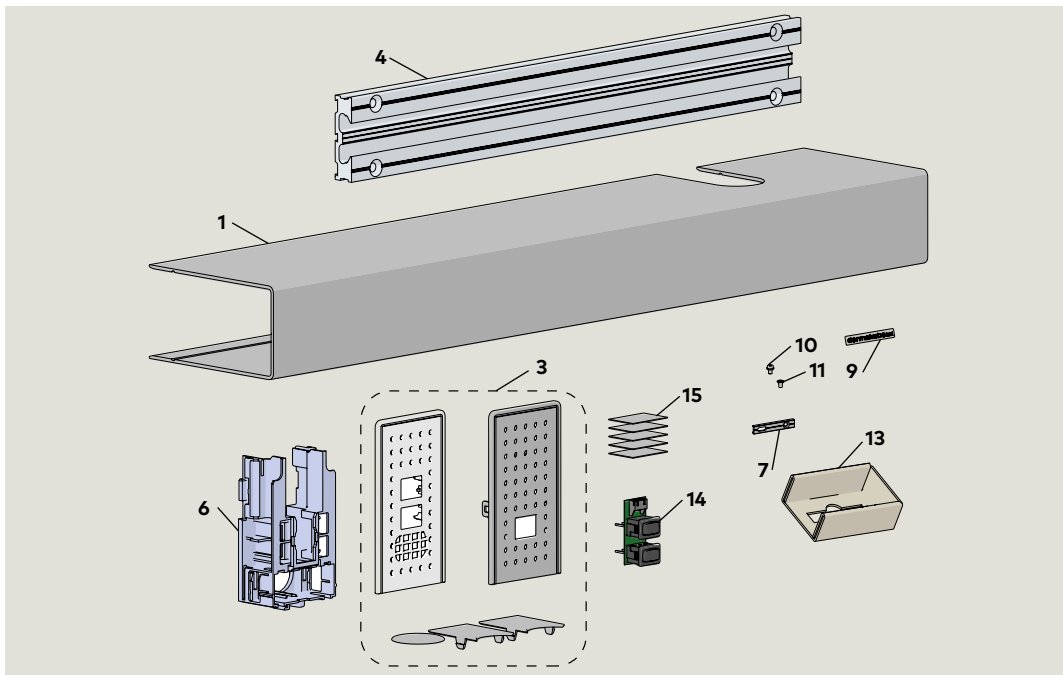


Fig. A.1.2 ED100LE mounting plate

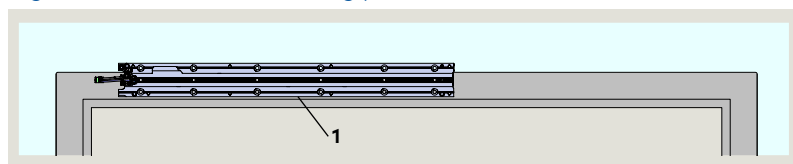

- 1 Mounting plate
- 2 Mounting plate
extension
HC3614-010

Fig. A.1.3 Mounting plate extension





Fig. A.1.4 Mounting plate extension installation

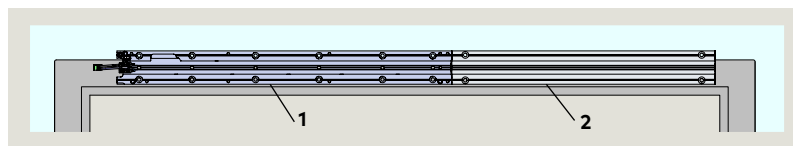

- 1 Mounting plate
- 2 Mounting plate
extension

A.1.1 Install ED100LE mounting plate.

Mounting plate installation:

- Reference Chapter 8, Para. 8.4 Mounting plate attachment to jamb or wall.

A.1.2 Secure mounting plate extension to door frame and/or wall.

1. Align mounting plate extension with mounting plate.
2. Mark mounting plate extension hole locations in frame and/or wall. Drill four holes for selected fasteners.

CAUTION

Use fasteners provided with ED100LE. Ref. Chapter 2.

3. Secure mounting plate extension to door frame or wall.

A.1.3 Mounting plate installation checks.

CAUTION

- Check level.
- Check spindle to hinge centerline distance.
- Check alignment.

A.1.4 Install cover bracket.

1. Insert cover bracket collar into mounting plate groove at an angle (Fig. A1.5)

2. Rotate cover bracket parallel to mounting plate extension.
3. Position bracket at end of extension.

- 2 Mounting plate extension
- 3 Professional cover bracket HC3481-010
- 3.1 Bracket collar

Fig. A.1.5 Professional cover bracket

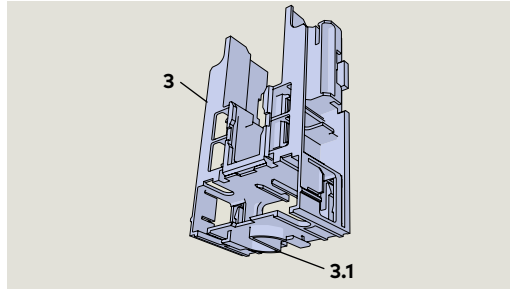


Fig. A.1.8 Cover bracket installed


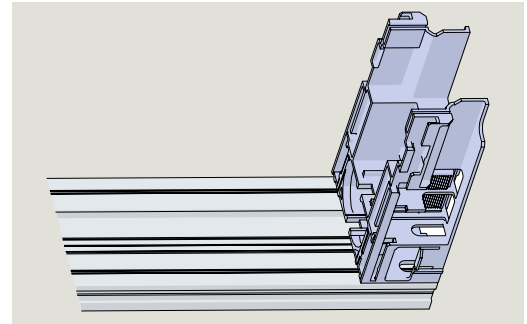


Fig. A.1.6 Install cover bracket


- 2 Mounting plate extension
- 3 Professional cover bracket HC3481-010

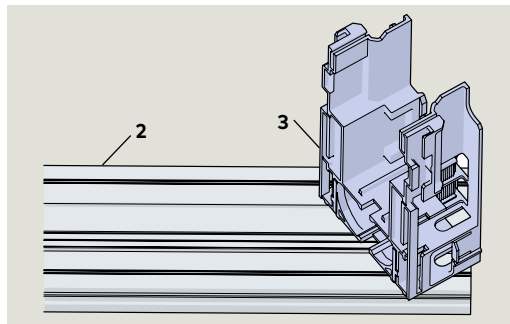

A1.5 Install Mode switch PCB into cover bracket.


1. Install Mode switch PCB into cover bracket.

Fig. A.1.7 Mode switch PCB assembly

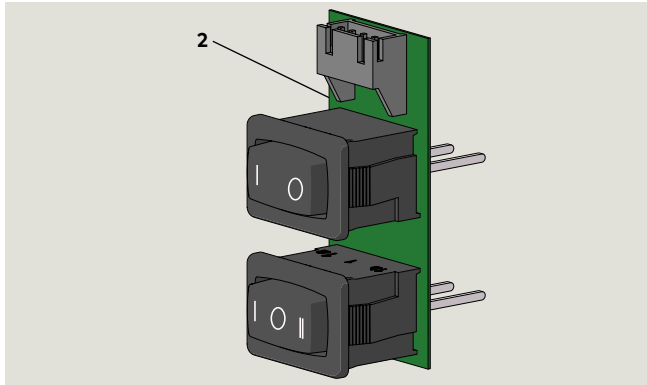

- 2 Mode switch PCB HX3482-010

Fig. A.1.9 Cover bracket with Mode switch assembly

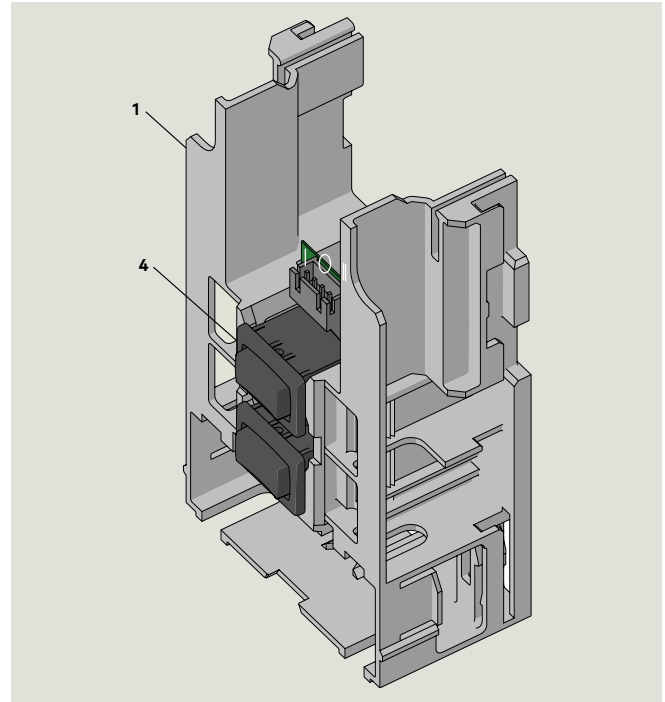

- 2 Mode switch PCB HX3482-010
- 4 Full cover bracket HC3481-010

A.1.6 Install Mode switch cable.

1. Insert Mode switch plug (part of HX3482-010 assembly) into connector..
 2. Route Mode switch cable to ED900 Mode switch terminals on terminal interface board.
- Secure cable to mounting plate channels using wire retainers.
3. Terminate cable wires at terminal strip X1 as shown in Fig. A1.10

Fig. A1.10 Mode switch wiring


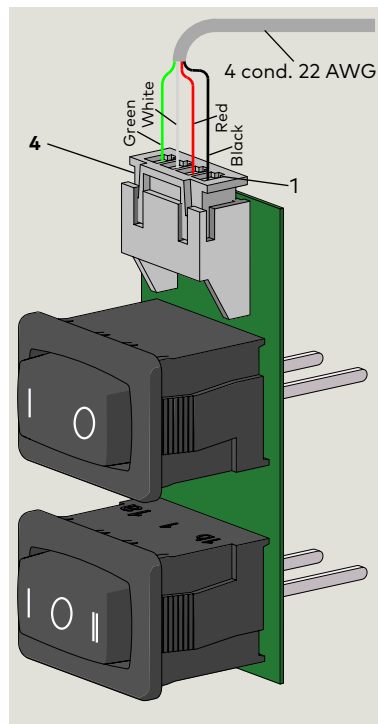


Fig. A1.11 Mode switch wiring at ED100LE terminal board

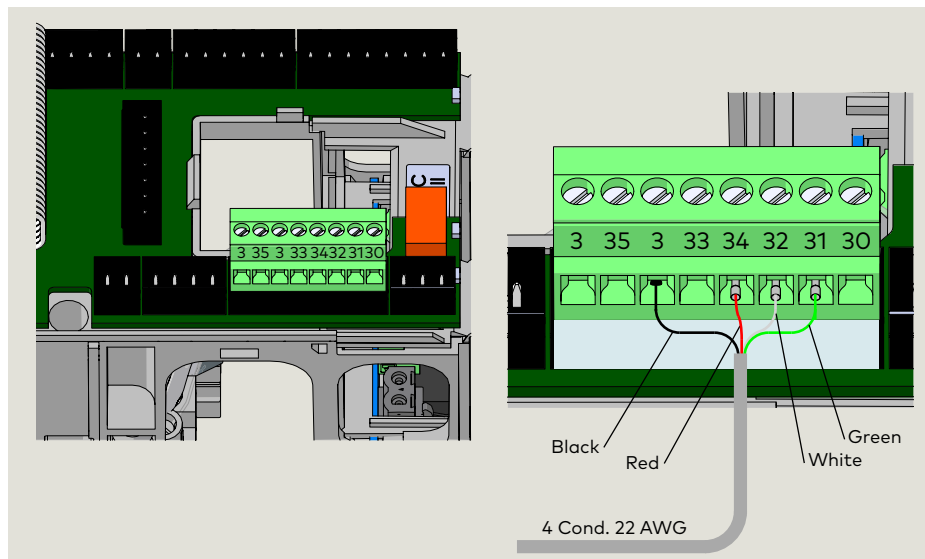

4. 4 pin plug and 4 conductor cable assembly (part of HX3482-010)

A.1.7 Install Service Call label.

1. Install Service Call label at convenient location. Service call label included in Low Energy label kit HK3137-010.

Fig. A.1.12 Label, service call




- 1 Label, Service call, DD3425-010

A.2.1 Professional cover kit HK3401-07X installation instructions – pair


Fig. A.2.1 Fine cover kit, professional pair HK3401-07X

- 2 Fine cover, pair, HC3459-03X
- 3 End cap set, HC3466-01X
- 4 Spindle cap set, HC3466-02X
- 5 Backplate, ED operator FC Ext HC3468-010
- 7 Mounting extr connector HC3491-010
- 9 dormakaba logoplate HD4613-020
- 10 M6 x 10 mm SHS with washer HF3495-01Z
- 11 M6 x 10 mm PFHS, HF3496-01Z

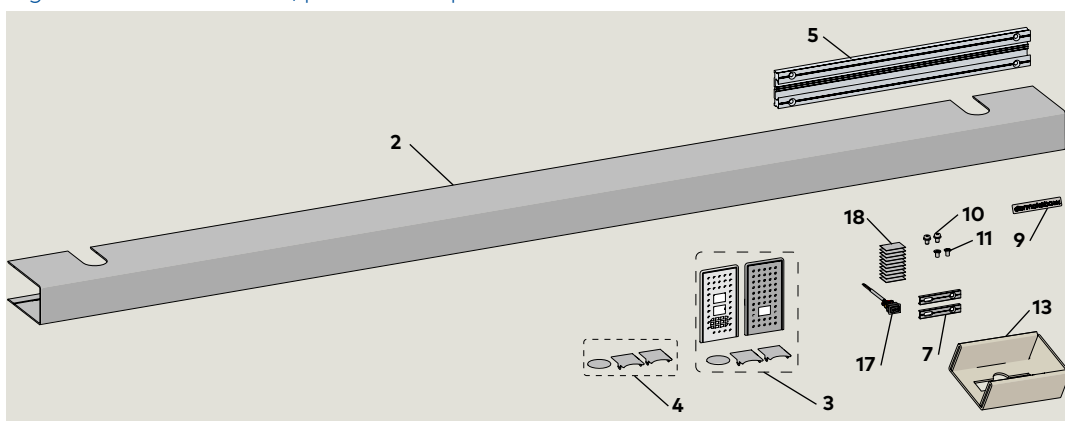


- 13 Logo placement template HP4613-001
- 17 Program switch, 3340 mm cable, HX3486-030
- 18 Wire retainer HX3493-010

Fig. A.2.2 Mounting plates positioned for assembly

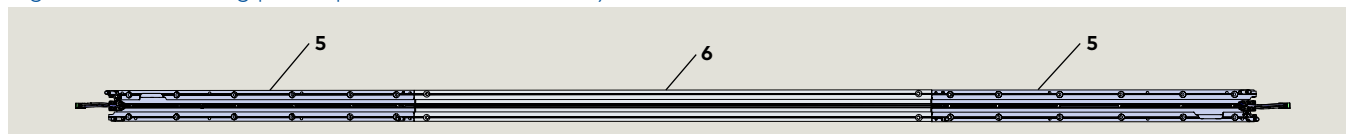

- 5 Mounting plate, ED100LE operator
- 6 Mounting plate, FC extension HC3468-010

Fig. A.2.3 Pair mounting plate hole for M6 fastener

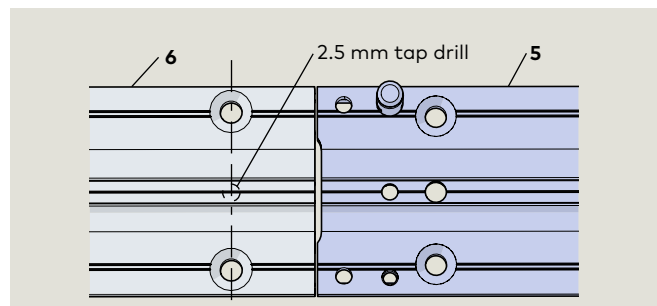

- 5 Mounting plate, ED100LE operator
- 6 Mounting plate, FC extension HC3468-010

A.2.1 Drill two holes in pair mounting plate for M6 fastener.

1. Drill hole in each end of pair mounting plate for M6 x 10 mm PFHS (Fig. A.2.3).


A.2.2 Assemble mounting plates.

1. Assemble the three mounting plates on a flat surface (Fig. A.2.2).

CAUTION

Verify mounting plate assembly dimensions with installation template (Para. 7.3).

Fig. A.2.4 Mounting plate connectors and fasteners

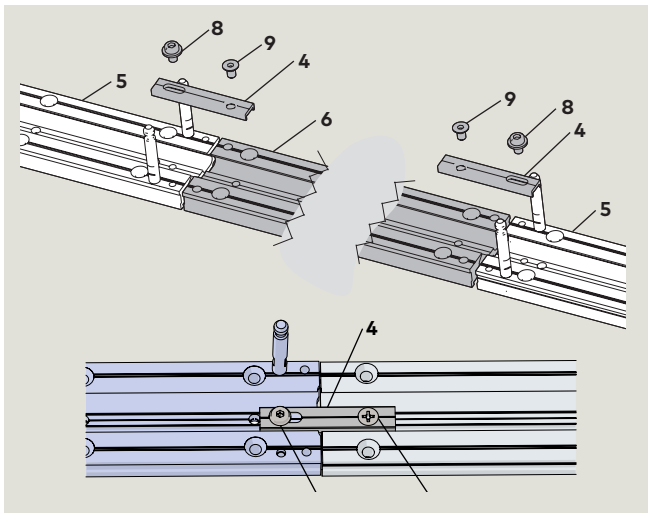

- | | | | |
|---|--|---|--|
| 4 | Mounting plate
extr connector
HC3491-010 | 6 | Backplate, ED
operator FC Ext
HC3468-010 |
| 5 | ED100LE operator
mounting plate | 8 | M6 x 10 mm SHS
with washer
DF3495-01Z |
| | | 9 | M6 x 10 mm PFHS
DF3496-01Z |

- Secure the operator mounting plates to the pair mounting plate (6) using:
 - (2) mounting plate connectors (4)
 - (2) M6 x 10 mm SHS with washer (8)
 - (2) M6 x 10 mm PFHS (9)
 Do not tighten screws.

A.2.3 Check cover fit over ED operators.

- Place the ED operators onto their mounting plates (Para.)
- Place end caps (2) at end of each operator.
- Place cover over end caps and ED100LE operator.
- Adjust mounting plates as necessary for cover fit over end caps.
- Remove end caps and operators.
- Tighten mounting plate connector fasteners.

A.2.4 Mounting plate installation.

- Reference Para. 8.4.


A.2.5 Install program switch.

- Once header is installed, single program switch must be installed in fine cover end cap opposite the power switch.
- Program switch wires to the active door operator (Fig. A.2.6).

A.2.6 Install Service Call label.


- Install Service Call label (Fig. A.2.7) at convenient location.
 - Service call label included in Low Energy label kit [HK3137-030](#).

Fig. A.2.5 Program switch and cable

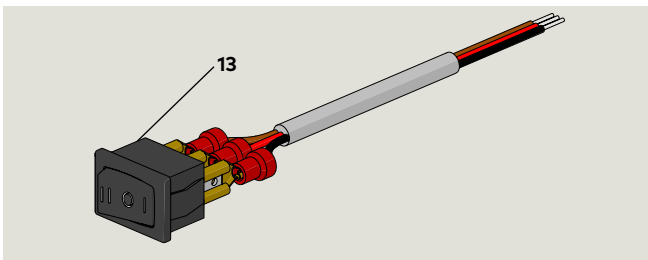


- 13 Program switch
HX3486-030

Fig. A.2.6 ED100LE program switch wiring

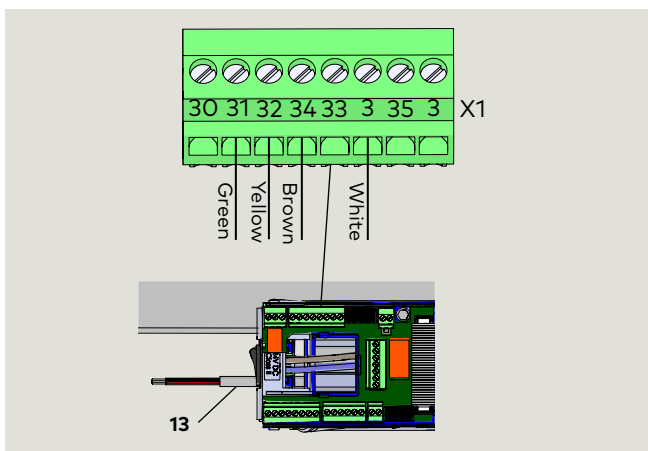

- 13 Program switch
HX3486-030

Fig. A.2.7 Label, service call

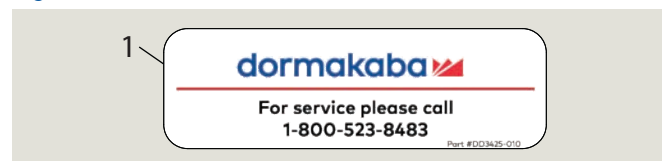

- 1 Label, Service call,
DD3425-010


Appendix B - Key switch wiring diagrams

B1.1 HX4604-21C Key Switch Panel with RJ45 connector

Fig. B1.1.1 Key switch panel HX4604-21C



Fig. B1.1.2 Key switch panel wiring diagram

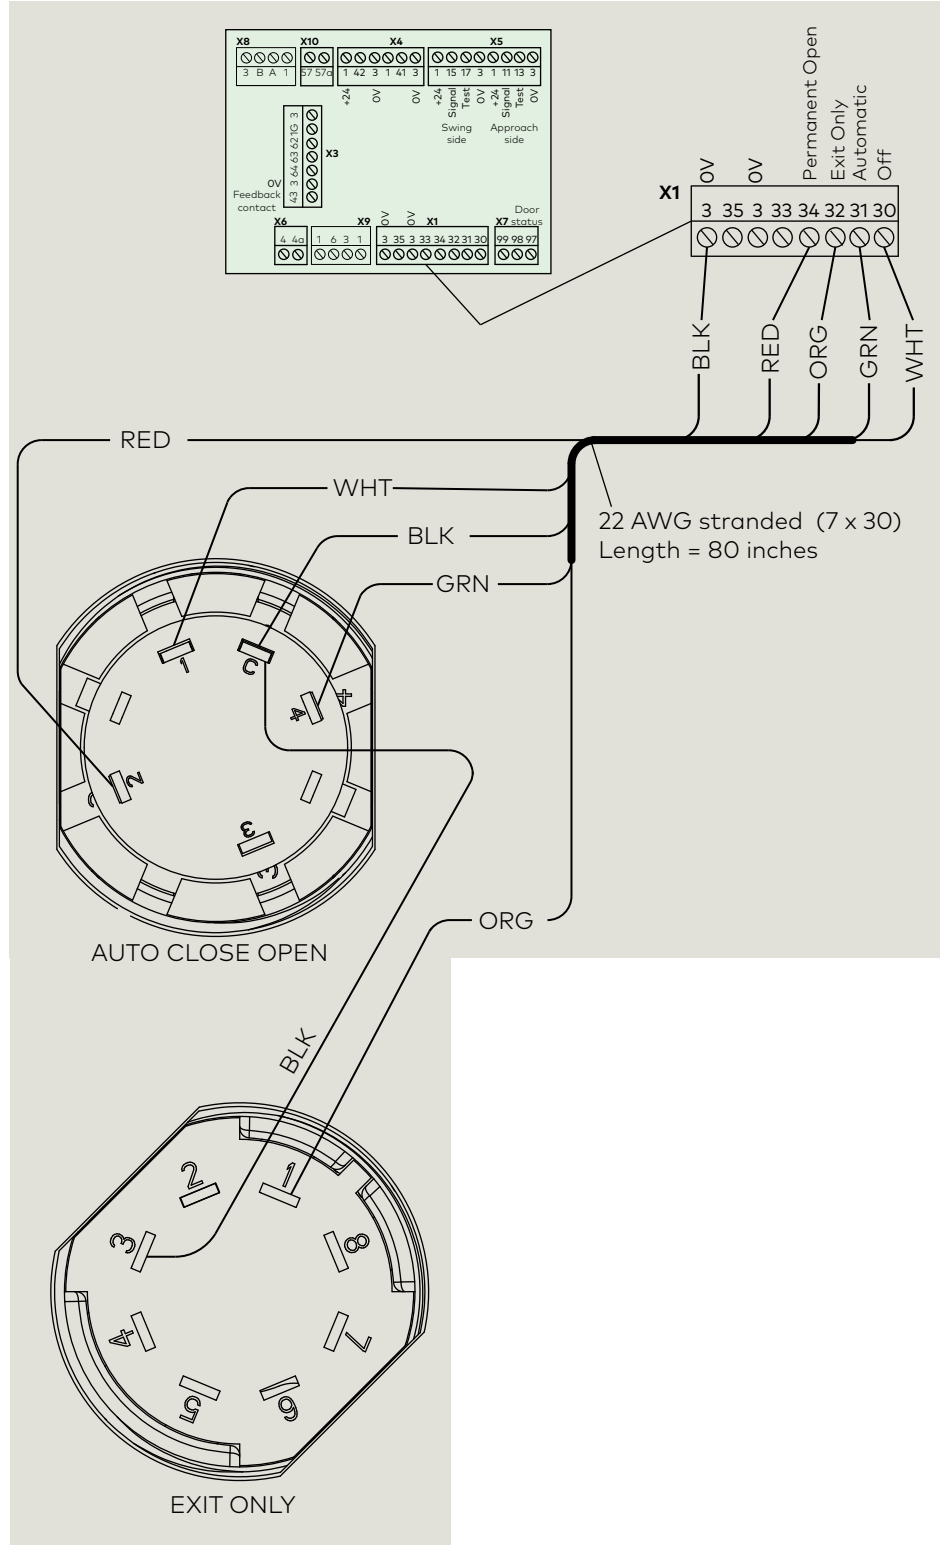

B2.1 HX4604-11C Key Switch Panel

Fig. B2.1.1 Key switch panel
 HX4604-11C


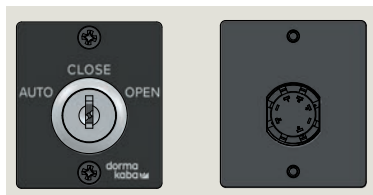


Fig. B2.1.2 Key switch panel wiring diagram

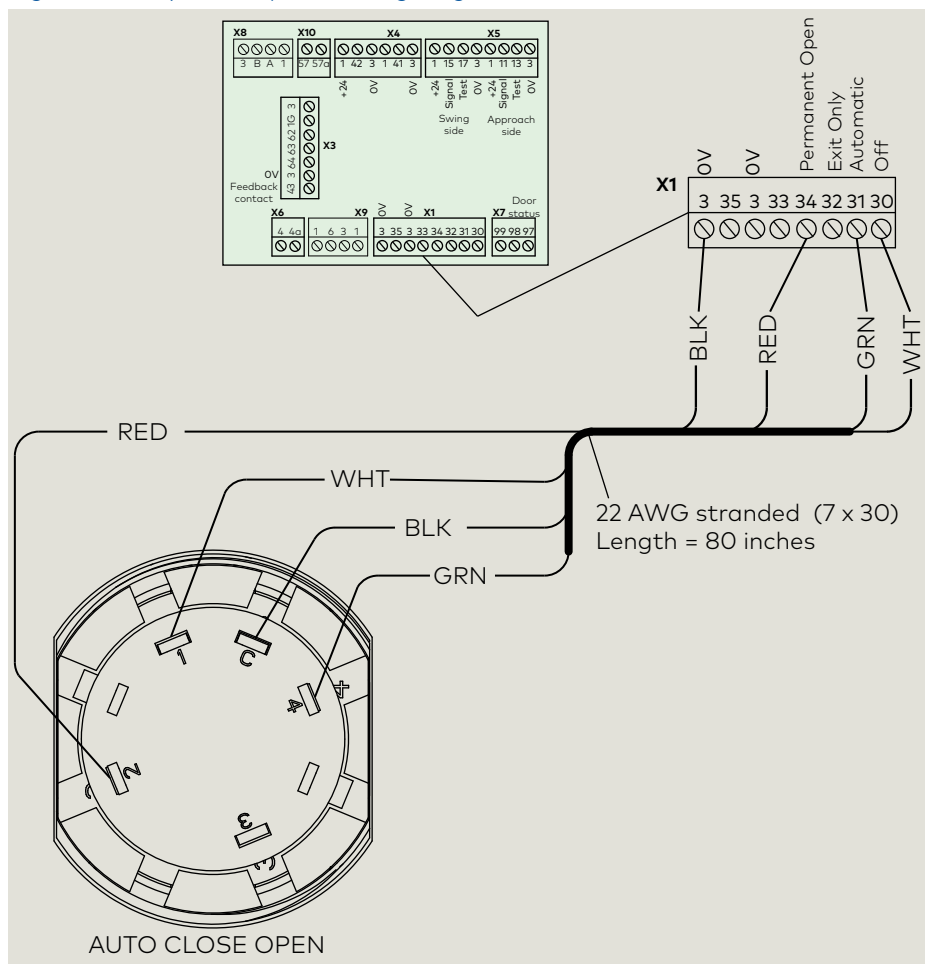

Appendix C - Knowing act switch wiring diagrams

C1.1 Knowing act switches

Fig. C1.1.1 ACTIVATE SWITCH TO OPERATE decal



- 1 Activate Switch to Operate DD0758-010

C1.2 Knowing act switch wiring diagram

Fig. C1.2.1 ED operator terminal board activation inputs


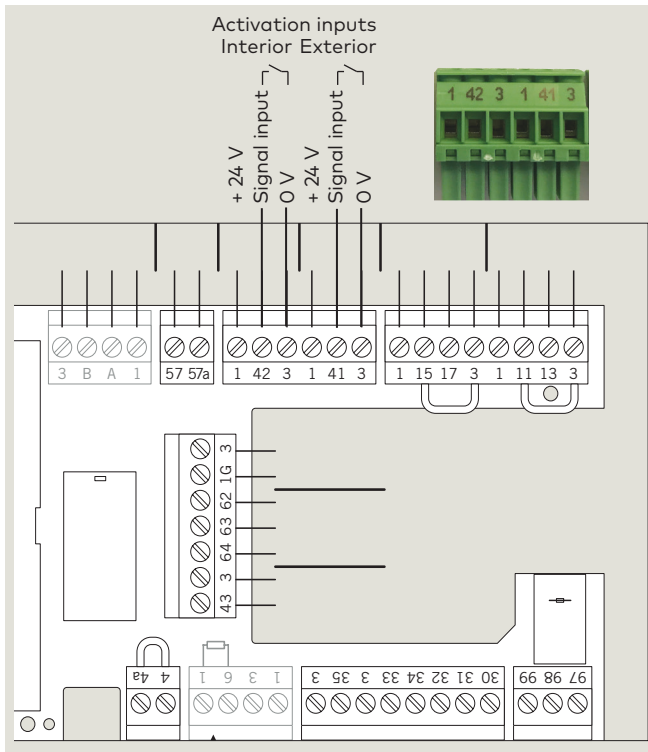


Fig. C1.2.2 Knowing act device wiring

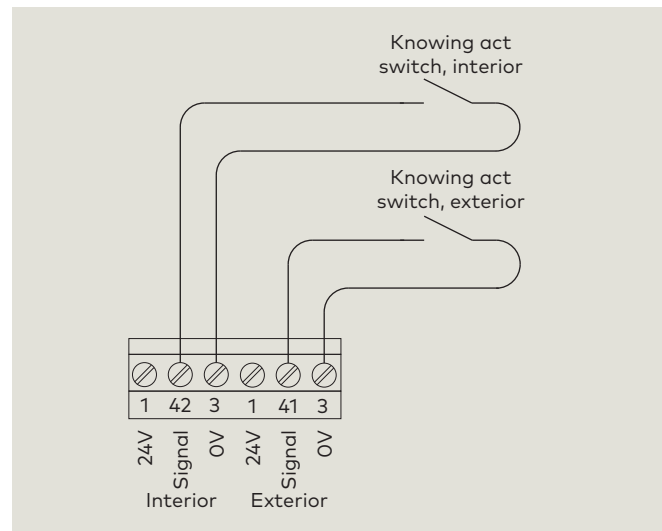

24 V is available for illuminated knowing act devices.

NOTICE

Knowing act devices; i.e. card readers.
 Refer to device wiring diagram.

This page left intentionally blank.

www.dormakaba.us

dormakaba USA, Inc.
1 Dorma Drive, Drawer AC
Reamstown, PA 17567
USA
T: 717-336-3881
F: 717-336-2106